



**GLOBAL LEADER IN
BROADCAST QUALITY
LIVE VIDEO OVER IP**

Zixi Broadcaster User Guide

Software Version 14
Document Version - DOC16-83-0015
Copyright © Zixi 2020
All Rights Reserved

Legal Notice

This document contains proprietary and confidential material of Zixi LLC. Any unauthorized reproduction, use, or disclosure of this material, or any part thereof, is strictly prohibited. This document is solely for the use of Zixi employees and authorized Zixi customers.

The material furnished in this document is believed to be accurate and reliable. However, no responsibility is assumed by Zixi LLC. for the use of this document or any material included herein. Zixi LLC. reserves the right to make changes to this document or any material included herein at any time and without notice.

For more information visit: www.zixi.com.

Copyright © Zixi 2020 Waltham, MA U.S.A.

All Rights Reserved.

** See back for additional licensing information*

Table of Contents

Legal Notice.....	2
Introduction to Zixi Broadcaster	9
Zixi Technology.....	11
Zixi Platform Architecture	11
Supported Protocols	13
Transcoding Options	14
Recording Options	14
Multicast Options.....	14
Adaptive Options	14
VOD Options	14
Latency Considerations.....	14
Logging in to the Broadcaster	16
Activating Your License	17
Online Activation (License Key)	17
Offline Activation (License File)	17
Reloading the License	18
Upgrading the Product Version (Linux)	18
Viewing Status.....	20
General Status.....	20
Network Status	21
Viewing Current License Information	21
Metered License Monitoring	21
License Status Screen.....	23
Machine Information	24
Operating System Information	25
Network Cards (Linux only).....	25
Testing the Network	27
Broadcaster Inputs.....	28
Adding Input Streams	28

Adding Push Streams	28
Adding Pull Streams	33
Adding UDP Streams	39
Adding Delayed Streams.....	44
Adding File Streams	46
Adding RTMP Streams	48
Adding RTSP Streams	53
Adding HLS Streams	57
Adding TS over HTTP (Pull) Streams	61
Adding TS over HTTP (Push) Streams.....	64
Adding RIST Streams	69
Viewing Existing Input Streams.....	75
Viewing Stream Statistics.....	76
Searching for Input Streams	79
Broadcaster Actions on Input Streams	79
Stopping/Starting the Input Stream	79
Editing Input Settings or Duplicating Input Streams.....	79
Deleting Input Streams from Broadcaster	80
Recording the Input Stream.....	80
Adding Analysis to the Input Stream	82
Transcoding an Input Stream.....	83
Add Output	88
Playing Input Streams with Players.....	90
Viewing Traceroutes	91
Broadcaster Actions on Multiple Inputs	91
Starting and Stopping Multiple Input Streams	91
Deleting Multiple Input Streams.....	92
Saving Multiple Input Streams.....	92
Resetting Stats for Multiple Input Streams	92
Creating a Failover Group	93
Encrypting an Input Stream in Zixi Broadcaster	95
Decrypting an Input Stream in Zixi Broadcaster	96

- Demuxing an MPTS Stream 97
- Broadcaster Outputs 100
 - Adding Outputs 101
 - Adding UDP Outputs 101
 - Adding RTMP and RTMPS Outputs 105
 - Adding Pull Outputs 107
 - Adding Push Outputs 109
 - Adding TCP Outputs 112
 - Adding HTTP Push Outputs 114
 - Adding AWS Outputs 117
 - Adding RIST Outputs 119
 - Viewing Existing Outputs 123
 - Stats Pane 124
 - Searching for Output Streams 126
 - Performing Actions on Output Streams 126
 - Deleting Output Streams from Broadcaster 126
 - Switching Input 126
 - Viewing Traceroutes 126
 - Performing Actions on Multiple Outputs 128
 - Delete Marked Individual and Multiple Outgoing Stream 128
 - Start and Stop Marked Individual and Multiple Outgoing Streams 128
 - Save Marked Individual and Multiple Outgoing Streams 128
 - Reset Stats for Individual and Multiple Outgoing Streams 129
 - Viewing Traceroutes 129
- Using Output Templates 129
- Broadcaster Network Bonding 133
 - Using Network Bonding for Hitless Failover 133
 - Broadcaster Output with Network Bonding 134
- Adaptive Groups 135
 - Creating New Adaptive Groups 135
 - Adding Streams to Existing Adaptive Groups 139
 - Adaptive Groups Templates 140

Legal Notice

Zixi Technology

Performing Actions on Adaptive Groups	143
Stopping/Starting an Adaptive Group	143
Editing an Existing Adaptive Group.....	144
Deleting and Adaptive Group	144
Play Dash.....	144
Play fMP4	145
Play HLS.....	146
Set Preroll.....	147
VOD (Video on Demand).....	149
VOD Activation.....	149
VOD Files Location	149
Changing the Files folder location	151
Adding Files to VOD	151
Playing back VOD content.....	152
Indexing VOD content.....	153
Accelerated File Transfer	154
File Transfer Configuration	154
File Transfer Settings.....	154
Uploading Files for File Transfer	155
Downloading Files.....	156
Generating Accelerated URLs	157
Creating a New Folder	158
Renaming a File/Folder.....	159
Deleting an Existing File/Folder	159
Transcoder	161
Creating New Profiles	161
Transcoding an Input Stream.....	167
Transcoding Templates.....	171
Server Settings	175
General.....	175
Network	179
Time	181

Legal Notice

Zixi Technology

Live Protocols	182
Multicast Pool	185
File Transfer & VOD.....	186
Cluster	188
Zen Master	191
SSH Connections	193
Authorization	195
Logging	197
ASI	198
Reversing the directions of the ports	199
Threads.....	200
SNMP (Linux Only)	201
Viewing Events Log	203
Using the Matrix.....	204
Connecting Input to Output.....	204
Disconnecting Output from Input.....	205
Matrix Interface Elements	205
Changing Matrix View	206
Searching for Specific Streams.....	206
Preview Thumbnail Elements	206
Viewing Stream Details	207
Configuring SNMP	209
Activating SNMP	209
Configuring SNMP Settings	209
Viewing MIB Information.....	211
Configuring Hitless Failover	212
Configuring HTTPS.....	213
Obtaining a CA-signed Certificate	213
Creating a Self-signed Certificate.....	213
Uploading the Certificate and Private Key.....	213
Configuring NDI Streams.....	215
NDI Stream Discovery	215

Legal Notice

Zixi Technology

Configuring Transcoding Profiles for NDI Sources	216
Adding an NDI Input to Zixi Broadcaster	217
Creating an NDI Output	222

Introduction to Zixi Broadcaster

The Zixi Broadcaster is the central component in the Zixi Video Network. Zixi Broadcaster takes video streams from Zixi Feeder, and can process the stream, enabling transcoding, transmuxing, recording, and distribution in multiple bit rates and protocols to any device anywhere. The Zixi Broadcaster is an intelligent and versatile video distribution component that may reside on premise at a customer's site, on the customer's cloud, or offered by Zixi as a cloud service.

Zixi Broadcaster offers the following features:

- **Robust content delivery over IP** - communicates with Zixi Feeder and Zixi Receiver over UDP-based, video-optimized protocols on private and public IP networks for maximal quality at a predictable latency
- **Adaptive Bit Rate** - Dynamically adjusts stream rate to adapt to changing network conditions, using unicast or multicast, to meet specific application requirements
- **Transcoding** - transcodes to a variety of different profiles and bit rates
- **Format conversion** – supports Internet protocols: HLS/MPEG-DASH/RTMP/FLV/MPEG-TS over HTTP
- **Recording** - store streams as MPEG-TS files.
- **Time-shifting** – records the stream to delay its broadcasting
- **Secure and rapid file transfer** – accelerated and secure file transfers delivered at wire speed and accelerated HTTP delivery including optimized playback of HLS over UDP.
- **VOD** - stored files can be accessed on demand in multiple formats.
- **Clustering and load balancing** – supports cluster architectures to provide continuous uptime.
- **Transport Stream Analyzer** – MPEG-TS ETSI TR 101-290 analyzer (priorities 1 and 2)
- **Content Analysis** - analysis of the stream's audio and video content, including audio levels, audio silence detection, frozen video detection, and more.
- **Monitoring** - captures network and content specific statistical information in real-time.
- **Supports many to many and any to any** - gateway platform between UDP (unicast/multicast), Zixi protected stream (unicast/multicast), RTMP, or other supported formats.
- **Network bonding with hit-less fail-over** – reunites divided streams coming from multiple network channels into a single stream, enabling simultaneous load balancing between multiple networks and ensuring high availability of the stream.
- **Hitless failover** - hitless failover for inputs enables uninterrupted streaming when switching from one source to another. Zixi's new hitless failover feature is based on the SMPTE 2022-7 standard, which specifies “seamless” or hitless failover between binary-identical streams with synchronized RTP headers.
- **IFB Support** - a monitoring and cueing system for one-way communication from the director or assistant director to on-air talent or a remote location. IFB support has been

implemented in Zixi Broadcaster Pull and UDP outputs, allowing the decoder with a Zixi Receiver to send audio back to the encoder with a Zixi Feeder.

- **AES stream encryption and decryption** - UDP, File and RTMP input streams can be encrypted by Zixi Broadcaster using a fixed key (AES 128, AES 192, AES 256), which can be entered into the input settings or automatically generated. Zixi Broadcaster can also decrypt contribution streams using a matching key, or securely forward encrypted streams to receivers, without being able to see or analyze the traffic.
- **MPTS demuxing** - MPTS streams can be demuxed into single SPTS input streams for specific programs.
- **SCTE-35** - SCTE-35 markers found in the source input will be used to segment the stream and the #EXT-X-CUE-IN/#EXT-X-CUE-OUT tags will be added to the manifest.
- **Low-latency HLS** - Zixi Broadcaster supports low latency HLS delivery using chunked transfer encoding, which starts sending an HTTP response as chunks of data when they are ready before the complete response is available. Chunked transfer encoding can be use with transport stream (TS) segments and with fragmented MP4 (fMP4), which is also called Common Media Application Format (CMAF). For low latency HLS and DASH, Zixi Broadcaster must be used as an origin server.

Zixi Technology

Zixi's transport stream protocol is a content and network-aware protocol that dynamically adjusts to varying network conditions and employs error correction techniques for error-free video streaming over IP. With minimum overhead to physical bandwidth, this dynamic mechanism provides low end-to-end latency, removes jitter, recovers and re-orders packets, smooths video delivery and regenerates video to its original form, all in real-time.

Zixi delivers outstanding performance (at low predictable latency), superior reliability (no packet loss) and broadcast-grade video quality (SD, HD, and UHD) with no tradeoffs to delay, resolution or stutter.

Streaming from one Zixi-enabled device/server to another Zixi-enabled device/server protects the stream from quality degradations along the path. It enables the streaming of high-quality video over any distance, while overcoming the varying network conditions of the public Internet, where the amount of network errors, packet loss, jitter and out-of-order packets fluctuate "every second".

The Zixi transport stream protocol can be also deployed on part of the path. For example, from a Zixi Feeder to a Zixi Broadcaster (Zixi protected path) and on to the end user through UDP or RTMP. In this case, the path that has challenging conditions (e.g. long distance or unstable wireless conditions) will be protected by Zixi and then delivered on to the end-user on a standard UDP or RTMP protocol.

Zixi's transport stream technology includes the following features for ultimate quality and security:

- Network sensing
- Dynamic de-jitter
- MPEG specific optimizations
- Z-ARQ error recovery
- Z-FEC - Dynamic content aware forward error correction
- Active multi-path error recovery
- Adaptive bitrate over UDP, unicast or multicast
- Rate control and congestion avoidance
- 256-bit AES transport encryption


Zixi Platform Architecture

The Zixi platform architecture shows how a live linear broadcast or event is ingested through a Zixi Feeder (ZF) or Zixi embedded device running Zixi Feeder at acquisition. Zixi Feeder encapsulates the stream in the Zixi transport protocol and delivers point to point or point to multi-point over standard IP connections to Zixi Broadcaster (ZB). Zixi Broadcaster can be deployed on premise or in the cloud with the ability to monitor streams anywhere along the path. For management, processing and larger scale distribution capabilities, Zixi can support complex production workflows for live events, including transcoding, recording, and more, all in

Introduction to Zixi Broadcaster

Zixi Platform Architecture

a clustered environment that supports reliability and scalability. The stream is distributed through a CDN, OTT, or endpoint device, running Zixi Receiver (ZR) to any device.

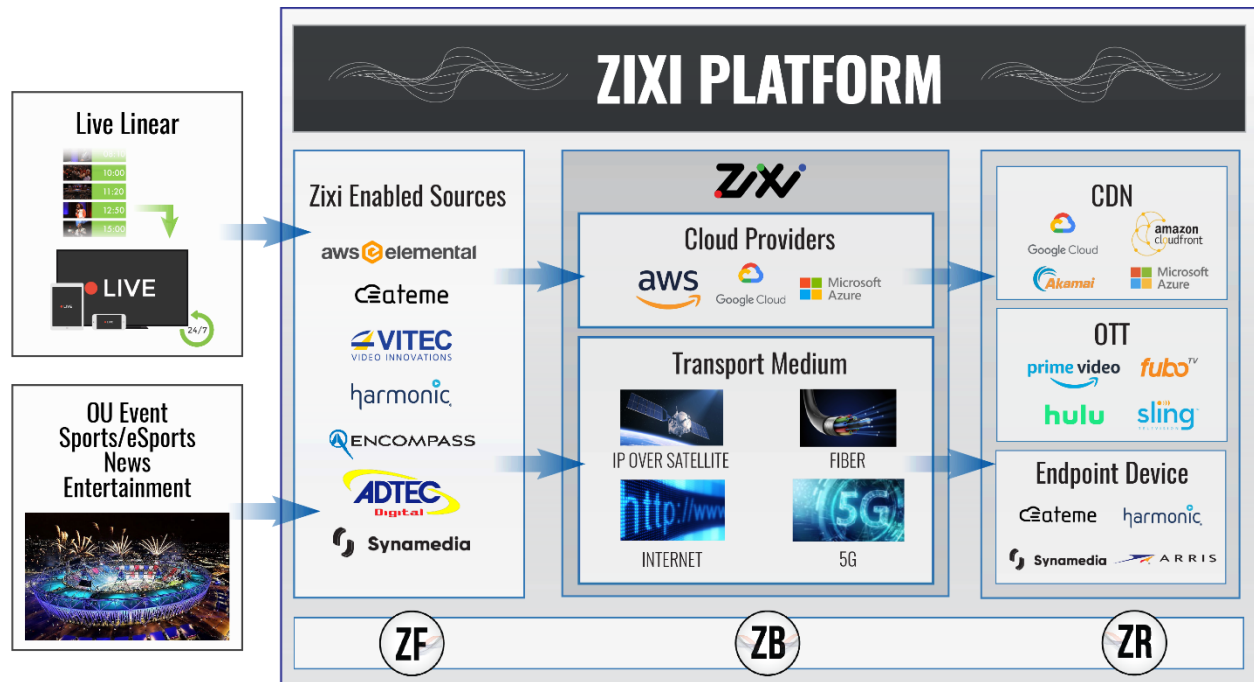

Supported Protocols

Input:

- Zixi protected transport
- MPEG-TS over UDP and/or RTP with SMPTE-2022 and/or
- RTMP pull from CDNs and/or other sources
- RTMP push
- RTMPS
- RTSP input
- RIST (TR-06-1)
- NDI
- Transport stream files from local file system

Output:

- Zixi protected transport
- MPEG-TS over UDP and/or RTP with SMPTE-2022 and/or RIST (TR-06-1)
- RTMP and RTMPS push to CDNs and/or other media servers;
- Apple HTTP Live Streaming (HLS)
- Adobe HTTP Dynamic Streaming (HDS)
- FLV over HTTP (HTTP pseudo-streaming)
- MPEG-DASH (DASH264 profile)
- SHOUTcast
- NDI
- Transport stream files to local file system
- Re-multiplex output streams to strict CBR for extensive compatibility with Integrated Receiver- Decoders (IRDs)

Transcoding Options

Zixi Broadcaster can transcode a single input stream using multiple profiles. The transcoder supports the following options:

- Video Decoding – MPEG2, H.264/AVC, H.265/HEVC
- Video Encoding – MPEG2, H.264/AVC, H.265/HEVC
- Audio Decoding – AAC, MPEG-1 Audio Layer I / II / III, MPEG-2 Audio Layer I / II / III, AC-3 (Dolby Digital)



For AC-3, which can contain up to six discrete channels of sound, the transcoder only supports the left and right channels and will ignore the other channels.

- Audio Encoding – AAC, AAC-HE (High Efficiency) and AAC-HEv2; Pass through (no encoding) – any audio codec (MPEG1/2 / AAC / AC-3, E-AC-3 (Dolby Digital Plus).

Recording Options

Live stream inputs can be stored as MPEG-TS files to a local disk drive or mounted drive.

Multicast Options

Multicast streams can be received or be sent by the Zixi Broadcaster. Zixi Broadcaster serves as a gateway between Unicast and Multicast streams, while allowing reliable streaming over multicast.

Adaptive Options

Zixi Broadcaster can create an adaptive group, subsequently editing, recording, or playing it in conjunction with DASH, HLS, HDS or Zixi. You can also set a Pre-roll video/screen that will be played before the live streaming begins.

VOD Options

Zixi Broadcaster supports VOD (Video on Demand) playback of stored files in multiple formats such as TS, MP4, HLS, FLV.

Latency Considerations

Latency defines the delay in which the video stream will be delivered to the endpoint. This delay is essentially a buffer that is used for additional processing, thereby improving the quality of video stream. The latency should be considered based on the importance of immediacy. For example, if the video requires interaction (e.g. between a reporter in the field and an anchor in

Latency Considerations

the studio), the latency should be set to a minimum so that the interaction does not suffer from any delay.

Latency can vary from tens of milliseconds to several seconds.

Zixi protocol can start providing benefit from one frame (30ms), while increasing the latency will provide more robustness for the error-recovery.

Logging in to the Broadcaster

➔ To log in to Zixi Broadcaster:

1. In your web browser, navigate to <http://localhost:4444>.
A user authentication window opens.
2. In the **User Name** field, enter '**admin**'.
3. In the **Password** field, enter '**1234**'.
4. Click **OK**.
The Broadcaster UI opens on the **Status** page.

Activating Your License


In order to start using Zixi Broadcaster, first activate your license. Zixi Broadcaster and its optional features are activated by license files. Before using Zixi Broadcaster, and when adding optional features, **activate** the appropriate license.

Online Activation (License Key)


The following procedure requires connectivity to the Internet. If you are not able to connect, you can activate the Broadcaster using the procedure described in [OFFLINE ACTIVATION \(LICENSE FILE\)](#).

To Activate the License online using a License Key:

1. In the **Status** page of the Zixi Broadcaster UI, click **Options** in the menu bar. The drop-down menu is displayed.

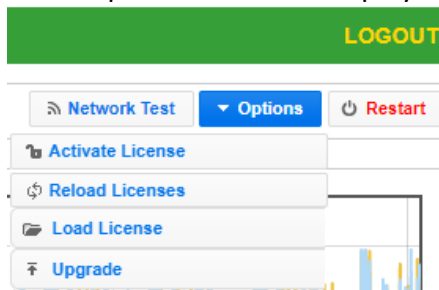

2. Click **Activate License**. The **Activate License** window appears.

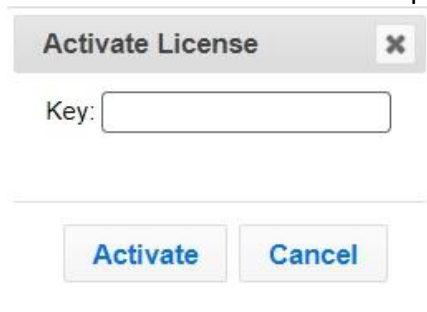

3. In the **Key** field, enter your Activation Key.
4. Click **Activate**. The Zixi Broadcaster is enabled.

Offline Activation (License File)


If you want to activate your license without an internet connection, you can upload a License File. To obtain a license file, please contact *Zixi Support* at support@zixi.com.

Activating Your License

Reloading the License

➔ To Load the License File:

1. In the **Status** page of the Zixi Broadcaster UI, click **Options** in the menu bar. The drop-down menu is displayed.

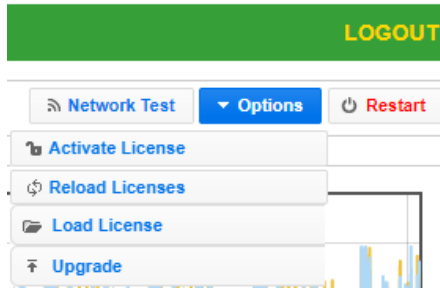


2. Click **Load License**.
The directory of the local drive opens.
3. Navigate to the License File and click **Open**.
A prompt window instructs you to Reload the license to activate the license.
4. Click again on **Options** and select **Reload Licenses** from the dropdown menu.
The Zixi Broadcaster is enabled.

Reloading the License

In the event that your license expires, you must re-enter a new Zixi license key.

➔ To reload the license:

1. In the **Status** page of the Zixi Broadcaster UI, click **Options** in the menu bar. The drop-down menu is displayed.

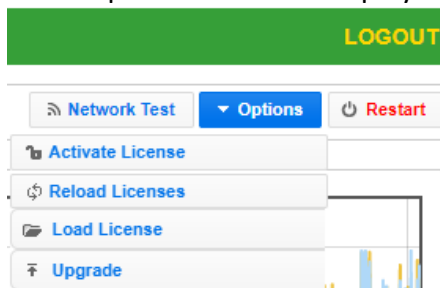

2. Click **Reload License**.
The Zixi Broadcaster is enabled.

Upgrading the Product Version (Linux)


When a new version of Zixi Broadcaster becomes available, you will receive a new installation archive file (.tar.gz file) from your Zixi representative to upgrade your Zixi Broadcaster software. It is recommended to perform the installation within a "maintenance window" and notify end users that the streaming will be momentarily interrupted. The upgrade process may last a few minutes after which the streams will be automatically resumed.

Activating Your License

Upgrading the Product Version (Linux)

➔ To upgrade the version:

1. In the **Status** page of the Zixi Broadcaster UI, click **Options** in the menu bar. The drop-down menu is displayed.

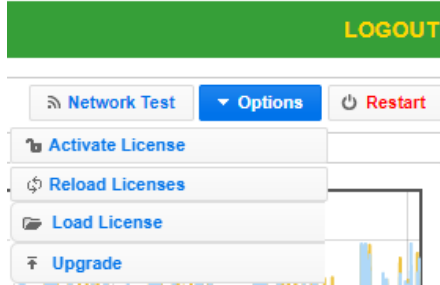

2. Click **Upgrade**.
3. Select the relevant installation archive file (.tar.gz file) and click **Open**. The installation process will begin. The process may take up to a few minutes. During the process, the streams and the management UI will not be available. After the upgrade, all streams will be automatically resumed.

Viewing Status

The Status screen displays aggregated statistics on all the input and output streams and a graph representing the network utilization of active streams over time.

➔ To View the Status of the Streams:

In the Zixi Broadcaster **Status** page, the **General** area, **Network Status** area, **License Information** area, **Machine Information** area and **Operating System** area are displayed.

General Status


General	
ID	The Zixi Broadcaster ID number
Host ID	Displays the ID of Zixi Broadcaster host.
Start Time	Displays the time that the Zixi Broadcast began to actively stream content.
Up Time	The duration of time that the broadcast is running.
Inputs	The number of current active inputs
Outputs	The number of current active outputs
Remote In [kbps]	The current aggregate input bitrate from remote sources – Zixi Push/Pull (in Kbps)
Local In [kbps]	The current aggregate input bitrate from local sources – UDP streams (in Kbps)
Remote Out [kbps]	The current aggregate output bitrate to remote destinations (in Kbps)
Local Out [kbps]	The current aggregate output bitrate to local destinations (in Kbps)
HTTP Out [kbps]	The current aggregate output bitrate for HTTP streams - FLV/RTMP/HLS/ MPEG-TS over HTTP (in Kbps)
kBytes Sent	The cumulative traffic transmitted (in Kbps)
kBytes Received	The cumulative traffic received (in Kbps)
RTMP Server	Active – the RTMP server is enabled (See Settings > Live Protocols > RTMP Server section) Off – the RTMP server is disabled

Viewing Status

Network Status

Network Status

The network status graph displays the total input/output bitrate during the last hour. The changes in the amplitude of both the input (gold) and output (blue) presented in 10-minute intervals.

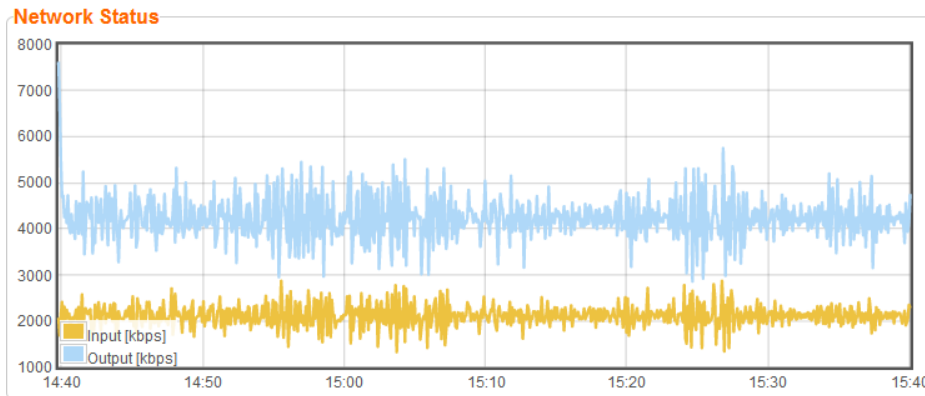


Viewing Current License Information

You can view the current license information in the **License Information** section.

Metered License Monitoring

If you have a metered license (based on usage), you can view the license conditions and monitor your current usage status under the License Information section on the main screen.

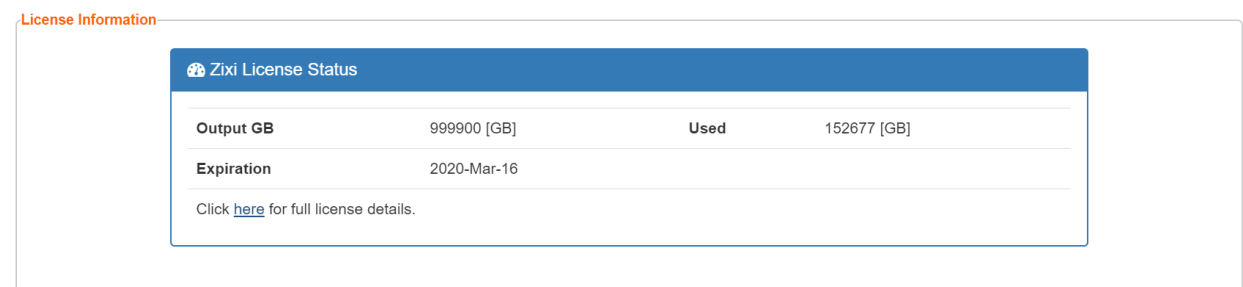

The section includes the following elements:


Element	Description
Output GB	The total amount of output traffic in GB per month that is allowed in the license.
Expiration	License expiration date.
Used	The actual usage this month so far in GB.

Viewing Status

Viewing Current License Information

To view additional license terms and usage statistics, click the link at the bottom of the Zixi License Status box.

License Information

 Zixi License Status

Output GB	999900 [GB]	Used	152677 [GB]
Expiration	2020-Mar-16		
Click here for full license details.			

The License Status Screen is displayed.

Viewing Status

Viewing Current License Information

License Status Screen

Zixi License Status

Application

Product	Key
Broadcaster_new	demo-f14c-c546-6784

Meters

Meter	Expiration
Output GB	999900 [GB] 16-Mar-2020
Available	999900 [GB] Used 152677 [GB]
Expires	2020-Mar-16

Limits

	Input	Output
Bitrate	Unlimited	Unlimited
Zixi Pull	Unlimited	Unlimited
Zixi Push	Unlimited	Unlimited
RTMP Pull	Unlimited	Unlimited
RTMP Push	Unlimited	Unlimited
UDP	Unlimited	Unlimited
ASI	Unlimited	Unlimited
Transcoders	999	

Features

	Supported
HLS, HDS, FLV, MPEG-DASH, VOD & RTMP	<input checked="" type="checkbox"/>
Receivers & UDP	<input checked="" type="checkbox"/>
SMPTE 2022 FEC for RTP	<input checked="" type="checkbox"/>
TR101 Stream analysis	<input checked="" type="checkbox"/>
File transfer & Zixi accelerated HLS/HDS	<input checked="" type="checkbox"/>
Cluster	<input checked="" type="checkbox"/>
Matrix	<input checked="" type="checkbox"/>
Bonding	<input checked="" type="checkbox"/>
Time shifting	<input checked="" type="checkbox"/>
x264 Transcoding	<input type="checkbox"/>

Daily Usage

Host: All

Date	Usage (GB)
2019-03-26	0
2019-04-01	0
2019-04-03	0
2019-04-05	0
2019-04-07	0
2019-04-09	0
2019-04-11	0
2019-04-13	0
2019-04-15	0
2019-04-17	0
2019-04-19	0
2019-04-21	0
2019-04-23	0
2019-04-25	0
2019-04-27	0
2019-05-01	0
2019-05-03	0
2019-05-05	0
2019-05-07	0
2019-05-09	0
2019-05-11	0
2019-05-13	0
2019-05-15	0
2019-05-17	0
2019-05-19	15,000,000
2019-05-21	40,000,000
2019-05-23	38,000,000
2019-05-25	25,000,000
2019-05-27	0

Daily Bitrate

Host: All

Date	Bitrate
2019-03-26	0
2019-04-02	0
2019-04-09	0
2019-04-16	0
2019-04-23	0
2019-04-30	0
2019-05-07	0
2019-05-14	0
2019-05-21	4,500
2019-05-28	0

Viewing Status

Machine Information

The screen includes the following elements:

Element	Description
Application	The product version and license key.
Meters	<ul style="list-style-type: none">• Output GB - The total amount of output traffic in GB per month that is allowed in the license.• Expires - license expiration date.• Available - the total amount of traffic in GB per month that is allowed in the license.• Used - the actual usage this month so far in GB..
Limits	License usage restrictions. Unlimited - no restrictions.
Features	List of enabled/disabled features.
Daily Usage	Daily traffic statistics. Click the Host drop-down menu to select a specific host.
Daily Bitrate	Daily bitrate statistics. Click the Host drop-down menu to select a specific host.

Machine Information

This pane shows information about the machine on which the Broadcaster is installed.

Machine Information

System Model: Xen HVM domU
Processor Model: Intel(R) Xeon(R) CPU E5-2686 v4 @ 2.30GHz
Processors: 1
Logical Cores: 2
Installed RAM: 4 GB
GPU(s): Not Found

The pane includes the following data:

Parameter	Description
System Model	The model of the machine on which the Broadcaster is installed.
Processor Model	The model and specifications of the machine's processor.
Processor	The number of CPUs installed on this machine.

Viewing Status

Operating System Information

Logical Cores	The number of logical cores per processor (for each processor).
Installed RAM	The size of the RAM installed on the machine.
GPU(s)	The number of GPUs. If no GPUs - Not Found.

Operating System Information

This pane shows information about the operating system running on the machine.

OS Information

```
OS: Amazon Linux release 2 (Karoo)
Build: 4.14.88-88.73.amzn2.x86_64
Architecture: x86_64
```

The pane Includes the following data:

Parameter	Description
OS	The operating system running on the machine.
Build	The operating system build (version) number.
Architecture	The system architecture of the operating system, number of bits.

Network Cards (Linux only)

This pane shows information about the network cards running on the machine. Each line represents another network card.

Network Cards

```
NIC      Link Speed  Duplex  IPs
eth0     Full        Full    172.31.17.149
```

The pane Includes the following data:

Parameter	Description
NIC	The name of the Network Interface Controller (a.k.a network card).
Link Speed	The link speed capability of the network card.
Duplex	Full - full duplex Half - half duplex

Viewing Status

Network Cards (Linux only)

IPs


The IP of the network card.

Testing the Network





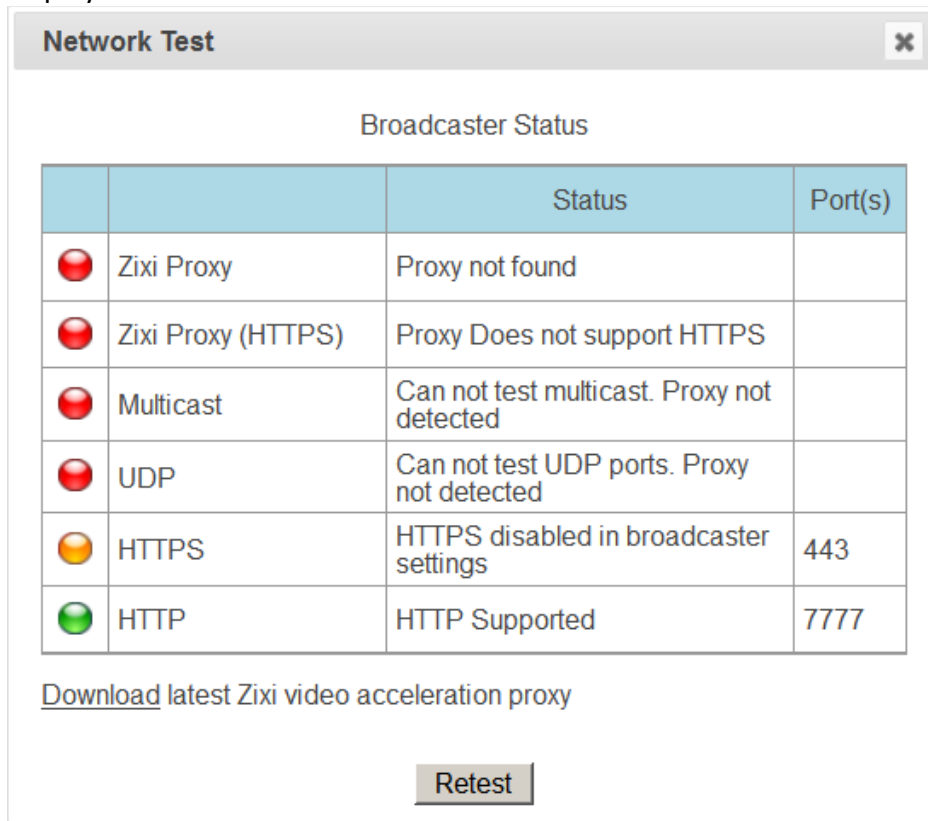

You can test the Zixi Broadcaster status, the status of the http or https connection with the relevant port, and the status of the Zixi proxy component. This can be accomplished remotely after the installation of the Broadcaster and subsequently any time after that.

➔ To Test the Network:

1. In the Zixi Broadcaster **Status** page, click . The **Network Test** screen is displayed:



The screenshot shows a window titled "Network Test" with a close button in the top right corner. Inside the window, the title "Broadcaster Status" is centered above a table. The table has four columns: a health indicator (circle), a component name, a status description, and a port number. Below the table is a link to download the latest Zixi video acceleration proxy and a "Retest" button.

		Status	Port(s)
	Zixi Proxy	Proxy not found	
	Zixi Proxy (HTTPS)	Proxy Does not support HTTPS	
	Multicast	Can not test multicast. Proxy not detected	
	UDP	Can not test UDP ports. Proxy not detected	
	HTTPS	HTTPS disabled in broadcaster settings	443
	HTTP	HTTP Supported	7777

[Download latest Zixi video acceleration proxy](#)

Retest

The Broadcaster Status table lists the various components of the Zixi Broadcaster with the relevant ports and status (description) and the following health indicators:

- **Green** – component has been tested and was found available.
 - **Yellow** – component has been disabled.
 - **Red** – component was not found or is not available.
2. Click **Retest** to run an additional test on all the server's current connections and their relative ports.

Broadcaster Inputs

You can add input streams to Zixi Broadcaster from one of the following sources:

- **Zixi Feeder (Push)** – the Zixi feeder pushes the stream to the Zixi Broadcaster. Since both the Zixi Feeder and the Zixi Broadcaster use the Zixi protocol, the stream is protected by the Zixi protocol.
- **Another Zixi Broadcaster (Pull)** – the Zixi Broadcaster can pull a stream from another Zixi Broadcaster. Since both components use the Zixi protocol, the stream can be protected by the Zixi protocol.
- **UDP streams** - the source is a UDP or RTP stream, RTP + SMPTE 2022 FEC over unicast or multicast.
- **Delayed** - input stream will be stored on the local disk, while a variant of the input is created and delayed according to the specified duration.
- **Local files (for VOD)** – the source in this case is a local transport stream file from your local computer or local network.
- **RTMP streams** - The source is an RTMP stream, pushed into the Zixi Broadcaster or pulled by it.
- **RTSP** - The source is an RTSP stream, pushed into the Zixi Broadcaster, or pulled by it.
- **HLS** - The source is an HLS stream that is pulled by the Zixi Broadcaster.
- **HTTP Pull/Push (TS over HTTP)** - The source is a Transport Stream over HTTP, which is pushed into Zixi Broadcaster or pulled by it.
- **RIST** – The source is a RIST stream using Simple or Main Profile over unicast or multicast.

Adding Input Streams

The Zixi Broadcaster enables you to add various types of streams. When you create a new stream, select the stream type and then fill in the fields that are applicable for that stream type.

Adding Push Streams

Typically, a Push Stream is transmitted from a Zixi Feeder. In this case, the stream is initiated by the Zixi Feeder while the Zixi Broadcaster remains in “listening mode” until the stream is initiated.

If the stream is an MPTS stream and you want to demux it into separate SPTS input streams, create the stream, by following the instructions below, and then follow the instruction in the [Demuxing an MPTS Stream](#) section.

➔ To Add a Push Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.

Broadcaster Inputs

Adding Input Streams

2. In the **Menu** bar, click **New Input**. The **Add a new input stream** window is displayed.

The screenshot shows the 'Add new input stream' dialog box. It features a title bar with a close button. The main area contains several configuration options: a text input for 'Stream ID', a dropdown for 'Max Outputs' (set to 'Unlimited'), and a checked checkbox for 'Show in Matrix'. Below these are radio buttons for selecting the input type: 'Push', 'Pull', 'UDP', 'Delayed', 'File', 'RTMP', 'RTSP', 'HLS', 'TS over HTTP', and 'RIST'. A section titled 'Stream parameters' includes a 'Password' text input, a 'Latency [ms]' dropdown (set to 'Remote configuration'), a 'Point to point' checkbox (unchecked), and an 'ID of high priority source' dropdown (set to 'None'). Below this are five more sections, each with a checkbox: 'Enable time shift', 'Transmit as multicast', 'Decrypt stream', 'Enable encryption', and 'Recording parameters'. At the bottom right are 'Ok' and 'Cancel' buttons.

3. Enter the unique **Stream ID** for the Broadcaster.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.



This setting can be modified without interrupting an existing stream.

5. Select the **Show in Matrix** checkbox to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **Push** for this input stream.
7. Specify the **Stream Parameters** (see Input Stream Parameters Table below).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter Table below). The stream will be recorded and broadcasted after the specified delay. The time shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter Table).
10. If you want to record the stream, you can configure the **Recording Parameters** (see Input Stream Parameter Table).
11. You can decrypt an encrypted stream as it enters Zixi Broadcaster. To decrypt a stream, select the **Decrypt Stream** checkbox and fill in the parameters as describes in the Input



Broadcaster Inputs

Adding Input Streams

Stream Parameter Table below. For more information, see [Decrypting an Input Stream in Zixi Broadcaster](#).



- Click **OK**. The “Input added” message appears on the top of the screen. The Push Stream from the Zixi Feeder is added to the Zixi Broadcaster and now appears in the list of input streams available in the Zixi Broadcaster input UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Password (Optional)	<p>If desired, enter a password string to use for authentication (must be identical to the string configured on the Feeder)</p> <p> This setting can be modified without interrupting an existing stream.</p>
Latency [ms]	<p>Specify the maximal latency that will override the latency that was defined in the Feeder (in ms). Default: Remote configuration (i.e. use the latency was set in the Feeder). (See Latency Considerations)</p> <p> This setting can be modified without interrupting an existing stream.</p>
Point to point only	<p>Selecting this checkbox transmits the stream directly (point-to-point) from the Feeder to the Receiver, while only delivering messaging to the Broadcaster. In case there is a problem with the P2P connection, it will re-route the transmission through the Zixi Broadcaster.</p>
Disable P2P Fallback	<p>Selecting this checkbox will allow <u>only</u> P2P (disabling the option to re-route traffic though the Zixi Broadcaster)</p>
ID of high priority source	<p>Specify the ID of the Zixi Feeder for which you want to grant priority. The ID of the Zixi Feeder can be found in the ID field on the Zixi Feeder’s Status screen. Upon connection of the Zixi Feeder with this ID, all other existing sources will be disconnected.</p>
Enable time shift	<p>Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams) .</p>
Maximum delay [hh:mm:ss]	<p>Specify the time of the delayed transmission of this stream. Maximum: 24 hours.</p>

Broadcaster Inputs

Adding Input Streams

Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings .
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Decrypt stream	Select this checkbox to decrypt the Input stream. Please note that the stream will not be encrypted as it passes through the Zixi path. For more information, see Decrypting an Input Stream in Zixi Broadcaster .
	Specify the type of encryption that is being used in the stream.
Decryption type (for Decrypt stream enabled)	 This setting can be modified without interrupting an existing stream.
	Specify the key for decryption.
Decryption key (for Decrypt stream enabled)	 This setting can be modified without interrupting an existing stream.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Adding Pull Streams

Typically, a Pull Stream is transmitted from another Zixi Broadcaster. In this case, the stream is initiated by your Zixi Broadcaster.

If the stream is an MPTS stream and you want to demux it into separate SPTS input streams, create the stream, by following the instructions below, and then follow the instruction in the [Demuxing an MPTS Stream](#) section

➔ To Add a Pull Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**. for the Broadcaster.

Broadcaster Inputs

Adding Input Streams



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.



This setting can be modified without interrupting an existing stream.

5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **Pull** for the input stream.

Add new input stream

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP RIST

Stream parameters

Host: +

Port:

Stream:

Password:

Latency [ms]:

Ignore TLS certificate:

Bind to IP:

Enable time shift

Transmit as multicast

Decrypt stream

Enable encryption

Recording parameters

Ok Cancel


7. Specify the **Stream Parameters** (see Input Stream Parameter table).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter table). The stream will be recorded and broadcasted after the specified delay. The time shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter table).
10. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameter table).
11. You can decrypt an encrypted stream as it enters the Zixi Broadcaster. To decrypt a stream, select the **Decrypt Stream** checkbox and fill in the parameters as describes in the Input Stream Parameter Table below. For more information, see [Decrypting an Input Stream in Zixi Broadcaster](#).

Broadcaster Inputs

Adding Input Streams




12. Click **OK**. The “Input added” message appears on the top of the screen. The Push Stream from the Zixi Feeder is added to the Zixi Broadcaster and now appears in the list of streams available in Zixi Broadcaster inputs UI.

Input Stream Parameters table

Parameter	Description
Stream Parameters The general stream settings.	
Host	Enter the IP Address of the remote Broadcaster server. Note that additional (failover) destinations can be added by clicking the adjacent “+” button
Port	Enter the port through which the Broadcaster receives the stream from another Broadcaster server. Default: 2088 The default input port for Zixi Broadcaster is UDP port 2088 . This port <i>must be open</i> on any firewalls between Zixi Broadcaster and other devices it is communicating with.
Stream	Enter the unique stream ID from another Broadcaster server.
Password (Optional)	If desired, enter the string for authentication. It must be identical to the string configured on the other Zixi Broadcaster.
Latency [ms]	Specify the maximum number of milliseconds that Zixi Broadcaster should protect the stream for. For example, 6000 milliseconds would ensure that the stream is protected for up to six seconds of delay in the network. This setting affects memory usage as higher levels of protection require more buffering. Default:6000.
Ignore TLS certificate error	Select this option when connecting to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors.  This setting can be modified without interrupting an existing stream.
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.
Bind to NIC	Select from the drop-down list the NIC to be used for this Input, OR select <i>Any</i> to enable any NIC to be used.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).

Broadcaster Inputs

Adding Input Streams

Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the time of a delayed transmission of this stream. Maximum: 24 hours
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi Broadcaster that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings .
	 This setting can be modified without interrupting an existing stream.
Multicast-Only (for multicast enabled)	If desired, specify multicast-only outputs.
Decrypt stream	Select this checkbox to decrypt the Input stream. Please note that the stream will not be encrypted as it passes through the Zixi path. For more information, see Decrypting an Input Stream in Zixi Broadcaster .
Decryption type (for Decrypt stream enabled)	Specify the type of encryption that is being used in the stream.
	 This setting can be modified without interrupting an existing stream.
Decryption key (for Decrypt stream enabled)	Specify the key for decryption.
	 This setting can be modified without interrupting an existing stream.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.

Broadcaster Inputs

Adding Input Streams

Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	
File Name Template	Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated. The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows: <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Broadcaster Inputs

Adding Input Streams

Adding UDP Streams

This enables the Broadcaster to receive a UDP stream. The UDP stream is not protected by the Zixi protocol. The UDP streams can be one of the following types:

- UDP – plain UDP
- RTP – Real-Time Transport Protocol
- RTP + SMPTE 2022 FEC - SMPTE 2022 standard with Forward Error Correction

If the stream is an MPTS stream and you want to demux it into separate SPTS input streams, create the stream, by following the instructions below, and then follow the instruction in the [Demuxing an MPTS Stream](#) section.

➔ To Add a UDP Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**.



Note this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **UDP** for the input stream.

Add new input stream

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull **UDP** Delayed File RTMP RTSP HLS TS over HTTP RIST

Stream parameters

Port:

Multicast IP:

SSM source IP:

Type:

Bind to IP:

Max Bitrate [kbps]:

Enable time shift

Transmit as multicast

Enable encryption

Recording parameters

Ok Cancel

Broadcaster Inputs

Adding Input Streams

7. Specify the **Stream Parameters** (see Input Stream Parameters Table).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).
10. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameters Table).
11. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table). For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#).
12. Click **OK**.

The “Input added” message appears on the top of the screen. The UDP Stream from the Zixi Feeder is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Port	Specify the port to listen on. This port must be open on all firewalls between the Zixi Broadcaster and other devices it is communicating with.
Multicast IP	If multicast, type the Multicast IP address (or leave blank in the case of Unicast).
SSM Source	Specify the source IP for a source-specific multicast.
Type	Select the appropriate protocol type from the drop-down list.
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.
Max. bitrate [kbps]	Specify the maximum expected bitrate for memory allocation. Recommended: 2X the actual bitrate, which will prevent buffer overruns (especially with VBR streams). Default: 8000. Note – Overflows will typically occur when the Max Bitrate isn’t sufficient.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the maximum time delay of this input.

Broadcaster Inputs

Adding Input Streams

Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.
Multicast-Only (for multicast enabled)	Selecting this checkbox will force the transmission of this stream only in multicast.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Broadcaster Inputs

Adding Input Streams

Adding Delayed Streams

You can delay the broadcasting of an input stream by selecting **Enable time shift** and then creating a Delayed input stream that uses the Input with the time shift as a source. In this case the input stream will be stored on the local disk, while a variant of the input is created and delayed according to the specified duration. The input stream of the time-shifted stream will be stored on the local disk. In parallel, you can create a "Delayed" stream that will stream the "time-shifted" input stream according to the specified delay. For example, you can specify a 6-hour time-shift to "stream_A". This means that 6 hours of streaming are stored. You can then create a delayed stream that will stream "Stream_A" with a two-hour delay. This means that the delayed stream will always stream with a two-hour delay.



The duration of the delayed stream should be less or equal to the time shifted stream.

➔ To Add a Delayed Stream:

1. Make sure at least one of the existing inputs has the **Enable time shift** setting selected.
2. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
3. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
4. Enter the unique **Stream ID**.
5. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
6. Select the **Show in Matrix** check box to display this stream in the Matrix (see Using the Matrix). Default: Selected.
7. Select **Delayed** for the input stream.

Add new input stream [X]

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP

Stream parameters

Source:

Delay [hh:mm:ss]:

Enable time shift

Transmit as multicast

Ok Cancel

8. Specify the **Stream Parameters** (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).

Broadcaster Inputs

Adding Input Streams

10. Click **OK**.

The “Input added” message appears on the top of the screen. The Delayed Stream is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Source	Select one of the input streams that were configured to enable "time shift".
Delay	Specify the delay period relative to the original stream in the following format: hh:mm:ss.
Transmit as multicast	Select this checkbox to enable the transmission of this stream’s outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings .
Multicast-Only (for Multicast enabled)	If desired, specify multicast only outputs.

Adding File Streams

This input creates a file input for the Zixi Broadcaster from a local or mounted disk and subsequently streams it to the end-user.

If the stream is an MPTS stream and you want to demux it into separate SPTS input streams, create the stream, by following the instructions below, and then follow the instruction in the [Demuxing an MPTS Stream](#) section.

➔ To Add a File Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
2. Enter the unique **Stream ID**.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

3. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
5. Select **File** for the input stream.

The screenshot shows the 'Add new input stream' dialog box. It includes a title bar with a close button. The main area contains the following elements:

- Stream ID: [text input field]
- Max Outputs: [Unlimited] (dropdown menu)
- Show in Matrix:
- Input type: Radio buttons for Push, Pull, UDP, Delayed, File (selected), RTMP, RTSP, HLS, TS over HTTP, RIST.
- Stream parameters section:
 - Path: [text input field] [Browse button]
 - Enable time shift:
 - Transmit as multicast:
 - Enable encryption:
- Buttons: Ok, Cancel

6. Specify the **Stream Parameters** (see Input Stream Parameter table).
7. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter table). The stream will be recorded and broadcasted after the specified delay. The time shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).
8. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter table).
9. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameter table). For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#).

Broadcaster Inputs

Adding Input Streams

10. Click **OK**. The “Input added” message appears on the top of the screen. The Push Stream from the Zixi Feeder is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Path	Type the local or mounted (Linux) disk or click the adjacent browse button to select the desired one. The suffix .ts indicates a transmitted stream.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled) Specify the maximum time delay of this input.	
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.
Multicast Only (for Multicast enabled)	If desired, specify force multicast-only outputs. A Zixi receiver will receive it in multicast (unless it is out of the LAN in which case it will relay in as unicast). You can also force Multicast only outputs.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.

Broadcaster Inputs

Adding Input Streams

Adding RTMP Streams

This enables you to create a Push or Pull RTMP input stream.

➔ To Add a RTMP Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **RTMP** for the input stream.

Add new input stream [X]

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP RIST

Stream parameters

Type: Push Pull

Disconnect if inactive:

Padding:

Muxing Bitrate [kbps]:

Smoothing Latency [ms]:

Enable time shift

Transmit as multicast

Enable encryption

Recording parameters

Ok Cancel

7. Specify the **Stream Parameters** (see Input Stream Parameters Table).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).
10. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table). For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#).

Broadcaster Inputs

Adding Input Streams

11. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameters Table).
12. Click **OK**. The “Input added” message appears on the top of the screen. The RTMP Stream is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Type	Select the desired type for the RTMP stream: <ul style="list-style-type: none">• Push – the stream is pushed to the Zixi Broadcaster (not initiated by the Zixi Broadcaster). No additional connection parameters need to be filled. If the stream name will match, the stream will be inputted.• Pull – Zixi Broadcaster will initiate the stream by accessing it through the following parameters:
URL (for Pull)	Type the Stream URL from which the Zixi Broadcaster will access. Use the following URL format: <code>rtmp://host:[port]/app/stream</code> . You can define RTMPS clients with the proven security of a secure socket layer (SSL), by using the <code>rtmps:// url</code>
Stream Name (for Pull)	Type the unique name for the stream that has been defined in the RTMP server.
User Name (for Pull)	Specify the user name to authenticate on the remote RTMP server
Password (for Pull)	Specify the string that is used for authorization on the remote RTMP server.
Ignore TLS certificate	Select this option when connecting to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors.
Disconnect if inactive	Disconnects the connection if inactive.
Padding	If the stream's bitrate fluctuates you can pad the stream with null packets to create a steady bitrate. Select this checkbox to enable padding.

Broadcaster Inputs

Adding Input Streams

Muxing bitrate (for Padding enabled)	Specify the padding level in kbps.
Smoothing Latency [ms]	The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing features creates a queue in the buffer, allowing smoother entry into the Broadcaster. The Smoothing parameter defines the size of the buffer in Milliseconds. A larger buffer enables smoother entry, however, it may influence the latency rate.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the maximum time delay of this input.
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.
Multicast Only (for Multicast enabled)	Select the check box to force only Multicast outputs.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.

Broadcaster Inputs

Adding Input Streams

Record to Disk Parameters

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
---------------------------	---

Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
---	--

Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
--	--

Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
--------------------	--

Record to S3 Parameters

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional
---------------------------	--

Broadcaster Inputs

Adding Input Streams

- %M=month - optional
- %D=day - optional
- %T=HH.MM.SS creation time - mandatory

For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.

Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
---	--

URL	Specify the URL of the S3 bucket.
------------	-----------------------------------

Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
--------------------------------------	---

Access Key	The access key that is used for accessing the S3 bucket.
-------------------	--

Secret Key	The secret key that is used for accessing the S3 bucket.
-------------------	--

Broadcaster Inputs

Adding Input Streams

Adding RTSP Streams

This enables you to create RTSP streams.

➔ To Add RTSP Streams:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.

The screenshot shows the 'Add new input stream' dialog box. The 'Stream ID' field is empty. 'Max Outputs' is set to 'Unlimited'. 'Show in Matrix' is checked. The 'RTSP' radio button is selected. The 'Stream parameters' section shows the URL 'rtsp://localhost:554/' and 'TCP' checked. The 'Video UDP port' is 5000, 'Audio UDP port' is 5002, 'Pad to bitrate [kbps]' is 0, and 'Latency [ms]' is 0. There are checkboxes for 'Enable time shift', 'Transmit as multicast', and 'Enable encryption'. At the bottom are 'Ok' and 'Cancel' buttons.

3. Enter the unique **Stream ID**.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **RTMP** for the input stream.
7. Specify the **Stream Parameters** (see Input Stream Parameters Table).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).
10. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table).

Broadcaster Inputs

Adding Input Streams

11. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameters Table).
12. Click **OK**. The “Input added” message appears on the top of the screen. The RTMP Stream is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	The general stream settings.
URL	Type the Stream URL from which the Zixi Broadcaster will access.
Video UDP Port	Specify the UDP port to be used for streaming the video.
Audio UDP Port	Specify the UDP port to be used for streaming the audio.
Pad to bitrate	If the stream's bitrate fluctuates you can pad the stream with null packets to create a steady bitrate. This setting determines the padding level in kbps.
Latency	Specify the maximum latency you can tolerate for the stream in milliseconds. Recommended - the length of two frames.
TCP	Select this checkbox for streams that use TCP protocol. Leave unselected in case the stream uses UDP.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the maximum time delay of this input.
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.
Multicast Only (for Multicast enabled)	Select the check box to force only Multicast outputs.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .

Broadcaster Inputs

Adding Input Streams

**Encryption type
(for Encryption
enabled)**

Specify the type of Encryption (AES 128/192/256).

**Encryption key (for
Encryption
enabled)**

Click **Generate** to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.

**Recording
parameters**

Select this checkbox to customize the recording parameters.

Destination Type

Select the radio button for the desired storage type and then fill in the relevant parameters.

- **Record to disk** – the recording is saved on the local disk.
 - **Record to S3** – the file is saved to your AWS S3 Bucket.
-

**Record to Disk
Parameters**

**File Name
Template**

Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.

The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:

- %S=stream id - optional
- %Y=year - optional
- %M=month - optional
- %D=day - optional
- %T=HH.MM.SS creation time - mandatory

For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.

**Max recorded file
duration [hours]**

Specify the maximum time allotted for recording a video stream. Default: 2 hours

**Keep recorded files
for [hours]**

Specify the maximum time for storing the recording. Default: 0 hours

Custom Path

Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the **Settings > General** screen.

Broadcaster Inputs

Adding Input Streams

Record to S3 Parameters

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Broadcaster Inputs

Adding Input Streams

Adding HLS Streams

This screen enables the Broadcaster to receive an HLS stream. The HLS stream is not protected by the Zixi protocol. There are two options for pulling the stream:

- **Single source (adaptive bitrate)** - the stream can be an adaptive bitrate stream. In this case, Zixi Broadcaster will pull the main playlist to adapt between bitrates according to network conditions.
- **Multiple sources** - it is possible to pull multiple input streams with static individual bitrates. In this case, Zixi Broadcaster will automatically create a separate input for each bitrate.

➔ To Add an HLS stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Enter the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **HLS** for the input stream.

The screenshot shows the 'Add new input stream' dialog box. The 'Stream ID' field is empty. 'Max Outputs' is set to 'Unlimited'. 'Show in Matrix' is checked. The 'Push' radio button is selected. The 'Stream parameters' section shows the 'Master playlist URL' as 'http://localhost:7777/input.m3u8', 'Download type' as 'Multiple sources (pull all bitrates)', and 'Smoothing Latency [ms]' as '30000'. The 'Inject SCTE35 on CUE marks' checkbox is unchecked. At the bottom, there are four unchecked checkboxes: 'Enable time shift', 'Transmit as multicast', 'Enable encryption', and 'Recording parameters'. 'Ok' and 'Cancel' buttons are at the bottom right.

7. Specify the **Stream Parameters** (see Input Stream Parameters Table below).

Broadcaster Inputs

Adding Input Streams

8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).
10. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameters Table).
11. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table).
12. Click **OK**.

The "Input added" message appears on the top of the screen. The HLS stream from the Zixi Feeder is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI. If the "multiple sources" option was select, Zixi Broadcaster will automatically create a separate input for each bitrate.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Master Playlist URL	Specify the URL of the HLS stream.
Download Type	Specify whether the variants will be pulled from a single source (adaptive bitrate) or multiple sources (pull all bitrates).
Smoothing Latency	The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing features creates a queue in the buffer, allowing smoother entry into the Broadcaster. The Smoothing parameter defines the size of the buffer in Milliseconds. A larger buffer enables smoother entry, however, it may influence the latency rate.
Inject SCTE35 on CUE Marks	Select this checkbox to inject SCTE markers into the adaptive stream manifest. SCTE-35 markers found in the source input will be used to segment the stream and the #EXT-X-CUE-IN/#EXT-X-CUE-OUT tags will be added to the manifest.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the maximum time delay of this input.

Broadcaster Inputs

Adding Input Streams

Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.
Multicast Only (for Multicast enabled)	If desired, specify multicast only outputs.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory
File Name Template	

Broadcaster Inputs

Adding Input Streams

	For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	
File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Broadcaster Inputs

Adding Input Streams

Adding TS over HTTP (Pull) Streams

In this mode Zixi Broadcaster pulls a Transport Stream over TCP from an HTTP server. In this case, the stream is initiated by your Zixi Broadcaster.

➔ To Add a TS over HTTP (Pull) Stream:

1. In the Zixi Broadcaster navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** checkbox to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **TS over HTTP** for the input stream.
7. In the **Type** field, select **Pull**.

The screenshot shows the 'Add new input stream' dialog box. The 'Stream ID' field is empty. The 'Max Outputs' dropdown is set to 'Unlimited'. The 'Show in Matrix' checkbox is checked. The radio buttons for input types are: Push (unselected), Pull (selected), UDP (unselected), Delayed (unselected), File (unselected), RTMP (unselected), RTSP (unselected), HLS (unselected), TS over HTTP (selected), and RIST (unselected). Under 'Stream parameters', the 'Type' radio buttons are Push (unselected) and Pull (selected). The 'URL (http://host:[port]/stream):' field contains 'http://localhost:7777/input.ts'. The 'Smoothing [ms]:' field contains '1000'. There are four checkboxes: 'Enable time shift' (unchecked), 'Transmit as multicast' (unchecked), 'Enable encryption' (unchecked), and 'Recording parameters' (unchecked). At the bottom right are 'Ok' and 'Cancel' buttons.

8. Specify the **Stream Parameters** (see Input Stream Parameter table).
9. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter table). The stream will be recorded and broadcasted after the specified delay. The time shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).
10. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter table).

Broadcaster Inputs

Adding Input Streams

11. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table).
12. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameter table).
13. Click **OK**.

Input Stream Parameters table

Parameter	Description
Stream Parameters	The general stream settings.
TS URL	Enter the URL of the Transport Stream.
Smoothing	The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing features creates a queue in the buffer, allowing smoother entry into the Broadcaster. The Smoothing parameter defines the size of the buffer in Milliseconds. A larger the buffer enables smoother entry. However, it may influence the latency rate.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the time of a delayed transmission of this stream. Maximum: 24 hours
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi Broadcaster that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings .
Multicast-Only (for multicast enabled)	If desired, specify multicast-only outputs.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).

Broadcaster Inputs

Adding Input Streams

Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
File Name Template	
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Adding TS over HTTP (Push) Streams

In this mode Zixi Broadcaster will receive a Transport Stream over TCP from an HTTP server. In this case, the stream is initiated by the source HTTP Server, while the Zixi Broadcaster remains in “listening mode” until the stream (with the specified stream ID) is initiated.

➔ To Add a TS over HTTP (Push) Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the **Menu** bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID** for the Broadcaster.



Note: this must be identical (case sensitive) to the stream name configured in the Zixi Feeder.

Broadcaster Inputs

Adding Input Streams

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** checkbox to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **TS over HTTP** for the input stream
7. In the **Type** field, select **Push**.

The screenshot shows the 'Add new input stream' dialog box. It has a title bar with a close button. The main area contains the following elements:

- Stream ID:
- Max Outputs:
- Show in Matrix:
- Input type selection: Push , Pull , UDP , Delayed , File , RTMP , RTSP , HLS , TS over HTTP , RIST
- Stream parameters section:
 - Type: Push , Pull
 - Smoothing [ms]:
 - User:
 - Password:
- Enable time shift:
- Transmit as multicast:
- Enable encryption:
- Recording parameters:
- Buttons: Ok, Cancel

8. Specify the **Stream Parameters** (see Input Stream Parameters Table below).
9. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter Table below). The stream will be recorded and broadcasted after the specified delay. The time shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).
10. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter Table).
11. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table).
12. If you want to record the stream, you can configure the **Recording Parameters** (see Input Stream Parameter Table).
13. Click **OK**.

Broadcaster Inputs

Adding Input Streams

Input Stream Parameters Table

Parameter	Description
Stream Parameters	
Smoothing	The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing features creates a queue in the buffer, allowing smoother entry into the Broadcaster. The Smoothing parameter defines the size of the buffer in Milliseconds. A larger buffer enables smoother entry, however, it may influence the latency rate.
User	If the stream is password protected, enter the username to access the stream.
Password	If the stream is password protected, enter the password.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss]	Specify the time of the delayed transmission of this stream. Maximum: 24 hours.
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings .
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.

Broadcaster Inputs

Adding Input Streams

Record to Disk Parameters

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
---------------------------	---

Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
---	--

Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
--	--

Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
--------------------	--

Record to S3 Parameters

Broadcaster Inputs

Adding Input Streams

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Adding RIST Streams

This enables the Broadcaster to receive a RIST stream. RIST seeks to provide reliable, high performance media transport by using UDP at the transport layer to avoid the inefficiencies of TCP, then layering on top Forward Error Correction and Retransmits to add the reliability inherently absent from UDP. Zixi Broadcaster supports RIST streams from any compliant RIST device.

Zixi supports the following RIST profiles:

- **Simple Profile** - The RIST Simple Profile provides best-in-class packet protection, as well as support for multi-link bonding and seamless switching.
- **Main Profile** – The RIST Main Profile builds upon the features of the Simple Profile to provide backwards compatibility, while opening the door for additional features, including:
 - **Encryption and authentication** - RIST Main Profile uses industry-standard DTLS or PSK with a variety of available cyphers to ensure the most up-to-date protection, while being flexible to accommodate local legal regulations. Support for pre-shared keys is also included, which makes RIST Main Profile compatible with one-to-many environments such as satellite or multicast distribution.
 - **Native tunneling and multiplexing** - the ability to combine multiple Simple Profile RIST streams into one single connection, optionally with one single encryption and authentication step, using industry-standard GRE over UDP.
 - **Bandwidth optimization** - by deleting NULL packets at the source and re-inserting them at the destination.
 - **Support for high bit rate streams** - The RIST Main Profile includes an RTP header extension which increases the sequence number size to 32-bits, and therefore increases the maximum size of retransmission buffers, and thus opens the door for higher bitrate streams, such as lightly compressed (e.g. JPEG 2000, Tico) and uncompressed video.

Contact your Zixi representative to learn more about interoperability testing between Zixi Broadcaster and 3rd party devices. More details about RIST can be found at www.rist.tv

➔ To Add a RIST Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Enter the unique **Stream ID**.



Note this must be identical (case sensitive) to the stream name configured at the source (e.g. Zixi Feeder).

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.

Broadcaster Inputs

Adding Input Streams

5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Select **RIST** for the input stream.

Add new input stream

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP RIST

Stream parameters

Profile:

Local Port:

Multicast IP:

SSM source IP:

Remote Port (0=auto):

Type:

Bind to IP:

Max Bitrate [kbps]:

Max Latency [ms]:

Enable time shift

Transmit as multicast

Enable encryption

Recording parameters

7. Specify the **Stream Parameters** (see Input Stream Parameters Table).
8. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameters Table).
9. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameters Table).
10. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameters Table).
11. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table). For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#).
12. Click **OK**.

The “Input added” message appears on the top of the screen. The RIST Stream f is added to the Zixi Broadcaster and now appears in the list of streams available in the Zixi Broadcaster inputs UI.

Input Stream Parameters Table

Parameter	Description
Stream Parameters	

Broadcaster Inputs

Adding Input Streams

	Select one of the following RIST profiles that matches the input stream:
Profile	<ul style="list-style-type: none">• Simple Profile (default)• Main Profile
Simple Profile Parameters	
Local Port	Specify the port to listen on. This port must be open on all firewalls between the Zixi Broadcaster and other devices it is communicating with.
Multicast IP	If multicast, type the Multicast IP address (or leave blank in the case of Unicast).
SSM Source	Specify the source IP for a source-specific multicast.
Remote Port	Specify the remote port in the source RIST device. Default: 0 (any port)
	Select one of the following protocol types from the drop-down list:
Type	<ul style="list-style-type: none">• RTP• RTP + SMPTE 2022 FEC
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.
Max. bitrate [kbps]	Specify the maximum expected bitrate for memory allocation. Recommended: 2X the actual bitrate, which will prevent buffer overruns (especially with VBR streams). Default: 8000. Note – Overflows will typically occur when the Max Bitrate isn't sufficient.
Max Latency [ms]	Specify the maximum latency of the stream in milliseconds. Default: 1000
Main Profile – Push Parameters	
Local Port	Specify the port to listen on. This port must be open on all firewalls between the Zixi Broadcaster and other devices it is communicating with.
Multicast IP	If multicast, type the Multicast IP address (or leave blank in the case of Unicast).
SSM Source	Specify the source IP for a source-specific multicast.
Remote Port	Specify the remote port in the source RIST device. Default: 0 (any port)
	Select one of the following protocol types from the drop-down list:
Type	<ul style="list-style-type: none">• RTP• RTP + SMPTE 2022 FEC
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.

Broadcaster Inputs

Adding Input Streams

Max. bitrate [kbps]	Specify the maximum expected bitrate for memory allocation. Recommended: 2X the actual bitrate, which will prevent buffer overruns (especially with VBR streams). Default: 8000. Note – Overflows will typically occur when the Max Bitrate isn't sufficient.
Max Latency [ms]	Specify the maximum latency of the stream in milliseconds. Default: 1000
Use DTLS	Select this checkbox to encrypt the stream dynamically using DTLS.
Main Profile – Pull Parameters	
Remote Host	Specify the IP Address of the remote RIST device from which the stream will be pulled.
Remote Port	Specify the port of the remote RIST device from which the stream will be pulled. Default: 0 (any port)
Local Port	Specify the local port to which the stream will be pulled. Default: 0 (any port)
Type	Select one of the following protocol types from the drop-down list: <ul style="list-style-type: none">• RTP• RTP + SMPTE 2022 FEC
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.
Max. bitrate [kbps]	Specify the maximum expected bitrate for memory allocation. Recommended: 2X the actual bitrate, which will prevent buffer overruns (especially with VBR streams). Default: 8000. Note – Overflows will typically occur when the Max Bitrate isn't sufficient.
Max Latency [ms]	Specify the maximum latency of the stream in milliseconds. Default: 1000.
Use DTLS	Select this checkbox to encrypt the stream dynamically using DTLS.
Enable time shift	Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).
Maximum delay [hh:mm:ss] (for Time Shift enabled)	Specify the maximum time delay of this input.
Transmit as multicast	Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.

Broadcaster Inputs

Adding Input Streams

Multicast-Only (for multicast enabled) Selecting this checkbox will force the transmission of this stream only in multicast.

Enable Encryption Select this checkbox to encrypt the Input stream. For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#)

Encryption type (for Encryption enabled) Specify the type of Encryption (AES 128/192/256).

Encryption key (for Encryption enabled) Click **Generate** to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.

Recording parameters Select this checkbox to customize the recording parameters.

Destination Type Select the radio button for the desired storage type and then fill in the relevant parameters.

- **Record to disk** – the recording is saved on the local disk.
 - **Record to S3** – the file is saved to your AWS S3 Bucket.
-

Record to Disk Parameters

Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.

The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:

File Name Template

- %S=stream id - optional.
- %Y=year - optional
- %M=month - optional
- %D=day - optional
- %T=HH.MM.SS creation time - mandatory

For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.

Max recorded file duration [hours] Specify the maximum time allotted for recording a video stream. Default: 2 hours

Broadcaster Inputs

Adding Input Streams

Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	
File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Broadcaster Inputs

Viewing Existing Input Streams

Viewing Existing Input Streams

The **Inputs** screen displays all the input streams that have been created. At the bottom of the screen you can also view accumulative utilization statistics for any connected streams selected. Hovering the cursor on the status indicator of a stream will provide you with the stream configuration information and basic utilization statistics, where applicable.

Zixi Broadcaster Version 14.0.38190 Linux 64-bit
QA-Gil-Bx4x1-2-Setup-Alon-Te-qgle
Copyright (c) 2007-2020, Zixi LLC.
CPU: 63.23% Disk: 35.16% Mem: 21.29% Clock: 11:15:09

STATUS INPUTS OUTPUTS ADAPTIVE VOD FILES TRANSCODER SETTINGS EVENT LOG MATRIX LOGOUT

Inputs Search Inputs [x] [P] [G] + New Input Reload

Status	ID	Type	Source	Bitrate[kbps]	Up Time	TR 101 290	Error	Outputs	Actions
Connected	bbb	File	1080p60.ts	0	10:42:22	P1: P2:	None	5	[x] [P] [G]
Transcoded sources									
Status	ID	Type	Source	Bitrate[kbps]	Up Time	TR 101 290	Error	Outputs	Actions
Connected	1			0	04:20:13	Off	None	0	[x] [P] [G]
Offline	bbb-alon-qgle-to-pr0...	Pull	zixi.stagingio.devcloud.zixi.com:2088	0	00:00:00	P1: P2:	Timeout	0	[x] [P] [G]
Connected	bbb-source-alon-tech...	Push	3.16.111.197	7952	00:04:24	P1: P2:	None	0	[x] [P] [G]

Statistics

Bitrate [kbps] [Link]	Total Packets [Link]	FEC Packets [Link]
Last Connected: [Link]	Packet Rate [Link]	FEC Recovered [Link]
Reconnections [Link]	Packet Loss % [Link]	ARQ Requests [Link]
RTT [ms] [Link]	Consecutive Drops [Link]	ARQ Recovered [Link]
Jitter [ms] [Link]	Dropped Packets [Link]	ARQ Duplicates [Link]
Latency [ms] [Link]	Recovered Packets [Link]	Overflows [Link]
	Not Recovered Packets [Link]	Consecutive Not Recovered [Link]

Any of the columns in the following table can be sorted in ascending/descending order by clicking on its heading. The Search text box in the upper left-hand side of the screen can be used to search for a specific input stream by entering the desired Stream ID.

Field	Description
Status	Displays the status of input stream. The following colored indicators are displayed: <ul style="list-style-type: none">Green = Connected

Broadcaster Inputs

Viewing Stream Statistics

- Yellow = Connecting
 - Red = Disconnected with an error condition
 - Blue = Offline with no connection attempts
 - Grey = Offline and stopped
-

ID	Displays the unique ID of the stream, as defined in the Zixi Broadcaster.
Type	Displays the type of input stream.
Source	Displays the source host and port number.
Bitrate [kbps]	Displays bitrate of the connected input stream.
Uptime	Displays the amount of time the stream has been active.
TR 101 209	Displays if the Analyzer is active and the streams that are being analyzed according to the TR101 protocol. P1 and P2 are error priorities.
Error	Displays connection and transmission errors.
Outputs	Displays the amount of outputs currently configured for this input stream.
Actions	Provides access to various actions to be performed on this input stream (see Broadcaster Actions on Input Streams).

Viewing Stream Statistics

You can view all the accumulative statistics for a connected input stream in real-time. It is possible to reset the counters by clicking **Reset**. The statistics may differ between the various stream types.

➔ To View Stream Statistics:

1. On the Inputs page of Zixi Broadcaster, click the desired input stream for which you want to view statistics for. The stream's statistics are displayed on the bottom of the screen.

Field	Description
Bitrate (kbps)	Displays the current bitrate of the input stream.
Uptime	Displays the amount of time the stream has been active.
Reconnections	Displays the number of reconnection attempts.

Broadcaster Inputs

Viewing Stream Statistics

Total Packets	Displays the total number of packets that have been transmitted.
Packet Rate	Displays the current number of packets per second.
Remuxing Resets	Remuxing resets can occur when remuxing to CBR (i.e value of 'Remux to bitrate' field is set). In this case, the value is not high enough to remux the video+audio+other PIDs data. A possible solution is to increase value of the 'Remux to bitrate' parameter.
Remuxing Overflows	This indicates that the multiplexer internal queues are full.
Smoothing Drops	The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing drops indicator indicates that the stream is too "bursty".
RTT (ms)	Displays the Round Trip Time (RTT) from the source (in milliseconds).
Jitter (ms)	Displays the current Jitter, measured in milliseconds.
Latency (ms)	Displays the stream latency configured on the source Feeder.
Total Packets	Displays the total number of packets that have been transmitted.
Packet Rate	Displays the current number of packets per second.
Packet Loss %	Displays current percentage of the packets that were dropped on route from the source.
Dropped Packets	Displays the total number of packets dropped between the Feeder and the Broadcaster since the beginning of the stream.
Recovered Packets	Displays the number of dropped packets that have been recovered since the beginning of the stream.
Non Recovered Packets	Displays the number of non-recovered packets.
FEC Packets	Displays the number of FEC packets transmitted.
FEC Recovered	Displays the number of FEC packets recovered.
ARQ Requests	Displays the number of requests for retransmission of dropped packets made with ARQ.
ARQ Recovered	Displays the number of dropped packets recovered via ARQ.
ARQ Duplicates	Displays the number of duplicate recovery packets received via ARQ.
Overflows	The number of packets lost due to buffer overflow.


Broadcaster Inputs

Viewing Stream Statistics

Note: Overflow is usually the result of the Max Bitrate being too low.

Searching for Input Streams

➔ To Search for an Input Stream:

1. In the **Inputs** page of Zixi Broadcaster, type in the specific input stream name in the search text box on the left-hand top of the screen and click .
2. The **Input** screen displays the requested output stream(s).

Broadcaster Actions on Input Streams


Every stream has a shortcut button that can be used to perform relevant actions on the stream. The following actions can be performed through the Actions button:

- Adding Analysis to the Input Stream
- Recording the Input Stream
- Stopping/Starting the Input Stream
- Deleting Input Streams from Broadcaster
- Editing Input Settings or Duplicating Input Streams
- Transcoding an Input Stream
- Playing Input Streams with Players
- Add Output
- Traceroute

Stopping/Starting the Input Stream

You can start or stop the input stream at any time.

➔ To Stop/Start the Input Stream:

1. On the **Inputs** page of Zixi Broadcaster, click the desired row of the input stream that you want to stop.
2. Click the  button on the right end of the selected row and then **Stop**. The selected row which was a Connected Input Stream is no longer displayed and appears below as **Offline**.
To continue the Input Stream click **Start** from the same menu.


Editing Input Settings or Duplicating Input Streams

➔ To Edit the Configuration of an Input Stream:


1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to edit.

Broadcaster Inputs

Broadcaster Actions on Input Streams


2. Click  button on the right end of the selected row and then **Edit**. The Edit input stream name window is displayed. You can modify any of the settings.
3. Click **OK**. The new settings will take effect.


➔ To Duplicate the Configuration of an Input Stream:

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to duplicate.
2. Click  button on the right end of the selected row and then **Duplicate**. The **Duplicate input stream name** window with the settings of the original input stream is displayed. You can modify any of these settings.
3. Click **OK**. The duplicate input stream with its new settings will be created.

Deleting Input Streams from Broadcaster

➔ To Delete an Input Stream from Broadcaster:

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to delete.
2. Click the  button on the right end of the selected row and then **Delete**. The message "Are you sure you want to delete input?" is displayed.

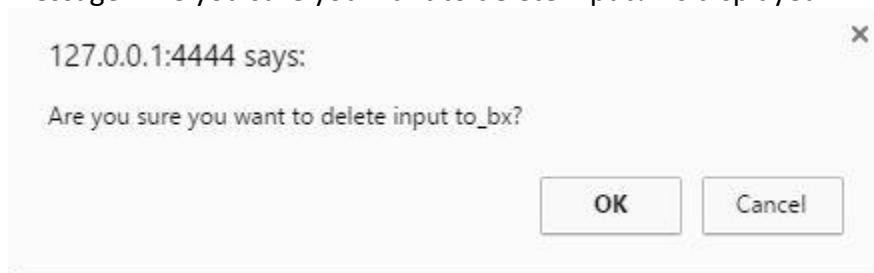


3. Click **OK**. The selected row which was a Connected Input Stream will be deleted.

Recording the Input Stream

You can record an input stream and store it as .TS file. The duration of the time the recording will be kept on the server is defined in the Input Stream configuration.

➔ To Record the Input Stream:

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to record.
2. Click the  button on the selected row and then choose **Record**. A small red dot appears in the green circle at the left-hand side of the selected row indicating that the input stream is being recorded.

Broadcaster Inputs

Broadcaster Actions on Input Streams

3. Clicking **Stop Recording** will stop the recording of the Input Stream and the newly recorded file will appear in the designated file directory in the **Files** page.


Broadcaster Inputs


Broadcaster Actions on Input Streams


Adding Analysis to the Input Stream

A TR101 analysis can be added to the input stream for the monitoring of the TS while in operation. The analysis can be used to check the integrity of the TS and the most important elements of the stream. The analysis includes priority 1 and 2. To learn more about TR101 analysis see [TR 101 290 Technical Report](#).

➔ To Add Analysis to the Input Stream:

1. In the Zixi Broadcaster **Inputs** page, click the stream for which you want to analyze from the input streams UI.
2. Click the  button on the right end of the selected row and then select **Analyze**. The statuses of a **P1** (high priority error) and **P2** (low priority error) are indicated by an adjacent green or red button displayed in the *TR 101 290* column.

You can view the detailed analysis of the P1 and P1 errors by clicking on the stethoscope icon  shown in the TR 101 290 column. The **Stream Analysis** screen is displayed.

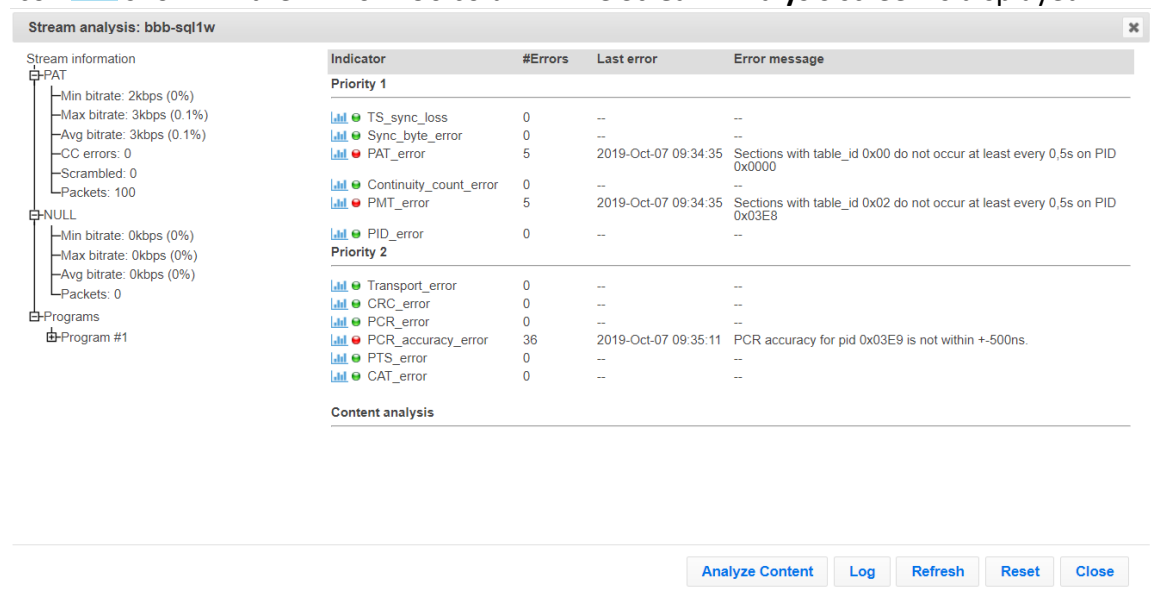

Indicator	#Errors	Last error	Error message
Priority 1			
TS_sync_loss	0	--	--
Sync_byte_error	0	--	--
PAT_error	5	2019-Oct-07 09:34:35	Sections with table_id 0x00 do not occur at least every 0,5s on PID 0x0000
Continuity_count_error	0	--	--
PMT_error	5	2019-Oct-07 09:34:35	Sections with table_id 0x02 do not occur at least every 0,5s on PID 0x03E8
PID_error	0	--	--
Priority 2			
Transport_error	0	--	--
CRC_error	0	--	--
PCR_error	0	--	--
PCR_accuracy_error	36	2019-Oct-07 09:35:11	PCR accuracy for pid 0x03E9 is not within +-500ns.
PTS_error	0	--	--
CAT_error	0	--	--

The following can be done from the Stream Analysis screen:

- **Analyze Content** – shows errors in the audio and video content (i.e. Frozen video, Blank picture, Silent audio, Low video quality and Audio clipping). When Content Analysis is running, you can click on the **VQE: I-Frames Only** button to show data only for I-Frames.
- **Log**- start sending the events of this stream to the event log ('stop logging' will stop the reporting of events).
- **Refresh** – refreshes the data that is displayed.
- **Reset** – resets all the field's values to zero.

On the left-hand side of the screen is a stream information tree that displays accumulative statistics regarding the stream. Click the + icons to expand the tree.

3. Clicking **Stop Analysis** will discontinue the action.

Transcoding an Input Stream

Zixi Broadcaster offers live transcoding, enabling users to create multiple bitrate streams from a single input stream.

Supported Video and Audio formats include:

- Video Decoding – MPEG2, H.264/AVC, H.265/HEVC
- Video Encoding – MPEG2, H.264/AVC, H.265/HEVC
- Audio Decoding – AAC, MPEG-1 Audio Layer I / II / III, MPEG-2 Audio Layer I / II / III, AC-3 (Dolby Digital)



For AC-3, which can contain up to six discrete channels of sound, the transcoder only supports the left and right channels and will ignore the other channels.

- Audio Encoding – AAC, AAC-HE (High Efficiency) and AAC-HEv2; Pass through (no encoding) – any audio codec (MPEG1/2 / AAC / AC-3, E-AC-3 (Dolby Digital Plus).

The transcoder comes with pre-set common video profiles:


1080i60 / 1080i59.94, 1080p30 / 1080p25, 720p60, 720p50 / 720p30, 576i60 / 576p25, 480i60 / 480p29.97


In order to transcode an input stream from the Inputs screen you must first configure the transcoding profiles in the Transcoder screen. For more information, see [Transcoder](#) section

Broadcaster Inputs

Broadcaster Actions on Input Streams

➔ To Transcode an Input Stream:

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to transcode.
2. Click  button on the right end of the selected row and then **Transcode**. The **Transcode <input stream name>** window with the settings of the selected input stream is displayed.

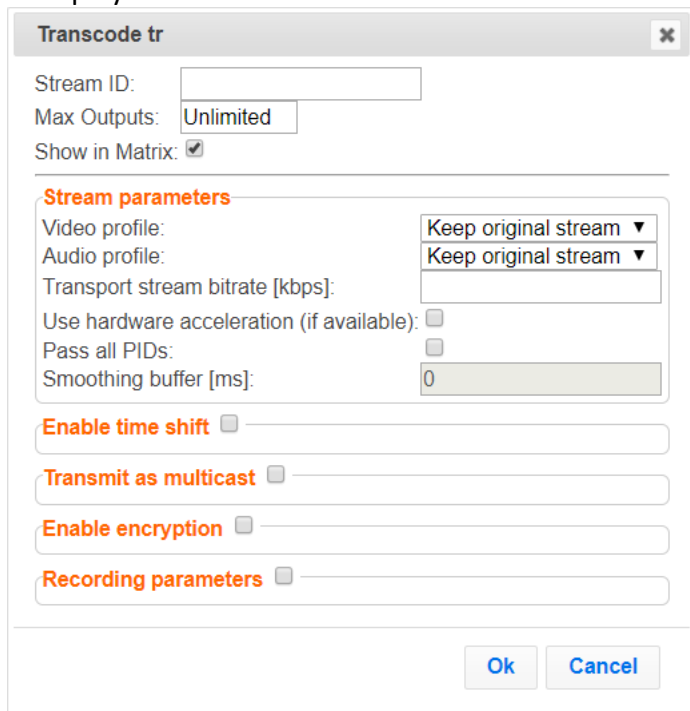

3. Enter the unique **Stream ID.**, which will correspond to the new transcoded input that will be added.
4. Under Stream Parameters, in the **Video profile** and **Audio profile** fields, do one of the following:
 - Select the desired Video Profile and/or Audio Profile that you have configured.
 - Select **Keep original stream** - if you have not configured a video or audio profile or do not want it transcoded or you want to set specific transcoding parameters for the specific stream. In this case the video or audio input will not be transcoded.
 - Select **Remove stream** – you can use the transcoder to remove the video or audio track from the stream.
5. Fill in additional fields (see table below for additional parameters).
6. Click **OK**. The transcoded input stream is created and appears in an embedded window labeled Transcoded sources under the original input stream from which it was created.

Parameter	Description
-----------	-------------

Broadcaster Inputs

Broadcaster Actions on Input Streams

Video Profile	Select an existing profile, select Keep original stream if you do not wish to transcode the video stream, or select Remove stream if you want to remove the video track.
Audio Profile	Select an existing profile, select Keep original stream if you do not wish to transcode the audio stream, or select Remove stream if you want to remove the audio track.
Transport Stream Bitrate (Kbps)	Specify the bitrate of the transport stream. This parameter is optional. If you do not specify a TS Bitrate, the stream will be VBR. If you specify a bitrate, the stream will be CBR.
Use Hardware Acceleration (if available)	Select this checkbox to use hardware acceleration component (e.g. NVIDIA or Intel) if it has been installed.
Pass all PIDs	Select this checkbox to pass-through all non-transcoded PIDs.
Smoothing Buffer (ms)	<p>Specify how much of the transcoded stream (in milliseconds) to store before transmitting it back to the server in order to prevent bursts.</p> <p>If the Transport stream bitrate [kbps] field is empty, the smoothing buffer is disabled.</p> <p>If the Transport stream bitrate [kbps] field is NOT empty, it is recommended to enter around 200ms, which should be enough to prevent bursts.</p>
Enable time shift	
Maximum delay [hh:mm:ss]	Specify the time of the delayed transmission of this stream. Maximum: 24 hours.
Transmit as multicast	Selecting this checkbox enables the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings. This setting requires enabling Multicast Pool (Settings > Multicast Pool).
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.

Broadcaster Inputs

Broadcaster Actions on Input Streams

Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	
File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	
File Name Template	Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.

Broadcaster Inputs

Broadcaster Actions on Input Streams

The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:

- %S=stream id - optional.
- %Y=year - optional
- %M=month - optional
- %D=day - optional
- %T=HH.MM.SS creation time - mandatory

For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.

Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
---	--

URL	Specify the URL of the S3 bucket.
------------	-----------------------------------

Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
--------------------------------------	---

Access Key	The access key that is used for accessing the S3 bucket.
-------------------	--

Secret Key	The secret key that is used for accessing the S3 bucket.
-------------------	--

Add Output


This is an alternative method (shortcut) to adding an output to a specific input stream instead of configuring it through the **Outputs** screen. The available types of outputs are:


- **UDP** – Target is a UDP or RTP stream, over unicast or multicast.
- **RTMP** – Real Time Messaging Protocol streams can be played on systems that accept this protocol as input. Originally designed to enable Adobe® Flash® streams to be sent between a server and a client, RTMP has become a popular protocol for streaming into content-delivery networks (CDNs).
- **Pull** – Pull streams are Zixi protocol streams destined for Zixi Receivers. In this case, the Zixi Broadcaster can offer status and statistics for a stream that is being pulled from it by another device.
- **Push** – Push streams are Zixi protocol streams destined for other Zixi Broadcasters.
- **TCP** – The TCP output can push the stream directly to a TCP socket or to an HTTP server.
- **HTTP Push** – The HTTP Push output stream can be encapsulated in HLS or DASH. The source of the output stream is a predefined adaptive group that has been configured in the [Adaptive Groups](#) screen. The configuration of the stream includes the option to delete outdated stream fragments on the server. Output streams can be pushed to one Zixi Broadcasters or Zixi Receiver.
- **AWS** – The HTTP output stream (HLS or DASH) can be pushed to an AWS S3 Bucket or too an Elemental MediStore. The native S3 support includes the ability to configure the S3 authentication credential, including the Region, Access Key, and Secret Key.
- **RIST** – The RIST output stream can be pushed to an external target using Simple or Main Profile over unicast or multicast. The output stream can include Forward Error Correction (SMPTE-2022 FEC).

Broadcaster Inputs

Broadcaster Actions on Input Streams

➔ To Add Output:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. Click the Settings button , and then click **New Output**. The **New Output** window with the settings of the selected output stream is displayed.

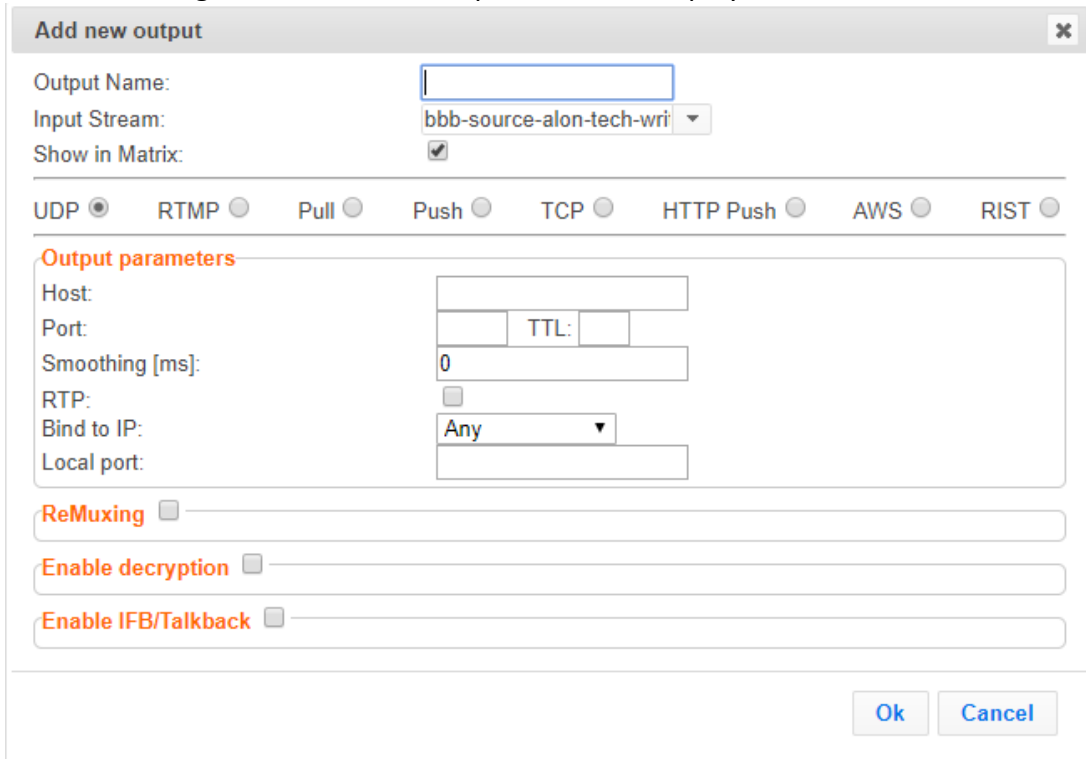

Add new output

Output Name:

Input Stream: bbb-source-alon-tech-wri

Show in Matrix:

UDP RTMP Pull Push TCP HTTP Push AWS RIST

Output parameters

Host:

Port: TTL:

Smoothing [ms]:

RTP:

Bind to IP: Any

Local port:

ReMixing

Enable decryption

Enable IFB/Talkback

Ok Cancel

3. Follow the specific instructions of each output type from one of the following sections:
 - **Adding UDP Outputs**
 - **Adding RTMP and RTMPS Outputs**
 - **Adding Pull Outputs**
 - **Adding Push Outputs**
 - **Adding TCP Outputs**
 - **Adding HTTP Push Outputs**
 - **Adding AWS Outputs**
 - **<add RIST LINK>**


Playing Input Streams with Players

You can preview the input streams through the following video players:

- VLC Player
- Flash Player
- Shoutcast


In order to preview an input stream you must first configure its output. See Broadcaster Outputs section for more details.

➔ To Play Input Streams with a VLC Player:

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to play with VLC.
2. Click the  button on the right end of the selected row and then **Play with VLC**. The **Link Description** window with the directory path for the desired file is displayed.
3. Click **Run VLC**. The selected file is downloaded to the computer.
4. Double-click on the newly downloaded file. This configured file runs using the VLC player and appears on a new output line on the **Output** screen wherein it can be monitored. Alternatively, copy the path and send it to the user so it can be entered in the Network URL of the VLC player.


➔ To Play Input Streams with a Flash Player:

Flash Player enables playing the stream on a native browser with the Flash player.

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to play with Flash Player.
2. Click the  button on the right end of the selected row and then **Play with Flash**. The **Link Description** window with the directory path and proxy path for the desired file is displayed.
3. Click **Run** to view the .flv file that appears on the first line of the window or **Run Accelerated** to run the file from the proxy server with better results.

➔ To Play Input Streams with a Shoutcast:

Shoutcast enables playing an audio file on a native browser.

1. In the Zixi Broadcaster **Inputs** page, click the desired input stream that you want to play with Shoutcast.
2. Click the  button on the right end of the selected row and then **Play with Shoutcast**. The **Link Description** window will open with the directory path for the desired file.


Broadcaster Inputs


Broadcaster Actions on Multiple Inputs

Viewing Traceroutes

For streams sent from a Zixi Feeder (v13 and above) to a Zixi Broadcaster (v13 and above), you can view traceroute data for the stream.

➔ To view traceroute data:


1. On the **Inputs** page of Zixi Broadcaster, click on the row of the input stream for which you want to view traceroutes.
2. Click the  button on the right end of the selected row and then select **Trace**. The traceroute data for this stream is displayed.

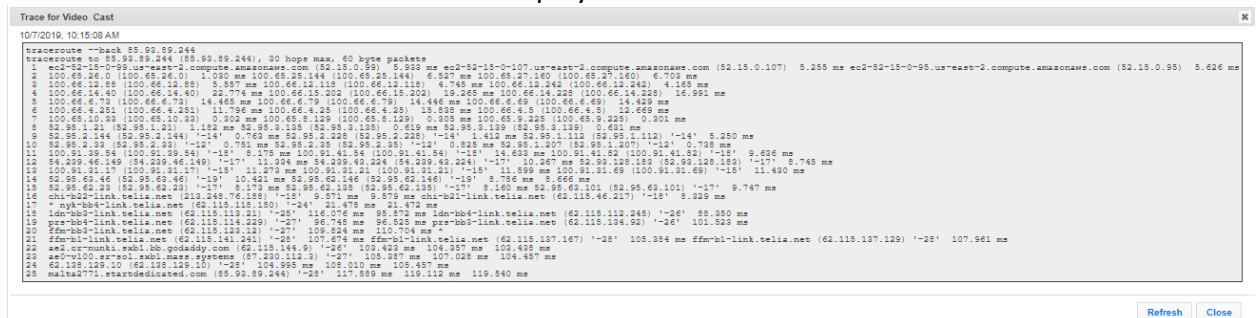

3. You can refresh the Traceroute data at any time by clicking the **Refresh** button.

Broadcaster Actions on Multiple Inputs

In the Inputs screen, you can perform actions on multiple or all input streams at once by selecting them using the check boxes and then clicking the Marked drop-down menu.

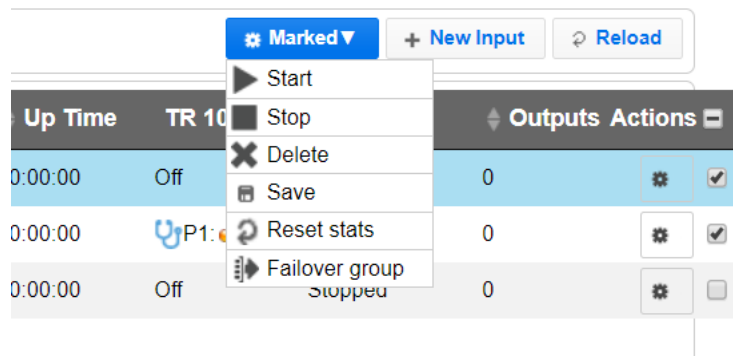

The actions include the following:

Starting and Stopping Multiple Input Streams

You can Start/Stop multiple streams.

Broadcaster Inputs

Broadcaster Actions on Multiple Inputs

➔ To Start/Stop multiple Input Streams:


1. In the Zixi Broadcaster Inputs screen, select the relevant Inputs by selecting the checkboxes
2. Click the Marked drop-down menu and then click **Stop** or **Start**.
The selected input streams will be started/stopped.

Deleting Multiple Input Streams

➔ To Delete Multiple Input Streams:

1. In the Zixi Broadcaster Inputs screen, select the relevant Inputs by selecting the checkboxes.
2. Click the **Marked** drop-down menu and then click **Delete**.

The following notification appears:

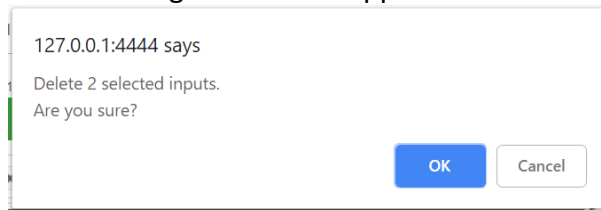

3. Click **OK**.

Saving Multiple Input Streams

➔ To Save Multiple Input Streams:

1. In the Zixi Broadcaster Inputs screen, select the relevant Inputs by selecting the checkboxes.
2. Click the **Marked** drop-down menu and then click **Save**.
3. All changes to the input streams are saved.

Resetting Stats for Multiple Input Streams

➔ To Reset Stats for Multiple Input Streams:

1. In the Zixi Broadcaster Inputs screen, select the relevant Inputs by selecting the checkboxes.
2. Click the **Marked** drop-down menu and then click **Reset Stats**.
All accumulated stream statistics are reset.

Broadcaster Inputs

Broadcaster Actions on Multiple Inputs

Creating a Failover Group

Zixi features hitless failover for inputs, enabling uninterrupted streaming when switching from one source to another. The hitless failover configuration involves grouping two or more inputs in a "Failover Group". If the inputs are identical (i.e. two or more binary-identical streams with synchronized RTP headers), when one of them is disrupted or interrupted completely, Zixi Broadcaster will seamlessly use the packets of the other input without any disruptions.



If the streams are not identical, the failover process will not be seamless and may take up to a second.

The following procedure describes how to configure inputs as a Failover Group in Zixi Broadcaster.

➔ To create a Failover Group:

1. On the Input screen of Zixi Broadcaster, select the checkboxes of the relevant identical input streams.
2. At the top of the inputs list, click the **Marked** drop-down menu and then click Failover Group.

The screenshot shows the Zixi Broadcaster interface with the 'Inputs' tab selected. The top navigation bar includes STATUS, INPUTS, OUTPUTS, ADAPTIVE, VOD, FILES, TRANSCODER, SETTINGS, EVENT LOG, MATRIX, and LOGOUT. The main content area displays a table of inputs with columns for Status, ID, Type, Source, Bitrate[kbps], Up Time, TR 101 290, and Error. A dropdown menu is open over the table, showing options: Start, Stop, Delete, Save, Reset stats, and Failover group. The 'Failover group' option is highlighted.

Status	ID	Type	Source	Bitrate[kbps]	Up Time	TR 101 290	Error	Actions
Connected	test0	Push	10.9.33.55	26112	00:52:46	P1: P2:	None	[Start] [Stop] [Delete] [Save] [Reset stats] [Failover group]
Connected	test1	Push	10.9.33.55	25609	00:52:46	P1: P2:	None	[Start] [Stop] [Delete] [Save] [Reset stats] [Failover group]
Connected	test10	Push	10.9.33.55	23065	00:52:46	P1: P2:	None	[Start] [Stop] [Delete] [Save] [Reset stats] [Failover group]
Connected	test100	Push	10.9.33.55	24047	00:52:45	Off	None	[Start] [Stop] [Delete] [Save] [Reset stats] [Failover group]

Broadcaster Inputs

Broadcaster Actions on Multiple Inputs

3. The **Create a Failover Group** window opens:

Stream	Backup	
bbb_1080p_5mbps	<input type="checkbox"/>	+
bbb_1080p_5mbps_FILE	<input type="checkbox"/>	x
FeederStream	<input type="checkbox"/>	x


4. In the **Stream ID** field, type a new name for Failover Group. This name will appear in the list of Inputs.
5. In the **Max Outputs** field, type the number of desired concurrent outputs that can use the **Failover Group**. Default: Unlimited.
6. In the **Search Window** field, type the timeframe in which the system can search for the relevant packets in a matching stream. If there is a latency difference between the streams in the group, the **Search Window** value should be higher than the latency difference between the streams.
7. In the **Max Bitrate** field, specify the maximum bitrate of the stream. Default: 8000. This is used for internal memory allocation and will not affect the transmitted bitrate. Recommended: double the bitrate of the highest bitrate stream.
8. In the **Max Latency** field, specify the buffer size that Zixi Broadcaster will keep for error correction. For example, 6000 milliseconds would ensure that the stream is protected for six seconds of errors in the network. Default: 6000.
9. Under **Candidates**, if you want to configure one or more of the streams as back up, select the checkbox next to the relevant stream. Backup streams will be used only when all the "Primary" streams are down.
10. Configure additional parameters as required.
11. Click **OK**.

The Hitless Failover Group is added to the list of inputs, listing the sub-streams that are part of the group. The system will automatically detect the offset between the sub-

Broadcaster Inputs

Encrypting an Input Stream in Zixi Broadcaster

streams and display it in milliseconds under Offset (ms).

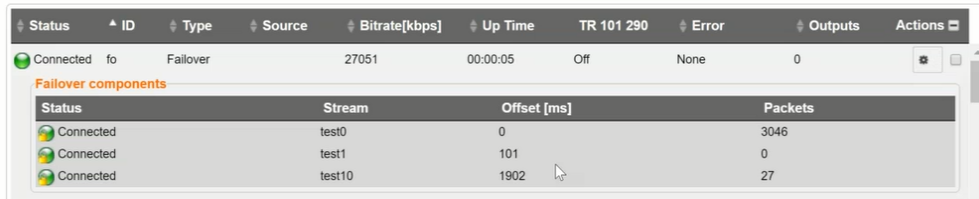

Status	ID	Type	Source	Bitrate[kbps]	Up Time	TR 101 290	Error	Outputs	Actions
Connected	fo	Fallover		27051	00:00:05	Off	None	0	
Fallover components									
Status	Stream	Offset [ms]	Packets						
Connected	test0	0	3046						
Connected	test1	101	0						
Connected	test10	1902	27						

Encrypting an Input Stream in Zixi Broadcaster

You can encrypt a specific input stream using static key AES scrambling encryption (AES 128, AES 192, AES 256). If the stream has been encrypted at the source, it can be encrypted by Zixi Broadcaster only after its decryption (See: [Decrypting an Input Stream in Zixi Broadcaster](#)). The stream encryption prevents any further processing, such as analysis, transcoding, etc. It is also possible to encrypt a UDP stream dynamically using DTLS. DTLS encryption can be configured on any Input or Output UDP port on the Zixi Broadcaster. This feature is activated and configured in the **Settings** page. For more information, see [TRANSCODER](#) section.

➔ To encrypt an input stream in Zixi Broadcaster:

1. In **Inputs** screen, click **+New Input**.
2. Select the relevant input type.
3. Fill in the stream parameters.
4. At the bottom, select the **Enable Encryption** checkbox.
5. In the **Encryption Type** field, select **AES 128**, **AES 192**, **AES 256** for fixed encryption.
6. In the **Encryption Key** field, enter your own key or click **Generate** to generate a key by the system. The exact key should be used to decrypt the stream on the other end.

Broadcaster Inputs

Decrypting an Input Stream in Zixi Broadcaster

Add new input stream [X]

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP

Stream parameters

Password:

Latency [ms]:

Point to point:

ID of high priority source:

Disable P2P fallback:

Enable time shift

Transmit as multicast

Decrypt stream

Enable encryption

Stream will be encrypted after decryption (where applicable).
Encryption will prevent stream processing (e.g. transcoding).

Encryption type:

Encryption key:

Recording parameters

7. Click **OK**.

Decrypting an Input Stream in Zixi Broadcaster

Any stream that has been encrypted using standard AES static key can be decrypted in Zixi Broadcaster. You can configure the decryption of a specific stream by entering the decryption key.

➔ To decrypt an input stream in Zixi Broadcaster:

1. In **Inputs** screen, click **+New Input**.
2. Select **Push** or **Pull**.
3. Fill in the input details.
4. At the bottom, select the **Decrypt Stream** checkbox.
5. In the **Decryption Type** field, select **AES 128**, **AES 192**, **AES 256** for fixed key.
6. In the **Decryption Key** field, enter the exact same key that was used to encrypt the stream.

Broadcaster Inputs

Demuxing an MPTS Stream

Add new input stream ✕

Stream ID:

Max Outputs:

Show in Matrix:

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP

Stream parameters

Password:

Latency [ms]:

Point to point:

ID of high priority source:

Disable P2P fallback:

Enable time shift

Transmit as multicast

Decrypt stream

*Automatic encryption does not require manual settings.

Decryption type:

Decryption key:

Enable encryption


Recording parameters

7. Click **OK**.

Demuxing an MPTS Stream

MPTS (Multi Program Transport Streams) streams can be demuxed into single SPTS (Single Program Transport Streams) streams. MPTS demuxing is available for Pull, Push, UDP, and File input streams. From the various programs in the MPTS stream, you can select specific programs, which will be turned into individual SPTS input streams.

➔ To demux an MPTS stream:

1. Create a Pull/Push/UDP/File input stream using an MPTS stream.
2. In the **Inputs** page, click the newly created input stream that you want to demux.
3. Click the action  button on the right end of the selected row and then **Edit**. The Edit input stream name window is displayed.
4. Select the **Demux MPTS** checkbox.
A list of included programs is displayed.

Broadcaster Inputs

Demuxing an MPTS Stream

Program#	Name	Provider	Assigned input
1			
4			
5			
6			
7			
8			
9			
10			
11			
12			
..			

5. Click **Add Program** on the program that you want to create a separate SPTS input stream.

An **Add Input** screen opens with the new SPTS input details, including a suggested **Stream ID**, the original MPTS as a Source Stream and the relevant **Program** number.

Program #4 of stream MPTS_example

Stream ID: MPTS_example_program

Max Outputs: Unlimited

Show in Matrix:

Stream parameters

Source stream: MPTS_example

Program: 4

Max bitrate [kbps]:

Enable time shift

Transmit as multicast

Enable encryption

Recording parameters

Ok Cancel

6. In the **Max Bitrate** field, specify the maximum bitrate of the stream. This is used for internal memory allocation and will not affect the transmitted bitrate. Recommended: double the bitrate of the highest bitrate stream.
7. Configure additional parameters as necessary.
8. Click **OK**.

The channel is assigned an input:

Broadcaster Inputs

Demuxing an MPTS Stream

Push Pull UDP Delayed File RTMP RTSP HLS TS over HTTP

Stream parameters

Path: ...

Enable time shift

Transmit as multicast

Enable encryption

Demux MPTS

Program#	Name	Provider	Assigned input	
1				+ Add program
4			MPTS_example_program_4	<input type="text"/> <input type="text"/>
5				+ Add program
6				+ Add program
7				+ Add program

- Repeat steps 5-8 to add more programs.
- Click **OK**.

The newly created MPTS input stream and the related SPTS input streams will appear in the Inputs list.

STATUS INPUTS OUTPUTS ADAPTIVE VOD FILES TRANSCODER SETTINGS EVENT LOG MATRIX LOGOUT

Inputs

Status	ID	Type	Source	Bitrate[kbps]	Up Time	TR 101 290	Error	Outputs	Actions
Connecting	mpts2	Pull	demo.zixi.com:2088	0	00:00:00	Off	No Source	0	<input type="button" value="x"/> <input type="button" value="p"/>
Connected	MPTS_example	File	Curtis/MC_HD_Audio_Channels.ts	19025	04:01:31	Off	None	0	<input type="button" value="+"/> <input type="button" value="x"/>
Connected	MPTS_example_program...	SPTS	MPTS_example.Program#4	497	00:07:15	Off	None	0	<input type="button" value="+"/> <input type="button" value="x"/>
Connected	Music_Choice_MPTS	File	Curtis/MC_HD_Audio_Channels.ts	19010	136:38:52	P1: P2:	None	1	<input type="button" value="+"/> <input type="button" value="x"/>

Broadcaster Outputs

Zixi Broadcaster supports the following output types:

- **UDP** – Target is a UDP or RTP stream, over unicast or multicast.
- **RTMP** – Real Time Messaging Protocol streams can be played on systems that accept this protocol as input. Originally designed to enable Adobe® Flash® streams to be sent between a server and a client, RTMP has become a popular protocol for streaming into content-delivery networks (CDNs).
- **RTMPS** – RTMP over a TLS/SSL connection.
- **Pull Stream** – Pull streams are Zixi protocol streams destined for Zixi Receivers. Zixi Broadcaster can offer status and statistics for a stream that is being pulled from it by another device. **You normally do not need to set up a Pull output stream in Zixi Broadcaster.** If your application uses Zixi Receiver, you should configure the stream as input on Zixi Receiver and point it to the IP address and output port (default 2077) of the Zixi Broadcaster. Zixi Receiver will pull the stream and automatically create the proper output definition in the Zixi Broadcaster.
- **Push Stream** – Push streams are Zixi protocol streams destined for other Zixi Broadcasters and “Accept mode” Zixi Receivers.
- **TCP** - TCP protocol provides reliable transmission guarantee for no loss of frame. Its bandwidth probing and congestion control will attempt to use all of the available bandwidth between the server and client, fetching content as quickly as possible while being friendly to other (TCP) traffic on the same links. Output streams can be pushed to one Zixi Broadcasters or Zixi Receiver.
- **HTTP Push** - The HTTP Push output stream can be encapsulated in HLS or DASH. The source of the output stream is a predefined adaptive group that has been configured in the **Adaptive Groups** screen. The configuration of the stream includes the option to delete outdated stream fragments on the server. Output streams can be pushed to one Zixi Broadcasters or Zixi Receiver.
- **S3 Bucket** - The HTTP output stream (HLS or DASH) can be pushed to an AWS S3 Bucket. The native S3 support includes the ability to configure the S3 authentication credential, including the Region, Access Key, and Secret Key.
- **RIST** - The RIST output can be push streams or have them pulled to/from a RIST-enabled device. RIST seeks to provide reliable, high performance media transport by using UDP at the transport layer to avoid the inefficiencies of TCP, then layering on top Forward Error Correction and Retransmits to add the reliability inherently absent from UDP.

When Zixi Receiver pulls a stream, a Pull stream definition is generated automatically in Zixi Broadcaster, the stream is identified in the Name and Destination columns of Zixi Broadcaster with the ID and IP address of the Zixi Receiver that pulls the stream.

Broadcaster Outputs

Adding Outputs

Automated Output Configuration with Output Templates

Instead of manually creating an output and then connecting the output to an input, you can define output templates with rules for automatic creation of outputs with predefined settings. The template includes an Input pattern. When an input pattern matches the pattern of an incoming input stream, the output is created automatically. For more information about Output Templates, see Using Output Templates.

Adding Outputs


Zixi Broadcaster enables you to add various types of outputs. When you create a new output, select the output type and then fill in the fields that are applicable for that output type.

Adding UDP Outputs

This enables the Broadcaster to send a UDP stream. The UDP stream is not protected by the Zixi protocol. The UDP streams can be one of the following types:

- UDP – plain UDP
- RTP – Real-Time Transport Protocol
- RTP + SMPTE 2022 FEC - SMPTE 2022 standard with Forward Error Correction

➔ To Create a UDP Output:

1. In the Zixi Broadcaster **Outputs** page, click . The **New output** window is displayed.

Broadcaster Outputs

Adding Outputs

New output

Output Name:

Input Stream:

Show in Matrix:

UDP RTMP Pull Push TCP HTTP Push AWS RIST

Output parameters

Host:

Port: TTL:

Smoothing [ms]:

RTP:

Bind to IP:

Local port:

ReMuxing

Enable decryption

Enable IFB/Talkback

Ok Cancel

2. Type in the unique identifier for this output in the **Output Name**.
3. Select an **Input Stream** to be made available on this output from the drop-down list.
4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
5. Select **UDP**.
6. Specify the **Output parameters** (see Output Stream Parameters Table).
7. In the **Host** field, specify the IP address or URL of the stream destination.
8. In the **Port** field, specify the port of the destination.
9. If you want to remux the stream to CBR (used for professional IRDs) in order to avoid bandwidth waste, select **Remuxing** and configure the respective parameters (see Output Stream Parameters Table).
10. Click **OK**.


The new UDP Output with its settings is created and now appears on the **Outputs** screen.

Output Stream Parameters Table

Parameter	Description
Output Parameters	

Broadcaster Outputs

Adding Outputs

Host	Specify the destination IP address or URL.
Port	Specify the target UDP port.
TTL	Specify the time-to-live (TTL). Used mainly to limit the range (or “scope”) of a multicast transmission. Leaving it as blank uses the default value specified by the operating system.
Smoothing [mms]	Enables transmission of the output at the correct rate. Required when the receiving device is sensitive and can’t lock on to the stream (in such a case, the recommended latency is 100 - 1000 ms).
RTP	Enables use of the Real-time Transport Protocol.
	Disables the FEC or specify the type of FEC matrix to D1/ D2.
SMPTE 2022 FEC:	<div style="border: 1px dashed gray; padding: 5px;"> This setting can be modified without interrupting an existing stream.</div>
Bind to IP	Select from the drop-down list the local IP address to be used for this Output, OR select <i>Any</i> to enable any IP to be used.
Local Port	Specify from which local port to source the stream, if desired (instead of randomly chosen by the operating system).
ReMuxing	Select this checkbox to enable remuxing from VBR MPEG-TS to MPEG-TS CBR (used for professional IRDs).
Remux to bitrate [kbps]:	Specify the CBR bitrate to target for a remuxed stream.
Buffer Size [ms]	Specify the size of the buffer that will be used for the remixing. A larger buffer increases the quality, but also increases latency.
No NULL Packets	Select this option to re-multiplex the stream to CBR but remove the NULL packets in order to maintain low bitrate.
Enable Decryption	Select this checkbox to decrypt an encrypted stream.
Decryption type	<p>If the stream has been encrypted, you can decrypt through the output by selecting this checkbox and specifying the type of encryption that was used.</p> <p>Select Automatic to decrypt a stream that has been encrypted using Automatic encryption.</p> <p>Only if the stream has not been encrypted, select None (default).</p>

Broadcaster Outputs

Adding Outputs

Important Notice: if the stream has been encrypted you must decrypt it in the output.

Decryption key If the decryption type includes a key, enter the key to decrypt the stream during output.

Enable IFB/Talkback Select this checkbox to enable IFB/Talkback for one-way communication from the director or assistant director to on-air talent or a remote location. Selecting the checkbox allows the decoder with a Zixi Receiver to send audio back to the encoder with a Zixi Feeder. This offers the ability to, for example, give audio feedback to the camera operator.

Port The port that will be used to send the audio feedback.

Broadcaster Outputs

Adding Outputs

Adding RTMP and RTMPS Outputs

Real Time Messaging Protocol streams can be played on systems that accept this protocol as input. Originally designed to enable Adobe® Flash® streams to be sent between a server and a client, RTMP has become a popular protocol for streaming into content-delivery networks (CDNs).



To create an RTMPS output, select the RTMP output option but make sure `rtmps://` url is used in the URL field.



SCTE-35 markers in MPEG-TS streams trigger OnCuePoint call function in RTMP.

➔ To create an RTMP Output:

1. In the Zixi Broadcaster **Outputs** page, click [+ New Output](#). The **New output** window is displayed.

New output

Output Name:

Input Stream:

Show in Matrix:

UDP RTMP Pull Push TCP HTTP Push AWS RIST

Output parameters

URL (rtmp://host:[port]/app/stream):

Backup URL:

Stream name:

Username:

Password:

Bitrate [kbps]:

Reconnect [sec]:

Send timecode:

Disconnect if inactive:

Ignore TLS certificate:

Enable decryption

Ok Cancel

Broadcaster Outputs

Adding Outputs

2. Type the unique identifier for this output in the **Output Name**.
3. Select an **Input Stream** to be made available on this output from the drop-down list.
4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
5. Select **RTMP**.
6. Specify the **Output parameters** (see Output Stream Parameters Table).
7. Click **OK**.

The new RTMP Output with its settings is created and now appears on the screen.

Output Stream Parameters Table

Parameter	Description
Output Parameters	
URL	Specify the destination Stream URL according to the following format: rtmp://host:[port]/app. You can define RTMPS clients with the proven security of a secure socket layer (SSL), by using the rtmps:// url. Note that Facebook currently supports RTMPS streams only.
Backup URL	Enter a backup URL (fallback mode) – will be used in case the primary server is not responsive.
Stream Name	Specify the unique name for the stream that the RTMP server at the other end of the connection expects.
Username	Specify the Username to authenticate on the remote RTMP server
Password	Specify the string that is used for authorization on the remote RTMP server.
Bitrate (kbps)	Specify the actual bitrate in kbps or the maximum stream bitrate in case of a VBR stream.
Reconnect (sec)	If the stream drops, this value represents the time between reconnection attempts (in seconds). Default: 5.
Send Timecode	Converts the MPEG-TS SEI section to RTMP ONFI command (pass the encoder timecodes to the RTMP server)
Disconnect if inactive	Select this checkbox to disconnect if the stream is not active for 30 seconds.
Ignore TLS certificate errors	Select this option when streaming to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.

Broadcaster Outputs

Adding Outputs

Enable Decryption	Select this checkbox to enable decryption of an encrypted stream.
Decryption type	<p>If the stream has been encrypted, you can decrypt through the output by selecting this checkbox and specifying the type of encryption that was used.</p> <p>Select Automatic to decrypt a stream that has been encrypted using Automatic encryption.</p> <p>Only if the stream has not been encrypted, select None (default).</p> <p>Important Notice: if the stream has been encrypted you must decrypt it in the output.</p>

Adding Pull Outputs

➔ To Create a Pull Output:

1. In the Zixi Broadcaster **Outputs** page click [+ New Output](#). The **New Output** window is displayed.

New output

Output Name:

Input Stream:

Show in Matrix:

UDP RTMP Pull Push TCP HTTP Push AWS RIST

Output parameters

Stream ID:

Remote ID:

Password:

Latency [ms]: Remote configuration

Enable encryption

Enable IFB/Talkback

Ok Cancel

2. Type in the unique identifier for this output in the **Output Name**.
3. Select an **Input Stream** to be made available on this output from the adjacent drop-down list.
4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.

Broadcaster Outputs

Adding Outputs

5. Select **Pull**.
6. Enter the **Output Parameters** (see Output Stream Parameters Table).
7. Click **OK**.

The new Pull Output with its settings is created and now appears on the screen.


Output Stream Parameters Table


Parameter	Description
Output Parameters	
Stream ID	Specify the unique Stream ID that the remote Zixi Receiver/Broadcaster expects (recommended – identical to 'Input Stream').
Remote ID	Specify the Zixi Receiver/Broadcaster ID (shown in the Zixi Receiver/Broadcaster Status window) that will be allowed to pull the stream.
Password	Specify a string that can be used to authenticate that the Zixi Receiver is authorized to pull this stream (Optional).
Latency [ms]	Specify the buffer size that Zixi Broadcaster will be able to maintain for error correction. For example, 6000 milliseconds would ensure that the stream is protected for six seconds of errors in the network. Default: Remote configuration. Remote configuration – use the latency configured in the Zixi Receiver/Broadcaster. Otherwise use a value to override the value configured in the Zixi Receiver/Broadcaster.
Enable Encryption	Select this checkbox to encrypt the Output stream.
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256). Click Generate to generate an encryption key or enter another encryption key.
Enable IFB/Talkback	Select this checkbox to enable IFB/Talkback for one-way communication from the director or assistant director to on-air talent or a remote location. Selecting the checkbox allows the decoder with a Zixi Receiver to send audio back to the encoder with a Zixi Feeder. This offers the ability to, for example, give audio feedback to the camera operator.
Port	The port that will be used to send the audio feedback.

Adding Push Outputs

Output streams can be pushed to one or more Zixi Broadcasters and Zixi Receivers. You can specify multiple destinations (Broadcasters/Receivers) by adding them in the Links section. You can also split a single stream using multiple links and then bond them into a single stream in target Zixi Broadcaster using the Bond Links feature. For each of these links, you can specify the max bitrate that can be used. In addition, some links may be specified as backups. The backup links will be used if the bandwidth across all the non-backup links are not enough for the stream (i.e. if a non-backup link is not available, it will not use the backup). Only if the accumulated bandwidth of non-backup links is not enough, then the Broadcaster will stream to a backup link.

➔ To Create a Push Output:

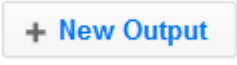1. In the Zixi Broadcaster **Outputs** page, click . The **New Output** window is displayed.

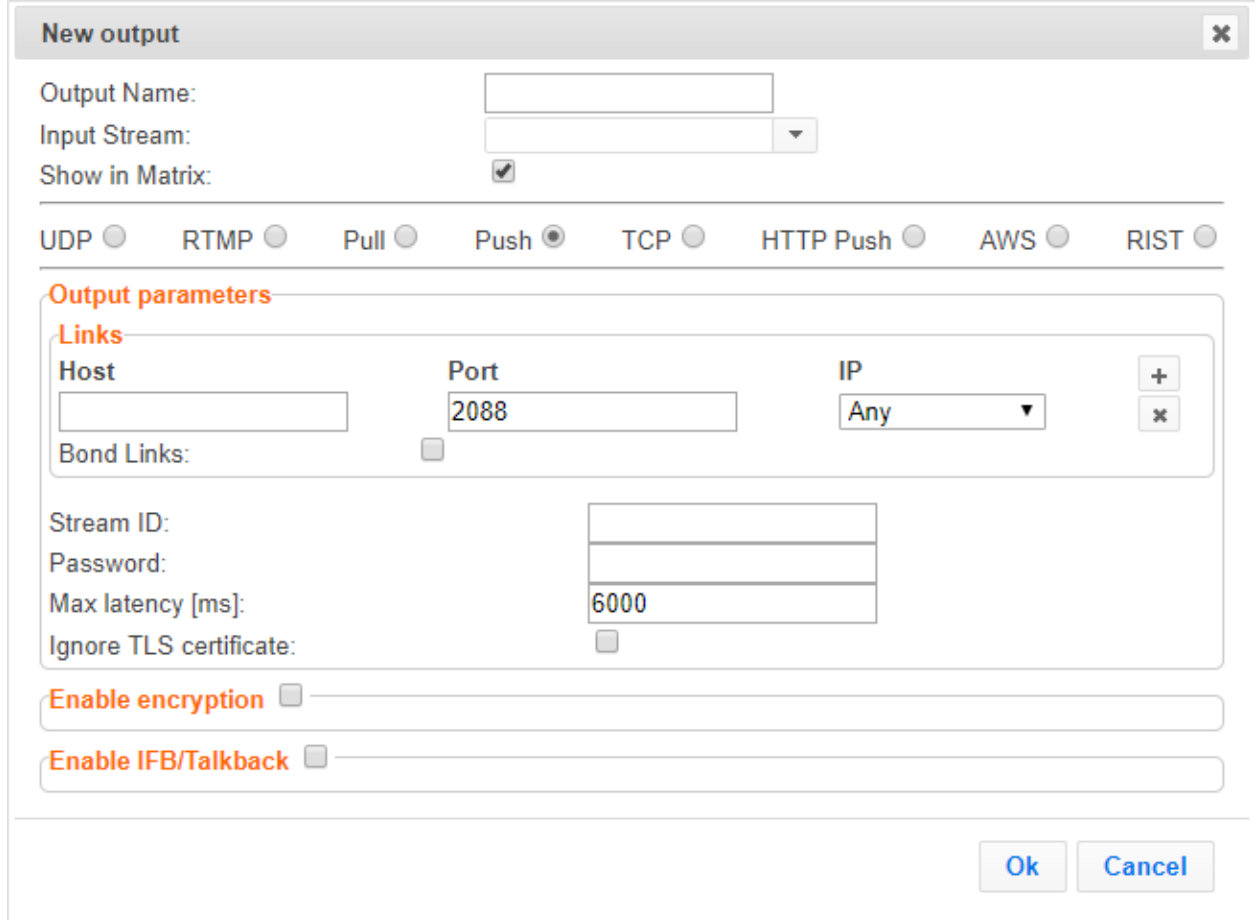

2. Type in the unique identifier for this output in the **Output Name**.
3. Select an **Input Stream** to be made available on this output from the adjacent drop-down list.

Broadcaster Outputs

Adding Outputs

4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
5. Select **Push**.
6. Do one of the following:
 - **Stream to multiple destinations** - you can stream the same identical stream to multiple destinations by entering the destination parameters and then clicking the "+" button to add another destination (see **Output Stream Parameters Table**).
 - **Bonded link to a single destination** - you can split the stream into multiple links, which will be forwarded to a single Zixi Broadcaster by selecting the **Bond Links** checkbox (see **Using Network Bonding for Hitless Failover**).
7. Enter additional parameters as necessary (see Output Stream Parameters Table)
8. Click **OK**. The new Push Output with its settings is created and now appears on the screen.

Output Stream Parameters Table

Parameter	Description
Output Parameters	
Links	
Host	The destination host for the push stream. Note: additional failover destinations can be added by clicking the adjacent "+" button.
Port	Specify the ports to listen on for Push streams. Default: 2088.
IP	Specify the local IP address.
Max Bitrate (for Bond Links enabled)	Relevant for Bond Links option. Specify the max bitrate in Kbps for the specific link.
Bond Links	Click this checkbox to split the stream into multiple links, which will be forwarded to a single Zixi Broadcaster.
Backup (for Bond Links enabled)	Relevant for Bond Links option. Select this checkbox to define the link as a backup. The backup will be used only if the accumulated bandwidth of the non-backup links is not sufficient.
Stream ID	Specify the unique Stream ID that the remote Zixi Broadcaster expects.

Broadcaster Outputs

Adding Outputs

Password	Optional - Specify a string to be used at the receiving Zixi Broadcaster to authenticate that the pushing Broadcaster is allowed to push this stream.
Max Latency [ms]	Specify the buffer size that Zixi Broadcaster will keep for error correction. For example, 6000 milliseconds would ensure that the stream is protected for six seconds of errors in the network. Default:6000
Ignore TLS certificate errors	Select this option when streaming to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Enable Encryption	Select this checkbox to encrypt the Output stream.
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256). Click Generate to generate an encryption key or enter another encryption key.
Enable IFB/Talkback	Select this checkbox to enable IFB/Talkback for one-way communication from the director or assistant director to on-air talent or a remote location. Selecting the checkbox allows the decoder with a Zixi Receiver to send audio back to the encoder with a Zixi Feeder. This offers the ability to, for example, give audio feedback to the camera operator.
Port	The port that will be used to send the audio feedback.

Broadcaster Outputs

Adding Outputs

Adding TCP Outputs

TCP protocol provides reliable transmission guarantee for no loss of frame. Its bandwidth probing and congestion control will attempt to use all of the available bandwidth between the server and client, fetching content as quickly as possible while being friendly to other (TCP) traffic on the same links. The TCP output can push the stream directly to a TCP socket or to an HTTP server.

➔ To Create a TCP Output:

1. In the Zixi Broadcaster **Outputs** page, click [+ New Output](#). The **New Output** window is displayed.

The screenshot shows the 'New output' dialog box. It has a title bar with 'New output' and a close button. The main area contains the following elements:

- Output Name:** A text input field.
- Input Stream:** A dropdown menu.
- Show in Matrix:** A checked checkbox.
- Protocol Selection:** A row of radio buttons for UDP, RTMP, Pull, Push, TCP (selected), HTTP Push, AWS, and RIST.
- Output parameters:** A section with a title bar containing:
 - Host:** A text input field.
 - Port:** A text input field.
 - HTTP:** A checked checkbox.
 - Enable decryption:** An unchecked checkbox.
- Buttons:** 'Ok' and 'Cancel' buttons at the bottom right.

2. Type in the unique identifier for this output in the **Output Name**.
3. Select an **Input Stream** to be made available on this output from the adjacent drop-down list.
4. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
5. Select **TCP**.
6. Specify the Output parameters (see **Output Stream Parameters** Table).
7. If the target is an HTTP server, select the **HTTP** checkbox. In this case, HTTP headers will be added to the stream.
8. Enter additional parameters as necessary (see Output Stream Parameters Table).
9. Click **OK**. The new TCP Output with its settings is created and now appears on the screen.

Broadcaster Outputs

Adding Outputs

Output Stream Parameters Table

Parameter	Description
Output Parameters	
Host	The destination host for the stream.
Port	Specify the ports to listen on for Push streams. Default: 2088.
HTTP	If the target is an HTTP server, select the HTTP checkbox. In this case, HTTP headers will be added to the stream.
Enable Decryption	Select this checkbox to enable decryption of an encrypted stream. If the stream has been encrypted, you can decrypt through the output by selecting this checkbox and specifying the type of encryption that was used.
Decryption type	Select Automatic to decrypt a stream that has been encrypted using Automatic encryption. Only if the stream has not been encrypted, select None (default). Important Notice: if the stream has been encrypted you must decrypt it in the output.
Decryption key	Enter the decryption key to decrypt the encrypted stream.

Adding HTTP Push Outputs

 
The HTTP Push output stream can be encapsulated in HLS or DASH. The source of the output stream is a predefined adaptive group that has been configured in the **Adaptive Groups** screen. The configuration of the stream includes the option to delete outdated stream fragments on the server. SCTE-35 markers in the source input will be preserved and used to segment the stream for both HLS and DASH encapsulation. Output streams can be pushed to one Zixi Broadcaster or Zixi Receiver.

The path to the destination can be formed in one of the following ways:

- **Full path** – in this option the path would be constructed as follows: `<base url>/<path>/<file>?<additional params may be also with path and file>`
- **Path in parameters** - in this option the path would be constructed as follows: `<base url>?<additional params may be also with path and file>`
- **Flat path** - in this option the path would be constructed as follows: `<base url>/<path>_<file>?<additional params may be also with path and file>`. Any "/" in path should be replaced with "_"

Low Latency HLS - Zixi Broadcaster supports low latency HLS delivery using chunked transfer encoding, which starts sending an HTTP response as chunks of data when they are ready before the complete response is available. Chunked transfer encoding can be used with transport stream (TS) segments and with fragmented MP4 (fMP4). For low latency HLS and DASH, Zixi Broadcaster must be used as an origin server. To enable low latency HLS and DASH, select **Enable HLS Fast playback** on **Settings > Live Protocols** screen.

➔ To Create an HTTP Push Output:

1. In the Zixi Broadcaster **Outputs** page, click . The **New Output** window is displayed.

Broadcaster Outputs

Adding Outputs

2. Select the **HTTP Push** option (radio button).
3. Type in the unique identifier for this output stream in the **Output Name**.
4. Select an **Input Adaptive Group** to be made available on this output from the adjacent drop-down list. To create an Adaptive Group, see [Adaptive Groups](#).
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: not selected.
6. Enter the **Output Parameters** (see Output Stream Parameters Table).
7. Click **OK**.

Output Stream Parameters Table

Parameter	Description
Output Parameters	
Encapsulation Options	<ul style="list-style-type: none">• HLS Encapsulation - the output stream, which includes all the streams in the selected Adaptive group, will be encapsulated in HTTP Live Streaming format.
	<ul style="list-style-type: none">• Dash Encapsulation - the output stream, which includes all the streams in the selected Adaptive group, will be encapsulated in MPEG DASH format.

Broadcaster Outputs

Adding Outputs

Depending on the selection in the **Segment Path** field below, this field should include the following:

- Target URL**
- **Full path** – `<base url>/<path>/<file>`
 - **Path in parameters** - in this option the path would be constructed as follows: `<base url>`
 - **Flat path** - in this option the path would be constructed as follows: `<base url>/<path>_<file>`

Depending on the selection in the **Segment Path** field below, this field should include the following:

- Additional URL parameters**
- **Full path** – `?<additional params may be also with path and file>`
 - **Path in parameters** - `?<additional params may be also with path and file>`
 - **Flat path** - `?<additional params may be also with path and file>`. Any "/" in path should be replaced with "_"

URL parameters support macros as follows:

- %PATH% - file path as it appears in the playlist
- %FILE% - file name

Delete outdated

stream fragments on server Select this checkbox to delete any outdated stream fragments from the server.

Select one of the following path segmentation types:

- Segment Path**
- **Full path** – in this option the path would be constructed as follows: `<base url>/<path>/<file>?<additional params may be also with path and file>`
 - **Path in parameters** - in this option the path would be constructed as follows: `<base url>?<additional params may be also with path and file>`
 - **Flat path** - in this option the path would be constructed as follows: `<base url>/<path>_<file>?<additional params may be also with path and file>`. Any "/" in path should be replaced with "_"

Ignore TLS certificate errors

Select this option when streaming to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.

Authorization

Select this checkbox if your destination server requires authorization credentials to connect.

Broadcaster Outputs

Adding Outputs

Select one of the following authorization methods:

Method	<ul style="list-style-type: none">• Basic authorization• Digest authorization• OAuth2 authorization
---------------	---


Username	Type the username
-----------------	-------------------


Password	Type the password
-----------------	-------------------

Adding AWS Outputs

The HTTP output stream, which is encapsulated in HLS or DASH/fMP4 HLS can be pushed to either an AWS S3 Bucket or to an AWS Elemental MediaStore. The native AWS support includes the ability to configure the S3 authentication credential, including the Region, Access Key, and Secret Key.

➔ To Create an AWS Output:

1. In the Zixi Broadcaster **Outputs** page, click . The **New Output** window is displayed.

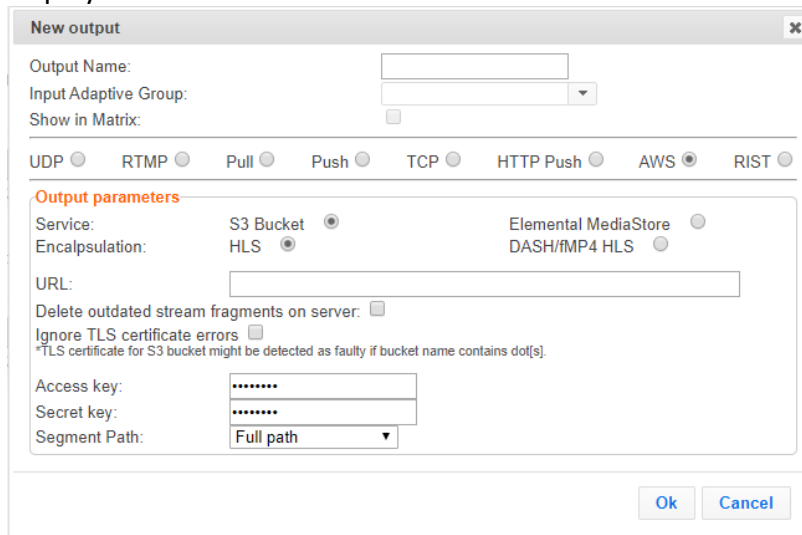

2. Select the **AWS** option (radio button).
3. Type in the unique identifier for this output stream in the **Output Name**.
4. Select an **Input Adaptive Group** to be made available on this output from the adjacent drop-down list. To create an Adaptive Group, see [Adaptive Groups](#).
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: not selected.
6. Enter the **Output Parameters** (see Output Stream Parameters Table).
7. Click **OK**.

Broadcaster Outputs

Adding Outputs

Output Stream Parameters Table

Parameter	Description
Output Parameters	
Service	Select one of the following options: <ul style="list-style-type: none">• S3 Bucket - the output stream will be pushed to the specified S3 Bucket.• Elemental Media Store - the output stream will be pushed to the specified AWS Elemental MediaStore.
Encapsulation	<ul style="list-style-type: none">• HLS Encapsulation - the output stream, which includes all the streams in the selected Adaptive group, will be encapsulated in HTTP Live Streaming format.• Dash Encapsulation - the output stream, which includes all the streams in the selected Adaptive group, will be encapsulated in MPEG DASH format.
URL	<p>The URL address of the destination host for the S3 Bucket or the AWS Elemental MediaStore.</p> <p>The path to the destination can be formed in one of the following ways according to the option selected in the Segment Path field below:</p> <ul style="list-style-type: none">• Full path – in this option the path would be constructed as follows: <code><base url>/<path>/<file>?<additional params may be also with path and file></code>• Path in parameters - in this option the path would be constructed as follows: <code><base url>?<additional params may be also with path and file></code>• Flat path - in this option the path would be constructed as follows: <code><base url>/<path>_<file>?<additional params may be also with path and file></code>. Any "/" in path should be replaced with "_"
Delete outdated stream fragments on server	Select this checkbox to send delete messages to S3/AWS Elemental MediaStore to delete the outdated stream fragments from the servers.
Ignore TLS certificate errors	Select this option when streaming to a trusted server that does not have a valid certificate. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access key	Enter your AWS S3 or AWS Elemental MediaStore Access key.
Security key	Enter your AWS S3 or AWS Elemental MediaStore Security key.

Select one of the following path segmentation types:

Segment Path

- **Full path** – in this option the path would be constructed as follows: `<base url>/<path>/<file>?<additional params may be also with path and file>`
 - **Path in parameters** - in this option the path would be constructed as follows: `<base url>?<additional params may be also with path and file>`
 - **Flat path** - in this option the path would be constructed as follows: `<base url>/<path>_<file>?<additional params may be also with path and file>`. Any "/" in path should be replaced with "_"
-
-

Adding RIST Outputs

The RIST output can be push streams or have them pulled to/from a RIST-enabled device. RIST seeks to provide reliable, high performance media transport by using UDP at the transport layer to avoid the inefficiencies of TCP, then layering on top Forward Error Correction and Retransmits to add the reliability inherently absent from UDP.

Zixi supports the following RIST profiles:

- **Simple Profile (PUSH only)** - The RIST Simple Profile provides best-in-class packet protection, as well as support for multi-link bonding and seamless switching.
- **Main Profile (PUSH/PULL)** – The RIST Main Profile builds upon the features of the Simple Profile to provide backwards compatibility, while opening the door for additional features, including:
 - **Encryption and authentication** - RIST Main Profile uses industry-standard DTLS or PSK with a variety of available cyphers to ensure the most up-to-date protection, while being flexible to accommodate local legal regulations. Support for pre-shared keys is also included, which makes RIST Main Profile compatible with one-to-many environments such as satellite or multicast distribution.
 - **Native tunneling and multiplexing** - the ability to combine multiple Simple Profile RIST streams into one single connection, optionally with one single encryption and authentication step, using industry-standard GRE over UDP.
 - **Bandwidth optimization** - by deleting NULL packets at the source and re-inserting them at the destination.
 - **Support for high bit rate streams** - The RIST Main Profile includes an RTP header extension which increases the sequence number size to 32-bits, and therefore increases the maximum size of retransmission buffers, and thus opens the door for higher bitrate streams, such as lightly compressed (e.g. JPEG 2000, Tico) and uncompressed video.


Broadcaster Outputs

Adding Outputs

Contact your Zixi representative to learn more about interoperability testing between Zixi Broadcaster and 3rd party devices. More details about RIST can be found at www.rist.tv

➔ To Add a RIST Output:

1. In the Zixi Broadcaster **Outputs** page, click **+ New Output**. The **New Output** window is displayed.

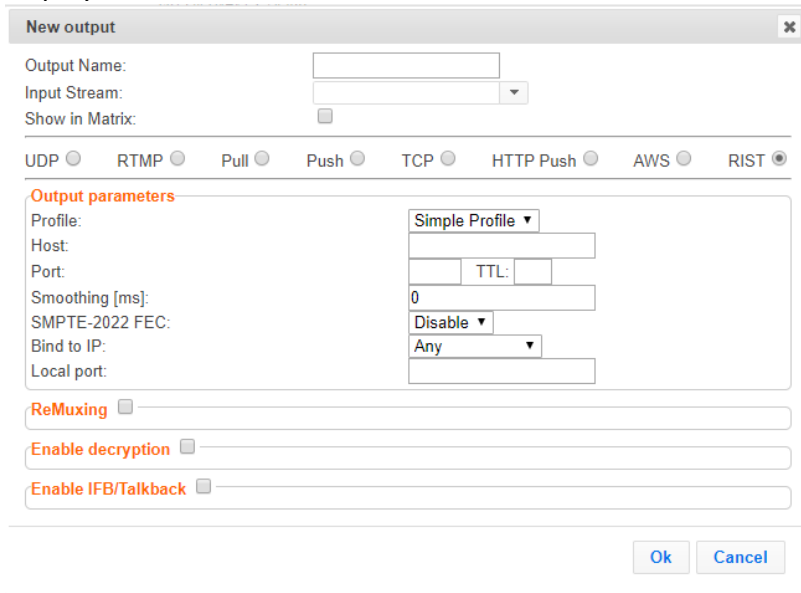

2. Select the **RIST** option (radio button).
3. Type in the unique identifier for this output stream in the **Output Name**.
4. Select an **Input Stream** to be made available on this output from the adjacent drop-down list.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: not selected.
6. Enter the **Output Parameters** (see Output Stream Parameters Table).
7. Click **OK**.


The new RIST Output with its settings is created and now appears on the Outputs screen.

Output Stream Parameters Table

Parameter	Description
Output Parameters	
	Select one of the following RIST profiles that matches the input stream:
Profile	<ul style="list-style-type: none">• Simple Profile (default)• Main Profile

Broadcaster Outputs

Adding Outputs

Type (Main Profile)	Select the stream direction: <ul style="list-style-type: none">• Push• Pull
Host	Specify the destination IP address or URL of the host to which the stream will be pushed.
Port	Specify the target UDP port.
TTL	Specify the time-to-live (TTL). Used mainly to limit the range (or “scope”) of a multicast transmission. Leaving it as blank uses the default value specified by the operating system
Smoothing [ms]	Enables transmission of the output at the correct rate. Required when the receiving device is sensitive and can’t lock on to the stream (in such a case, the recommended latency is 100 - 1000 ms)
	In the SMPTE-2022 FEC standard, 1-D and 2-D parity codes are systematic FEC codes of decent complexity that provide protection against bursty or random losses.
	 This setting can be modified without interrupting an existing stream.
	To enable SMPTE-2022 FEC (Forward Error Correction) select one of the following parity options from the drop-down menu:
SMPTE-2022 FEC	<ul style="list-style-type: none">• 1D - SMPTE-2022 1D can fix a problem in ONE packet per row. This means that the number of rows specified should consider the packet loss rate- the shorter the row, the more error resilience can be achieved on the expense of bitrate level. However, longer rows increase the delay that the FEC will add. It is recommended to select this option when the packet loss is sporadic.• 2D - SMPTE-2022 2D uses a table of packets, which includes rows and columns. This option is more error resilient, but it increases the delay by (row*column) packets and increases the bitrate with R+C packets per each table of R*C packets. It is recommended to select this option when packet loss is bursty.
Bind to IP	Select from the drop-down list the local IP address to be used for this Input, OR select <i>Any</i> to enable any IP to be used.
Local Port	Specify from which local port to source the stream, if desired (instead of randomly chosen by the operating system).
ReMuxing	Select this checkbox to enable remuxing from VBR MPEG-TS to MPEG-TS CBR (used for professional IRDs).

Broadcaster Outputs

Adding Outputs


Remux to bitrate [kbps]:	Specify the CBR bitrate to target for a remuxed stream.
Buffer Size [ms]	Specify the size of the buffer that will be used for the remixing. A larger buffer increases the quality, but also increases latency.
No NULL Packets	Select this option to re-multiplex the stream to CBR but remove the NULL packets in order to maintain low bitrate.
Enable Decryption	Select this checkbox to decrypt an encrypted stream.
Decryption type	<p>If the stream has been encrypted, you can decrypt through the output by selecting this checkbox and specifying the type of encryption that was used.</p> <p>Select Automatic to decrypt a stream that has been encrypted using Automatic encryption.</p> <p>Only if the stream has not been encrypted, select None (default).</p> <p>Important Notice: if the stream has been encrypted you must decrypt it in the output.</p>
Decryption key	If the decryption type includes a key, enter the key to decrypt the stream during output.
Enable IFB/Talkback	Select this checkbox to enable IFB/Talkback for one-way communication from the director or assistant director to on-air talent or a remote location. Selecting the checkbox allows the decoder with a Zixi Receiver to send audio back to the encoder with a Zixi Feeder. This offers the ability to, for example, give audio feedback to the camera operator.
Port	The port that will be used to send the audio feedback.

Broadcaster Outputs

Viewing Existing Outputs

Viewing Existing Outputs

The Outputs screen displays all the output streams that have been created.

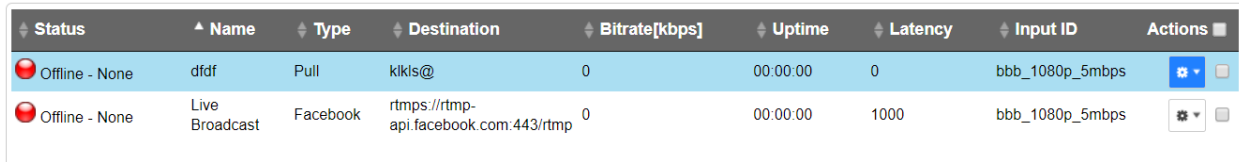

Status	Name	Type	Destination	Bitrate[kbps]	Uptime	Latency	Input ID	Actions
Offline - None	dfdf	Pull	kikls@	0	00:00:00	0	bbb_1080p_5mbps	
Offline - None	Live Broadcast	Facebook	rtmps://rtmp-api.facebook.com:443/rtmp	0	00:00:00	1000	bbb_1080p_5mbps	

Hovering the cursor on the status indicator of a stream shows the stream configuration information and basic utilization statistics, where applicable.

Any of the columns in the following table can be sorted in ascending/descending order by clicking on its heading. The **Search** text box in the upper left-hand side of the screen can be used to search for a specific input stream by entering the desired Stream ID.
















Field	Description
Status	Displays the status of output stream. The following colored indicators are displayed: <ul style="list-style-type: none">• Green = Connected• Yellow = Connecting• Red = Disconnected with an error condition• Blue = Offline with no connection attempts• Grey = Offline and stopped
Name	Displays the name of the output stream, as defined in the Zixi Broadcaster.
Type	Displays the type of output stream.
Destination	Displays the IP address of the host that will be receiving the stream.
Bitrate [kbps]	Displays bitrate of the connected output stream.
Uptime	Displays the amount of time the stream has been active.
Latency	Displays the configured latency
Input ID	The ID of the related Input stream.
Actions	Provides access to various actions to be performed on this output stream (see Performing Actions on Output Streams below).


Broadcaster Outputs

Viewing Existing Outputs

Stats Pane

The Stats pane on the bottom of the page shows data about the activity of the selected stream.

Stats		
Bitrate (kbps)  : 0	Total Packets: 0	FEC Packets  : 0
Last Connected: 0	Packet Rate  : 0	FEC Recovered  : 0
Send Errors  : 0	Packet Loss %  : 0	ARQ Requests  : 0
Reconnections: 0	Dropped Packets  : 0	ARQ Recovered  : 0
RTT(ms)  : 0	Recovered Packets  : 0	ARQ Duplicates  : 0
Jitter(ms)  : 0	Not Recovered Packets  : 0	Overflows  : 0

Click the  icon next to a parameter to show the graph of historical data for the specified parameter.

Field	Description
Bitrate (kbps)	Displays the current bitrate of the output stream
Last Connected	Displays the date and time in which the stream was connected.
Send Errors	Displays the number of errors generated after sending the stream.
Reconnections	Displays the number of reconnection attempts.
RTT (ms)	Displays the Round Trip Time (RTT) from the source (in milliseconds)
Jitter	Displays the current Jitter, measured in milliseconds.
Total Packets	Displays the total number of packets that have been transmitted.
Packet Rate	Displays the current number of packets per second.
Packet Loss %	Displays the packet loss rate (how many packets were lost out of the total number of packets).
Dropped Packets	Displays the total number of packets that were dropped since the beginning of the stream.
Recovered Packets	Displays the total number of dropped packets that have been recovered since the beginning of the stream.
Not Recovered Packets	Displays the number of non-recovered packets.
Failed Sends	Displays the number of failed attempts to send the stream.
FEC Packets	Displays the number of FEC packets transmitted.
FEC Recovered	Displays the number of FEC packets that were recovered.
ARQ Requests	Displays the number of requests for transmission of dropped packets made with ARQ.
ARQ Recovered	Displays the number of dropped packets recovered via ARQ.
ARQ Duplicates	Displays the number of duplicate recovery packets received via ARQ.


Broadcaster Outputs

Viewing Existing Outputs

Overflows	Displays the number of packets lost due to buffer overflow. Note: overflow is usually the result of the Max Bitrate being too low.
------------------	--

Searching for Output Streams

➔ To Search for an Output Stream:

In the Zixi Broadcaster **Outputs** page, type in the specific output stream name in the search text box on the left-hand top of the screen and click . The **Output** screen displays the requested output stream(s).


Performing Actions on Output Streams

Every stream has a shortcut button that can be used to perform relevant actions on the stream. The following actions can be performed through the Actions button:

- **Deleting Output Streams from Broadcaster**
- **Switching Input**


Deleting Output Streams from Broadcaster

➔ To Delete an Output Stream from the Broadcaster:

1. In the Zixi Broadcaster **Outputs** page, select the output stream you want to delete, and then click .
2. Click **Delete** to the selected stream. The selected input stream was deleted and is not displayed anymore.

Switching Input


➔ To change the input associated with the selected output:

1. In the Zixi Broadcaster **Outputs** page, click  and select **Switch Input**. The **Switch source** window is displayed.
2. In the **New Input** drop-down, select the desired input, and click **OK**. The newly designated input is now associated with the selected output.

Viewing Traceroutes

You can view traceroute data for a stream sent from a Zixi Broadcaster (v13 or above) to a Zixi Receiver (v13 or above).

➔ To view traceroute data:

1. On the **Outputs** page of Zixi Broadcaster, click the desired row of the output stream for which you want to view traceroutes.
2. Click the  button on the right end of the selected row and then select **Trace**.

Broadcaster Outputs

Performing Actions on Output Streams

The traceroute data for this stream is displayed.

 
Performing Actions on Multiple Outputs

Delete Marked Individual and Multiple Outgoing Stream

➔ To Delete Output Streams:

1. In the Zixi Broadcaster Outputs page, select all outputs by selecting the checking the Actions checkbox at the header line, or select individual outputs by selecting their checkboxes.

The Marked drop-down button is displayed.



2. Click the **Marked** drop-down menu and then click **Delete**.
The selected Output Streams are deleted.

Start and Stop Marked Individual and Multiple Outgoing Streams

➔ To Stop/Start Output Streams:

1. In the Zixi Broadcaster Outputs page, select all outputs by selecting the **Actions** checkbox, located in the header line, or select individual outputs by selecting their checkboxes.

The Marked drop-down button is displayed.



 
2. Click the **Marked** drop-down menu and then click **Start/Stop**.
The selected Output Streams are started/stopped.

Save Marked Individual and Multiple Outgoing Streams

➔ To Save Output Streams:

1. In the Zixi Broadcaster Outputs page, select all outputs by selecting the **Actions** checkbox, located in the header line, or select individual outputs by selecting their checkboxes.

The Marked drop-down button is displayed.



2. Click the **Marked** drop-down menu and then click **Save**.
The selected Output Streams are saved.

Broadcaster Outputs

 
Using Output Templates

Reset Stats for Individual and Multiple Outgoing Streams

➔ To Reset Output Streams:

1. In the Zixi Broadcaster Outputs page, select all outputs by selecting the **Actions** checkbox, located in the header line, or select individual outputs by selecting their checkboxes.

The Marked drop-down button is displayed.




2. Click the **Marked** drop-down menu and then click **Reset**.
The selected Output Streams are reset.

Viewing Traceroutes


For streams sent from Zixi Broadcasters (v13 and above) to Zixi Receivers (v13 and above), you can view traceroute data for this stream.

➔ To view traceroute data:

1. On the **Outputs** page of Zixi Broadcaster, click on the row of the stream for which you want to view traceroutes.

2. Click the  button on the right end of the selected row and then select **Trace**.

The traceroute data for this stream is displayed.

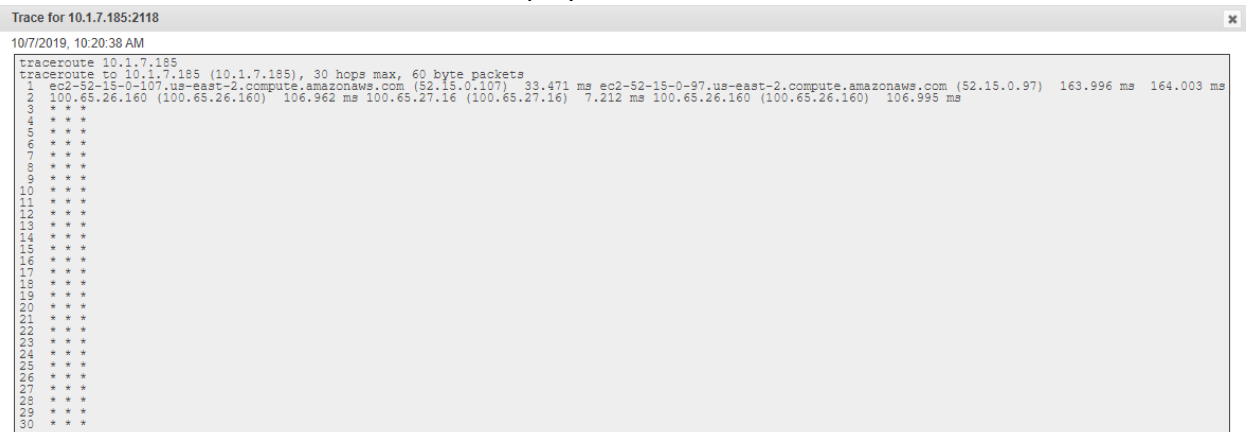

[Refresh](#) [Close](#)

3. You can refresh the Traceroute data at any time by clicking the **Refresh** button.

Using Output Templates


Instead of manually creating an output and then connecting the output to an input, you can define output templates with rules for automatic creation of outputs with predefined settings.

Broadcaster Outputs


Using Output Templates

The template includes an Input pattern. When an input pattern matches the pattern of an incoming input stream, the output is created automatically.

➔ To create a new Output template:


1. Click the **Outputs** tab at the top of the Zixi Broadcaster administrative screen.
2. In the **Menu** bar, click the **Templates** () button.

The **Output Templates** window is displayed:

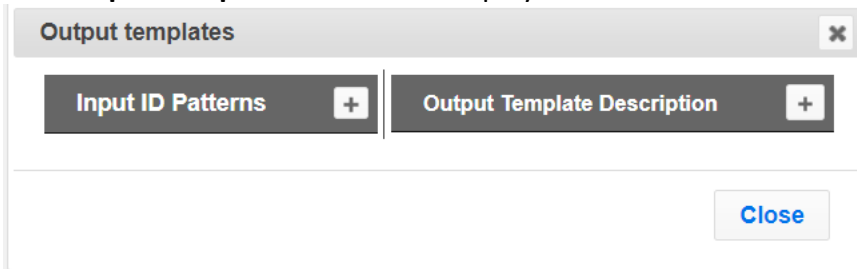

3. Under **Input ID Parameters**, click the '+' button.

The **New Output Pattern Template** window is displayed:

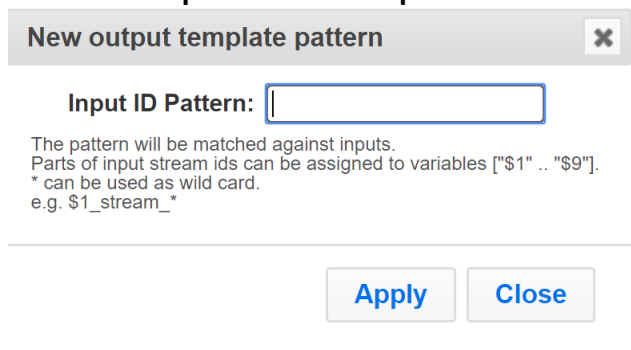


4. In the **Input ID Pattern** field, enter a pattern for the Stream ID of the input stream for which an output will be automatically created. This pattern will be used to identify the input stream and can include variables that are marked with the "\$" sign followed by a number (e.g. \$1, \$2, etc.) and/or with an asterisk "*" wildcard. The patterns should also include a part of the string that requires an exact match. For example, the pattern "\$1_stream_\$2kbps" will match an input stream "talk_show_stream_600kbps".
5. Click **Apply**.
The newly created input ID pattern is added to the **Input ID Patterns** list.
6. From the **Input ID Patterns** list, select a pattern for which you want to relate an output template.


Broadcaster Outputs

Using Output Templates

7. In the **Output Template Description** section click the “+” button.

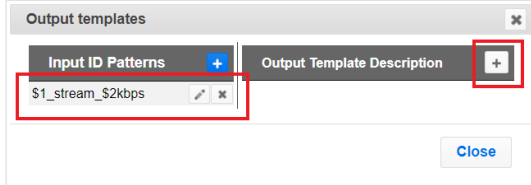

The **New Output Template** window is displayed:

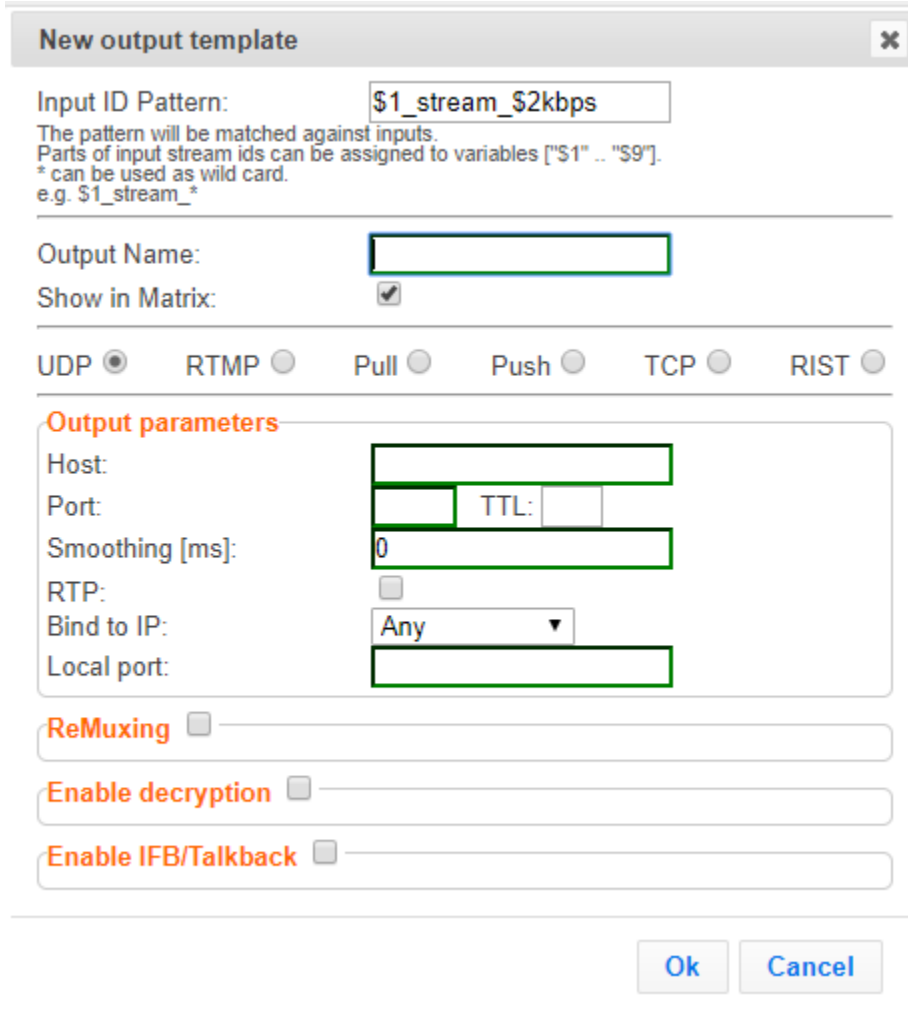

New output template

Input ID Pattern:
The pattern will be matched against inputs.
Parts of input stream ids can be assigned to variables ["\$1" .. "\$9"].
* can be used as wild card.
e.g. \$1_stream_*

Output Name:

Show in Matrix:

UDP RTMP Pull Push TCP RIST

Output parameters

Host:

Port: TTL:

Smoothing [ms]:

RTP:

Bind to IP:

Local port:

ReMuxing

Enable decryption

Enable IFB/Talkback

Ok Cancel

8. In the **Output Name** field, enter a name for the output that will be created. The name can include variables used in the **Input Pattern** field.
9. Select the desired output type and fill-in the relevant Output parameters according to the instructions of the relevant section:
 - **UDP Output** – Follow the instructions in the **Adding UDP Outputs** section.
 - **RTMP Output** – Follow the instruction in the **Adding RTMP and RTMPS Outputs** section.
 - **Pull Output** - Follow the instruction in the **Adding Pull Outputs** section.
 - **Push Output** - Follow the instruction in the **Adding Push Outputs** section.

Broadcaster Outputs

Using Output Templates

- **TCP Output** - Follow the instruction in the **Adding TCP Outputs** section.
- **RIST Output** – Follow the instruction in the **Adding RIST Outputs** section.

10. Click **OK**.

The template is added to the **Output Template Description** list. When an input pattern will match the pattern of an incoming input stream, the defined output will be created automatically.

Broadcaster Network Bonding

Zixi's Network Bonding feature enables you to divide a stream into several network channels by utilizing multiple NICs and links and then subsequently reuniting them at the Zixi Broadcaster side. For example, a 5 Mbps stream can be streamed using two links, one 2 Mbps link that uses a mobile network and another 3 Mbps Wifi network. The stream is automatically bonded at the Zixi Broadcaster side without any special configuration (as long as the Push input is defined and the two NICs are setup in the machine running the Zixi Broadcaster). Network Bonding can be used for load balancing between multiple links in the following configurations:

- **Zixi Feeder with Multiple NICs to a single Zixi Broadcaster NIC** - the stream is divided at the Zixi Feeder end and then bonded at the Zixi Broadcaster end. This configuration requires configuring Network Bonding in the Zixi Feeder.
- **Zixi Feeder with Multiple NICs to multiple Zixi Broadcaster NICs** - the stream is divided at the Zixi Feeder end, sent to multiple IP addresses (each Zixi Broadcaster NIC has a separate IP address), and then bonded at the Zixi Broadcaster end. This configuration requires configuring Network Bonding in the Zixi Feeder. Each destination (i.e. each Broadcaster NIC is configured in a separate network bonding link by using a different Host IP address).
- **Zixi Feeder with single NIC to Multiple Zixi Broadcaster NICs** - the stream is sent to multiple IP addresses (each Zixi Broadcaster NIC has a separate IP address), and then bonded at the Zixi Broadcaster end. This configuration requires configuring Network Bonding in the Zixi Feeder. Each destination (i.e. each Broadcaster NIC is configured in a separate network bonding link by using a different Host IP address).
- **Zixi Broadcaster with multiple NICs to another Zixi Broadcaster with a single/multiple NICs** - a Zixi Broadcaster can transfer a stream to another Zixi Broadcaster through multiple NICs at the source Broadcaster and single/multiple NICs at the destination Broadcaster. This configuration requires configuring Network Bonding in the Zixi Broadcaster (see Broadcaster Output with Network Bonding).

Using Network Bonding for Hitless Failover

The Network Bonding feature can be used to ensure high availability of the stream. The feature ensures hit-less failover between multiple networks and network cards (i.e. network and hardware protection). As part of the configuration of the network bonding feature it is possible to set a NIC (which may be connected to a separate network) as a "Backup". In this case, the backup link will only be utilized if the stream has used all other available capacity. For example, a stream can be configured to be transferred on a WiFi network as the main link and a mobile network as a backup. If the WiFi link is compromised (either completely unavailable or limited bandwidth), the stream will be transferred, in full or partially through the backup mobile link and then bonded at the Zixi Broadcaster end, enabling uninterrupted streaming and high availability.

Broadcaster Outputs


Broadcaster Network Bonding

Broadcaster Output with Network Bonding

A Zixi Broadcaster can push a stream to another Zixi Broadcaster that has been divided into multiple network channels by utilizing multiple NICs. The Zixi Broadcaster at the destination will subsequently reuniting them into a single input stream.


➔ To add network bonding to a Push Output:

1. Create a **Push Output**, by following the instructions in the [Adding Push Outputs](#) section.
2. In the **Output Parameters** section, select the **Bond Links** checkbox.

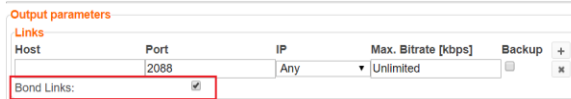

The screenshot shows the 'Output parameters' dialog box. Under the 'Links' section, there is a table with columns: Host, Port, IP, Max. Bitrate [kbps], and Backup. The first row has values: Host (empty), Port (2088), IP (Any), Max. Bitrate (Unlimited), and Backup (unchecked). Below the table, the 'Bond Links' checkbox is checked and highlighted with a red box.

3. In the **Links** section, click the **+** button to add a second link:

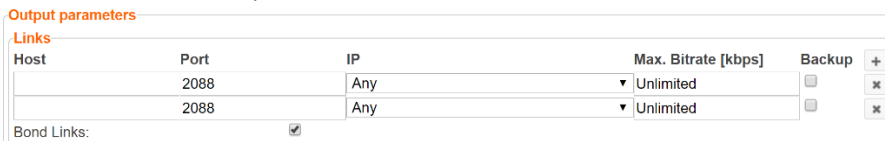


The screenshot shows the 'Output parameters' dialog box with two links added. The table has two rows: the first row has Host (empty), Port (2088), IP (Any), Max. Bitrate (Unlimited), and Backup (unchecked); the second row has Host (empty), Port (2088), IP (Any), Max. Bitrate (Unlimited), and Backup (unchecked). The 'Bond Links' checkbox is checked.

4. In the **Host** field, type the IP address of the destination Zixi Broadcaster.
5. In the **Port** field, type the destination port number of the Zixi Broadcaster to which you want to stream. Default: 2088
6. In the **NIC** field, select the NIC in the Zixi Broadcaster (source) that you want to use to stream.
7. In the **Bitrate Limit** field, do one of the following:
 - If you want to limit the bitrate that will be used in this link, enter the limit value in Kbps.
 - If you DO NOT want to limit the bitrate, leave the default value - "0".
8. In the **Backup** field, do one of the following:
 - If you want to use this link only if there is not enough bandwidth in the other links, select the Backup checkbox.
 - If you want to use this link in parallel to other links, DO NOT select the Backup checkbox.
9. Configure additional parameters as required.
10. Click **OK** to save the Zixi Broadcaster Output.

Adaptive Groups

Zixi Broadcaster features the ability to create multiple bitrate profiles for a single input stream and set it as an adaptive group that can be used by a supporting client. The client will automatically switch between the various bitrate profiles of the stream according to the network conditions during playback.

After creating a group with different bitrates you can test them all out by playing them with the different 3rd party players (via the  Actions menu).


You can optionally create adaptive group templates that will automatically group streams in adaptive groups instead of defining groups in advance.

Creating New Adaptive Groups

➔ To Create a New Adaptive Group:

1. In the Zixi Broadcaster administrative screen, click the **Adaptive** tab.
2. Click **Add Group**.

The **Adaptive live streams group** window is displayed:

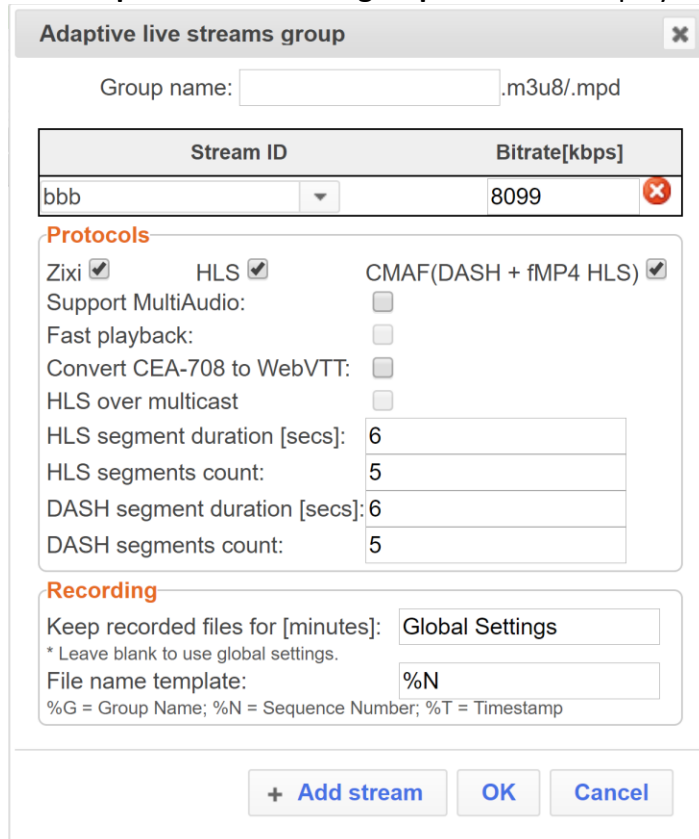

Stream ID	Bitrate[kbps]
bbb	8099

Protocols

Zixi HLS CMAF(DASH + fMP4 HLS)

Support MultiAudio:

Fast playback:

Convert CEA-708 to WebVTT:

HLS over multicast

HLS segment duration [secs]:

HLS segments count:

DASH segment duration [secs]:

DASH segments count:

Recording

Keep recorded files for [minutes]:

* Leave blank to use global settings.

File name template:

%G = Group Name; %N = Sequence Number; %T = Timestamp

3. In the **Group Name** field, enter the unique string as the adaptive group's name.

Adaptive Groups

Creating New Adaptive Groups

4. Under **StreamID**, select an input stream from the drop-down list to create an adaptive bitrate.
5. Enter the desired **Bitrate[kbps]** for that stream in the adjacent field to **Stream ID**.
6. Click to add as many streams as you want to include in the group and repeat steps 4 and 5 for every stream that is added to the group.
7. Select one or more **Protocols** that will be supported for this adaptive group. The Zixi protocol option enables devices using the Zixi SDK to view the stream using the Zixi protocol.
8. Select **Support MultiAudio** if the input streams include multiple audio channels to enable multiple separate audio channels in the adaptive group.
9. Specify the HLS/Dash segment/chunk duration and count (See details in the table below).
10. Specify the duration to **Keep recorded files for [minutes]**. If the file is left as blank, the system will use the global settings, specified in the **Settings > Live Protocols** screen in the **HLS DVR Maximum Recording Duration** field.
11. In the **File name template** field, specify the file name pattern that Zixi will use to generate when saving the recorded content.
12. Click **OK**.

The new Adaptive Group is created and appears on the Adaptive screen.

Parameter	Description
Group Name	Specify the unique identifier for this group.
Stream ID	Select an input stream from the drop-down list.
Bitrate [kbps]	Specify the bitrate for the selected stream.
Protocols	Select one or more Protocols that will be supported for this adaptive group - Zixi HLS (enables devices using the Zixi SDK to view the stream using the Zixi protocol), HLS, DASH/fMP4 HLS
Support MultiAudio	Select this checkbox to enable multiple separate audio channels in the adaptive group.
Fast playback	Select this setting to enable low latency HLS delivery. The Enable HLS Fast playback on the Settings > Live Protocols screen must be enabled. Only the TS segments version of the HLS stream will be available for adaptive streaming, not the fragmented MP4 (fMP4) version. When enabled, the following playback URLs will be available: <ul style="list-style-type: none">• <a href="http://<server url>:7777/playback.m3u8?stream=<adaptive group name>">http://<server url>:7777/playback.m3u8?stream=<adaptive group name>• <a href="http://<server url>:7777/<adaptive group name>.m3u8">http://<server url>:7777/<adaptive group name>.m3u8

Adaptive Groups

Creating New Adaptive Groups

Convert CEA-708 to WebVTT	Extracts closed caption from video elementary stream and converts it to WebVTT format. This feature is currently available for HLS only and there is no support to styling/placement, just text.
HLS Over Multicast	Select this checkbox to enable multicasting of the adaptive stream (requires multicast to be enabled in the Settings)
HLS Segment Duration [sec]	Specify the duration in seconds of each segment/chunk in the HLS playlist. You can specify sub-second durations (e.g. 0.5). (Default: 6 seconds)
HLS Segments Count	Specify the number of segments in the HLS playlist.
DASH Segment Duration [sec]	Specify the duration in seconds of each segment/chunk in the DASH adaptive group. You can specify sub-second durations (e.g. 0.5). (Default: 6 seconds)
DASH Segments Count	Specify the number of segments in the DASH adaptive group.
Recording	
Keep recorded files for [minutes]	Specify the maximum time for storing the recording. If the file is left as blank, the system will use the global settings specified in the Settings > Live Protocols screen in the HLS DVR Maximum Recording Duration field.
File name template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">%S=stream id - optional.%Y=year - optional%M=month - optional%D=day - optional%T=HH.MM.SS creation time - mandatory

Adaptive Groups




Creating New Adaptive Groups

For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.

Adding Streams to Existing Adaptive Groups

You can add additional streams to existing adaptive groups.


➔ To Add Streams to an Adaptive Group:


1. In the Zixi Broadcaster administrative screen, click the **Adaptive** tab.
2. Select the Group to which you want to add a stream, and click  button, and then **Edit**. The **Adaptive live streams group** window is displayed.
3. Click  button for as many streams as you want to include in the group. Another Stream row will be added in the above table to which a desired **Bitrate** must be specified. When clicking on the red  at the end of any of the stream rows, the stream will be deleted from the group.
4. Click **OK**. The group has been modified accordingly.

Adaptive Groups Templates

Instead of defining adaptive groups in advance and then relating specific input streams to these groups, you can define templates with rules for automatic grouping of streams in adaptive groups. Every time a new input stream, which matches the conditions of the template, is added, it will be automatically added to the adaptive group that was defined in the template. Specific streams are identified by naming patterns and added to the group by setting static naming patterns and bitrates or dynamic patterns.

➔ To create a new adaptive group template:

1. Click the **Adaptive** tab at the top of the Zixi Broadcaster administrative screen.
2. In the Menu bar, click the **Templates** () button.
The Adaptive Groups Templates screen is displayed:

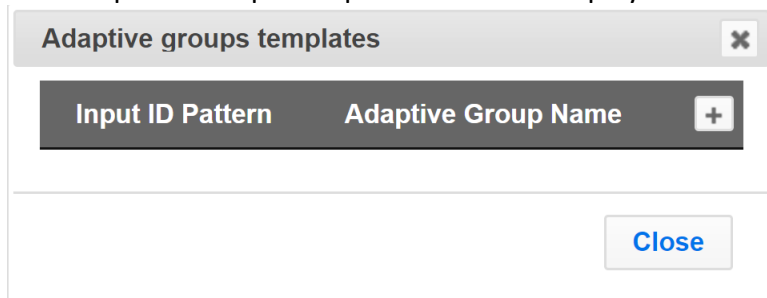

Adaptive Groups

Adaptive Groups Templates

3. Click the + button.

The **Adaptive Group Template** window is displayed:

Adaptive group template [X]

Input ID Pattern will be matched against inputs.
Parts of input stream ids can be assigned to variables ['\$1' .. '\$9'].
* can be used as wild card.
e.g. \$1_stream_profile_*

Input ID Pattern:

Adaptive Group Name:

Variables from Input ID pattern can be used to form adaptive group name.
e.g. \$1_adaptive_stream

Adaptive group properties

Zixi HLS DASH

HLS over multicast

Record

Keep recorded files for [minutes]:

* Leave blank to use global settings.

File name template:

%G = Group Name; %N = Sequence Number; %T = Timestamp

Adaptive group stream patterns

Streams expected in adaptive group may connect later.

Dynamic streams acquisition Static streams set

Stream pattern Bitrate [kbps]

Apply Close

4. In the **Input ID Pattern** field, enter a pattern for the Stream ID of the input stream that will be automatically added to newly created adaptive group. This pattern will be used to identify the input stream and can include variables that are marked with the "\$" sign followed by a number (e.g. \$1, \$2, etc.) and/or with an asterisk "*" wildcard. The patterns should also include a part of the string that requires an exact match. For example, the pattern "\$1_stream_\$2kbps" will match an input stream "talk_show_stream_600kbps". String parts that were matched against \$X variables, can be reused in other settings, however, string parts that were matched against an asterisk wildcard cannot be reused in other settings.
5. In the **Adaptive Group Name** field, enter a string that will be used as the name of the adaptive group. You can use the \$X variables that were used in the Input ID Pattern field above. For example, based on the above example, if you write "\$1_group", the group name will be "talk_show_group".
6. Under the **Adaptive Group Properties**, select the checkboxes of the protocols with which these streams will be transmitted (Zixi, HLS, DASH, HLS over multicast).
7. If you want to record an HLS stream, select the **Record** checkbox and in the **Keep recorded files for [minutes]**, specify the maximum time (in minutes) to record. Default:

Adaptive Groups

Adaptive Groups Templates

the time defined in the global settings, specified in the **Settings > Live Protocols** screen in the **HLS DVR Maximum Recording Duration** field.

- Under **Adaptive Group Stream Patterns**, select the method in which the streams in the adaptive group will be created:
 - Dynamic Streams Acquisition:** this method will automatically add input streams that match the defined **Input ID Pattern** and give them a bitrate value based on the **Bitrate Pattern**. This option is based on the assumption that the bitrate value is part of the input stream's ID. Based on the example above, by entering the value "\$2" in the **Bitrate Pattern** field, the system will automatically add the incoming "talk_show_stream_600kbps" stream, while giving it a 600 Kbps Bitrate setting (according to the definition in the **Input ID Pattern** field, the \$2 was assigned a value of 600kps). If another stream that matches the input ID patterns comes in (e.g. talk_show_stream_700kbps") with a different bitrate, for example, 700kbps, this stream will be also added to the same adaptive groups, however the bitrate setting will be 700 kbps.

Adaptive group stream patterns

Streams expected in adaptive group may connect later.

Dynamic streams acquisition Static streams set

Any stream matching 'Input ID Pattern' will be added.

Bitrate pattern:

To add a Dynamic Streams Acquisition bitrate pattern:

- In the **Bitrate Pattern** field add the pattern as described above.
- Click **Apply**.

The new template is added to the **Adaptive Groups Templates** list:

Adaptive groups templates

Input ID Pattern	Adaptive Group Name	
\$1_stream_\$2kbps	\$1_adaptive_stream	<input type="text"/> <input type="text"/>

Close

- Static Stream Set:** if the input streams do not have the bitrate value in their ID names, you can manually define the ID and the bitrate for each stream that will be included in the group. You can define streams that are not currently connected, but will be connected at a later stage.

Adaptive Groups

Performing Actions on Adaptive Groups

Adaptive group stream patterns
Streams expected in adaptive group may connect later.

Dynamic streams acquisition Static streams set

Stream pattern	Bitrate [kbps]	
<input type="text" value="comedy_HD"/>	<input type="text" value="512"/>	<input type="button" value="+"/>
		<input type="button" value="x"/>

To add a Static Steam Set:

1. Click the + button
2. In the **Stream Pattern** field, enter a pattern for the stream ID (you can use the variables used in the Input ID Pattern field and add additional variables as needed). This pattern will be used to identify the stream and add it to the group (e.g. "comedy_HD").
3. In the **Bitrate [Kbps]** field, enter the Bitrate value of the stream.
4. Click the + button for as many streams as you want to include in the group and repeat the steps above for every stream that is added to the group.
5. Click **Apply** to save all changes.

The new template is added to the **Adaptive Groups Templates** list:

Adaptive groups templates		
Input ID Pattern	Adaptive Group Name	<input type="button" value="+"/>
<input type="text" value="\$1_stream_\$2kbps"/>	<input type="text" value="\$1_adaptive_stream"/>	<input type="button" value="edit"/> <input type="button" value="x"/>



the group will be active only when all the streams defined will be connected.

Performing Actions on Adaptive Groups

Every adaptive group has a shortcut button that can be used to perform relevant actions.


Stopping/Starting an Adaptive Group

You can start or stop the stream(s) in the adaptive group at any time.

Adaptive Groups


Performing Actions on Adaptive Groups

➔ To Stop/Start the Adaptive Group:

1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to start/stop.
2. Click the  button on the right end of the selected row and then **Start/Stop**. The status will change to Connected/Stopped accordingly.


Editing an Existing Adaptive Group


➔ To Edit the Configuration of an Adaptive Group:

1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to edit.
2. Click the  button on the right end of the selected row and then **Edit**. The Adaptive live stream group screen is displayed. You can modify any of the settings.
3. Click **OK**. The new settings will take effect.

Deleting and Adaptive Group

➔ To delete an Adaptive Group:

1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to delete.
2. Select the Group to which you want to add a stream, and click  button, and then **Delete**. The message "**Are you sure you want to delete group <group_name>?**" is displayed.

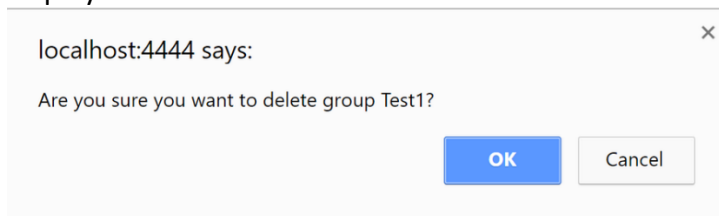

3. Click **OK**. The selected row adaptive group will be deleted.

Play Dash


Zixi Broadcaster can generate links to play the Adaptive Group stream in MPEG DASH format.

➔ To Play MPEG DASH:


1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to playback.

Adaptive Groups

Performing Actions on Adaptive Groups

2. Select the Group to which you want to add a stream, and click  button, and then click **Play Dash**.

The following window is displayed:

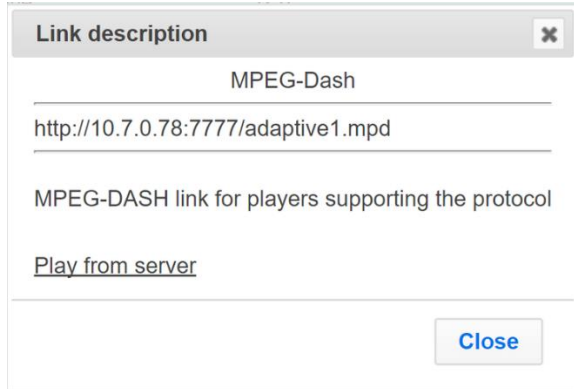


3. Do one of the following:
 - If you have a locally installed MPEG DASH compatible player - click the link to stream the data to your player.
 - If you DO NOT have a player - click **Play from server**. The stream will open in a web-based player.
4. Click **Close** when finished.

Play fMP4

Zixi Broadcaster can generate links to play the Adaptive Group stream in fMP4 HLS format.


➔ To Play fMP4 HLS:

1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to playback.
2. Select the Group to which you want to add a stream, and click  button, and then click **Play fMP4**.

The following window is displayed:

Adaptive Groups

Performing Actions on Adaptive Groups

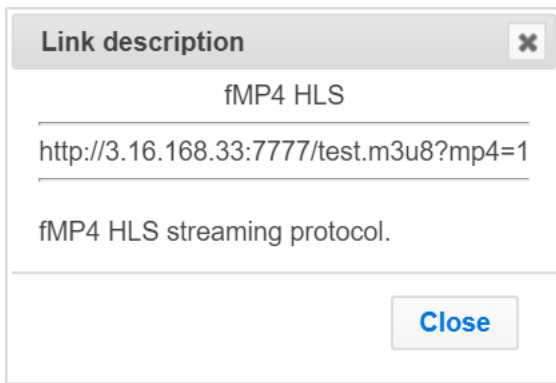


3. Copy the link that is generated at the bottom of the window and paste it into a player/browser for playback.
4. Click **Close** when finished.


Play HLS

Zixi Broadcaster can generate links to play the Adaptive Group stream in HLS format over HTTP, UDP, or Multicast (requires Multicast enabled).

➔ To Play HLS:

1. In the Zixi Broadcaster **Adaptive Groups** page, click the adaptive group row that you want to playback.
2. Select the Group to which you want to add a stream, and click  button, and then click **Play HLS**.

The following window is displayed:

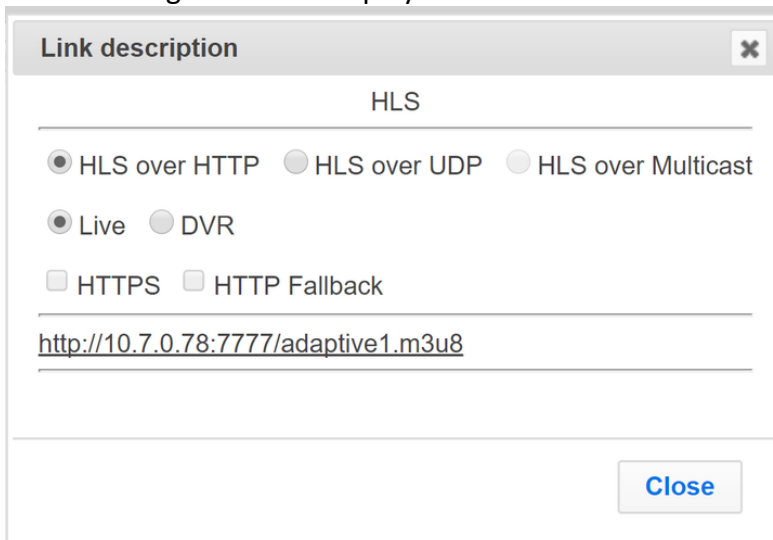

3. Do one of the following:

Adaptive Groups

Performing Actions on Adaptive Groups


- **HLS over HTTP** - streams the adaptive stream over HTTP. Select **Live** to stream a live stream or select **DVR** to select a recorded stream. To stream from an encrypted HTTPS link, select the **HTTPS** checkbox. To stream from a secondary/backup server, select the **HTTP Fallback** checkbox.
 - **HLS over UDP** - streams the adaptive stream over UDP. Select **Live** to stream a live stream or select **DVR** to select a recorded stream. To stream from an encrypted HTTPS link, select the **HTTPS** checkbox. To stream from a secondary/backup server, select the **HTTP Fallback** checkbox.
 - **HLS over Multicast** - streams the adaptive stream over UDP. Select **Live** to stream a live stream or select **DVR** to select a recorded stream. To stream from an encrypted HTTPS link, select the **HTTPS** checkbox. To stream from a secondary/backup server, select the **HTTP Fallback** checkbox.
4. Copy the link that is generated at the bottom of the window and paste it into a player/browser for playback.
 5. Click **Close** when finished.

Set Preroll

A preroll transport stream file is a video/audio file that is played before the adaptive group video is played. Before setting the preroll, you should make sure that the file is available for VOD and that VOD is enabled in the File Transfer and VOD settings.

➔ To set a Pre-roll:

1. Upload the Pre-roll TS File to the designated Root folder on the Zixi Broadcaster server. To find your Root folder location, go to Settings > General. The Root path is specified in the Root Folder field.

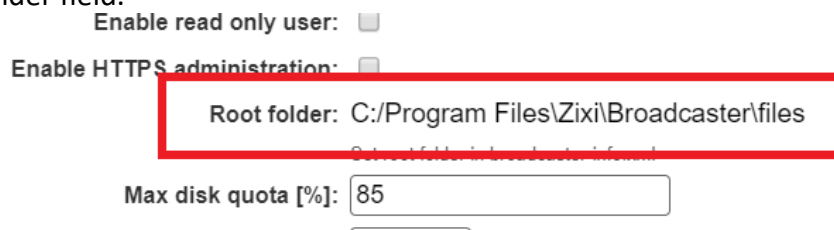


2. In the **Settings > File Transfer & VOD** screen, select the **VOD** checkbox. The following window is displayed:




3. In the Zixi Broadcaster Adaptive Groups screen, click the desired adaptive group for which you want to add the preroll.

Adaptive Groups

Performing Actions on Adaptive Groups

- Click the  button on the selected row and then click **Set Preroll**. The following window is displayed:

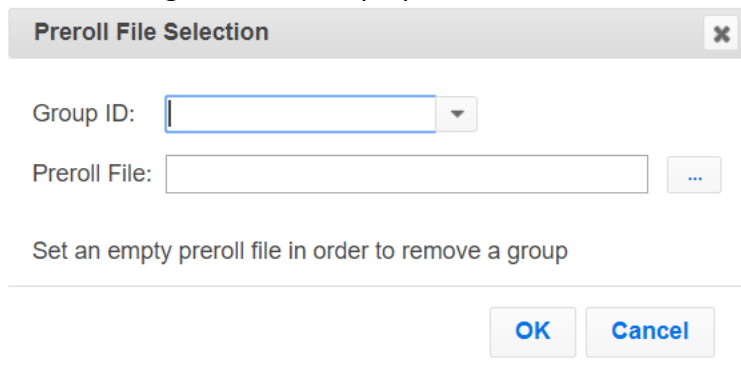

The dialog box titled "Preroll File Selection" contains the following elements:

- A "Group ID" field with a dropdown arrow.
- A "Preroll File" field with a "Browse" button (three dots).
- A note: "Set an empty preroll file in order to remove a group".
- "OK" and "Cancel" buttons at the bottom.

- In the **Group ID** field, select the adaptive group for which you want to add the preroll.
- In the **Preroll File** field, click the **Browse** button and select the desired file.
- Click **OK**.

VOD (Video on Demand)

The VOD feature enables you to upload stream-able (.ts and mp4) files to the file system of the server on which Broadcaster is installed as well as make a previously recorded input stream available on demand (VOD). The VOD content is accessed through a local folder, where the Zixi Broadcaster is located. This local folder can be optionally mapped through a symbolic link or shortcut to a remote folder. The Broadcaster creates a unique URL for each file.

The streams can be played back using VLC (with Zixi Plugin for Zixi streams) and/or streamed to a Zixi Receiver or to a Zixi Broadcaster. During playback, an Output (with output type – **Download**) will be created automatically on the Source Zixi Broadcaster, as shown below.

Status	Name	Type	Destination	Bitrate[kbps]	Uptime	Latency	Input ID	Actions
Connected	VLCP-HARELPC-5E4FA23...	Download	VLCP-HARELPC-5E4FA2374F@62.90.95.23	874	00:00:27	5000	clock.ts	[Settings] [Close]

VOD Activation

If you have a VOD-enabled license you will still need to activate the VOD feature in the **Settings** screen.

➔ To activate the VOD feature:

1. In the **Settings** page, click **File Transfer & VOD**.
2. Select the **VOD** checkbox.

HLS Indexing:

MPEG-DASH Indexing:

VOD:

Encrypt downloads:

Max download speed [kbps]: ~100.0 Mbit/s

3. Click **Apply**.

VOD Files Location


The VOD files are located in the following location by default -

<Broadcaster_Installation_Folder>\Zixi\Broadcaster\files

VOD (Video on Demand)

VOD Files Location

The contents of this folder are displayed in the **VOD** screen on the Zixi Broadcaster GUI –

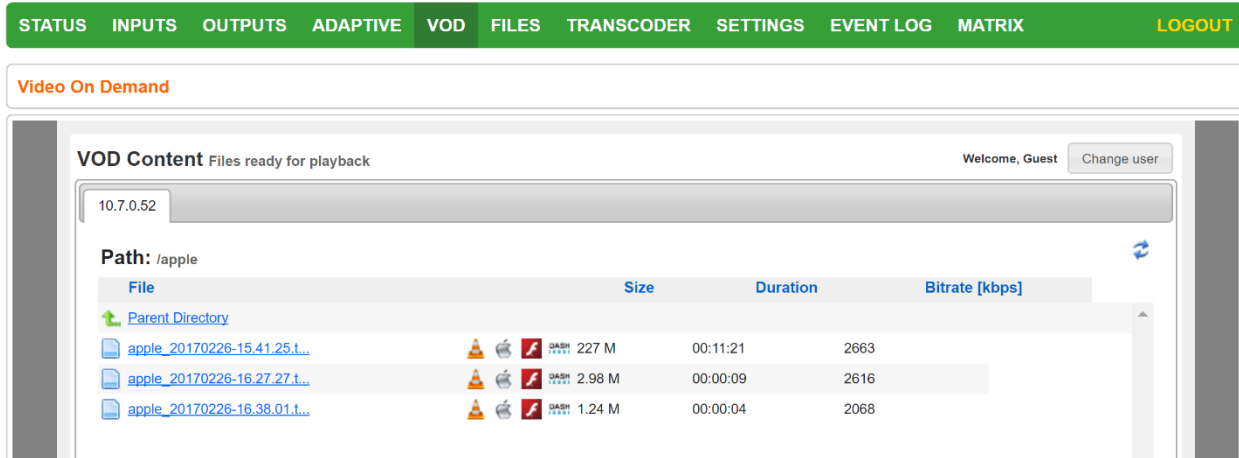

The VOD screen displays the following information:

Parameter	Description
-----------	-------------

File	Name of the file or folder. If in file level (not folder level), click the file name to preview the stream in the Matrix screen.
-------------	--

The following icons are displayed:



- **VLC Playback** – click this icon to see the VLC playback URL and additional details, such as VLC plugin download link, and link to stream the file.



- **HLS Playback** – click this icon to see the following three HLS playback URLs: local HLS playback (not Zixi protected), HLS playback using Zixi Proxy (Zixi Protected), HLS playback using Zixi Proxy through HTTPS (Zixi protected). The Zixi Proxy links require the installation of Zixi Proxy software in the receiving device/machine. The dialog includes links for downloading the Zixi Proxy for Windows and Mac.

<Icons>



- **HDS Playback** – click this icon to see the Adobe HTTP Dynamic Streaming Protocol playback URL. The Play from server link, plays back the stream directly from the server.



- **Flash Playback** – click this icon to see the following three Flash playback URLs: local Flash playback (not Zixi protected), Flash playback using Zixi Proxy (Zixi Protected), Flash playback using Zixi Proxy through HTTPS (Zixi protected). The Zixi Proxy links require the installation of Zixi Proxy software in the receiving device/machine. The dialog includes links for downloading the Zixi Proxy for Windows and Mac.



- **Dash Playback** - click this icon to see the MPEG-DASH playback URL. The Play from server link, plays back the stream directly from the server.

Size	The size of the file.
-------------	-----------------------

Duration	The duration of the playback.
-----------------	-------------------------------

VOD (Video on Demand)

Adding Files to VOD

Bitrate [kpbs]	The bitrate of the file in Kbps.
---------------------------	----------------------------------

Changing the Files folder location

➔ To change the Files folder location:

1. In the Zixi Broadcaster installation folder
(`<Broadcaster_Installation_Folder>\Zixi\Broadcaster\`) open the following file: **broadcaster-info.xml**.
2. Edit the `<Folder>` parameter with the desired path.

```
<?xml version="1.0" encoding="utf-8"?>
<ROOT_SETTINGS>
  <FOLDER>C:\Program Files\Zixi\Broadcaster\files</FOLDER>
  <MANAGED>>false</MANAGED>
  <MANAGEMENT-ENABLED>>false</MANAGEMENT-ENABLED>
</ROOT_SETTINGS>
<TUNNEL>
  <ALLOW>>false</ALLOW>
  <MANAGED>>false</MANAGED>
  <MANAGEMENT-ENABLED>>false</MANAGEMENT-ENABLED>
</TUNNEL>
```

3. Save the file.

Adding Files to VOD


There are two ways to add files into the VOD Files folder:

- **Adding files to the folder** – using the operating system on which Zixi Broadcaster is installed, add the desired files to the Files folder
(`<Broadcaster_Installation_Folder>\Zixi\Broadcaster\Files`)

VOD (Video on Demand)



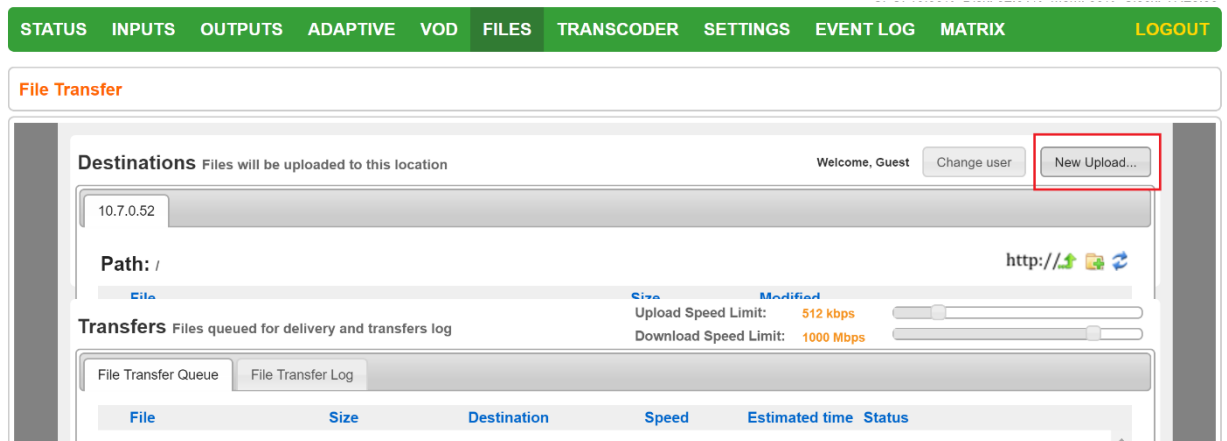


Playing back VOD content

- **Uploading using the Broadcaster GUI** – on the **Files** screen, click the **New Upload** button, browse to the desired file location, select the file and click **Upload**.



Playing back VOD content

The VOD content can be played back using VLC (with Zixi Plugin for Zixi streams) and/or streamed to a Zixi Receiver or to a Zixi Broadcaster by using the following methods:

- **URL (Static)** – entering a specific URL of a file. To find the URL of a specific file, go to the VOD screen, navigate to the specific file, and click on the relevant playback icon:
 -  - **VLC Playback** – click this icon to see the VLC playback URL and additional details, such as VLC plugin download link, and link to stream the file.
 -  - **HLS Playback** – click this icon to see the following three HLS playback URLs: local HLS playback (not Zixi protected), HLS playback using Zixi Proxy (Zixi Protected), HLS playback using Zixi Proxy through HTTPS (Zixi protected). The Zixi Proxy links require the installation of Zixi Proxy software in the receiving device/machine. The dialog includes links for downloading the Zixi Proxy for Windows and Mac.
 -  - **HDS Playback** – click this icon to see the Adobe HTTP Dynamic Streaming Protocol playback URL. The Play from server link, plays back the stream directly from the server.
 -  - **Flash Playback** – click this icon to see the following three Flash playback URLs: local Flash playback (not Zixi protected), Flash playback using Zixi Proxy (Zixi Protected), Flash playback using Zixi Proxy through HTTPS (Zixi protected). The Zixi Proxy links require the installation of Zixi Proxy software in the receiving device/machine. The dialog includes links for downloading the Zixi Proxy for Windows and Mac.
 -  - **Dash Playback** - click this icon to see the MPEG-DASH playback URL. The Play from server link, plays back the stream directly from the server.

VOD (Video on Demand)

Indexing VOD content


- **API (Dynamic)** – you can use the Zixi API to implement dynamic access to the VOD content. For example, you can create an application that enables navigation throughout the VOD library (including folders and sub-folders) to access files in a dynamic fashion. The API GET request is: <http://<broadcaster location><web server port>/vod ls.json>

Indexing VOD content

Zixi Broadcaster can create m3u8 (HLS) and mpd (mpeg-dash) manifests for VOD files. When the **Automatically index VOD files** setting is enabled, Zixi Broadcaster will index the VOD files in the various VOD folders. In this case, Zixi Broadcaster will automatically monitor any file and directory structure changes (under "files" folder only). Any file that is added will be automatically indexed. In the same manner, any file that is deleted, the correspondent files in the index (.m3u8 and/or /mpd) will be removed as well. In some cases, the indexing of VOD files can affect performance. By enabling or disabling the **Automatically index VOD files** setting, you can decide when to index the VOD files in order to ensure optimal performance during peak times.

➔ To activate the VOD indexing:

1. In the **Settings** page, click **File Transfer & VOD**.
2. Select the **Automatically index VOD files** checkbox.

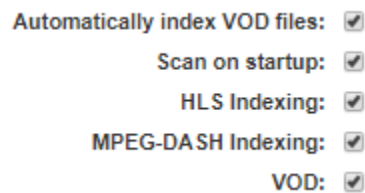

3. Select **Scan on startup** to enable indexing of the files in the VOD folder that have not been indexed during startup of the Zixi Broadcaster.
4. Select **HLS indexing** to enable indexing of HLS streams. The indexing creates an M3U8 playlist file.
5. Select **MPEG-DASH indexing** to enable indexing of MPEG-DASH streams. The indexing creates a .mpd (MPEG-DASH Media Presentation Description) file.
6. Click **Apply**.

Accelerated File Transfer


Zixi Broadcaster features the ability to transfer files between two Zixi components (Zixi Broadcaster to Zixi Receiver or to another Zixi Broadcaster), using the Zixi protocol. The transfer can also be to a non-Zixi component with a Zixi Proxy or with a Zixi Plugin. This enables the reliable and fast transfer of large files over a wireless/wifi connections.

File Transfer Configuration

Before using the file transfer feature, you will need to activate the file transfer feature and configure the following file transfer settings.

➔ To activate and configure the file transfer feature:

1. In the **Settings** page, click **File Transfer & VOD**.

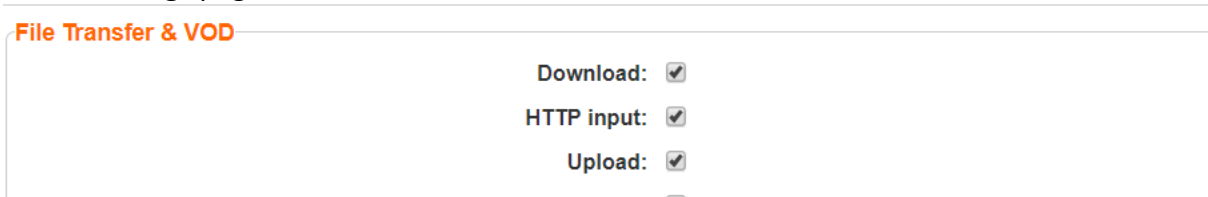

2. Select the **Download** checkbox to enable the download of files from the current Zixi Broadcaster.
3. Select **HTTP Input** checkbox to enable HTTP forwarding.
4. Select the **Upload** checkbox to enable the uploading of files by registered users to the current Zixi Broadcaster.
5. Specify additional optional **file transfer setting parameters** (see File Transfer Setting table below).
6. Click **Apply**.

File Transfer Settings

Parameter	Description
Download	Enables the file transfer download from this Zixi Broadcaster.
HTTP Input	Enables HTTP acceleration mode. In this mode, instead of specifying a file location on the server's hard disk, the Zixi Broadcaster receives an HTTP address from which it will retrieve the file and then transfer it to the Client.
Upload	Enables the file transfer upload to this Zixi Broadcaster server.
Encrypt Downloads	Enables the Zixi auto encryption for all file transfer downloads.

Accelerated File Transfer

Uploading Files for File Transfer

Max download speed [kbps]	Specifies the maximal download speed in Kbps for file transfer.
Max upload speed [kbps]	Specifies the maximal upload speed in Kbps for file transfer.
Initial bitrate [kbps]	Specifies the initial download bitrate. The recommended bitrate can be the bitrate of the stream.
HTTP/Origin cache size [MB]	This setting is relevant for HTTP acceleration mode and/or Origin/Edge architecture, where the Zixi Broadcaster retrieves the file from another Origin or HTTP server and then delivers it to the Client. This setting determines the cache size allocation on the Zixi Broadcaster. The cache is used to accelerate the delivery of files that have been previously requested.

Uploading Files for File Transfer

You can upload files to the server on which Zixi Broadcaster is installed to make them available for download using Zixi protocol. The location of the files that will be uploaded is relative to the Root folder that was specified in the **Settings > General** screen.



Before you upload a file, make sure Zixi Proxy is installed on your computer. If it is not installed, you will be prompted with a notification and a link for download and installation.


➔ To upload a file for file transfer:

1. In Zixi Broadcaster, click the **Files** tab.
1. Click **New Upload**.


The **Select Files to Upload** dialog opens:

Accelerated File Transfer

Downloading Files

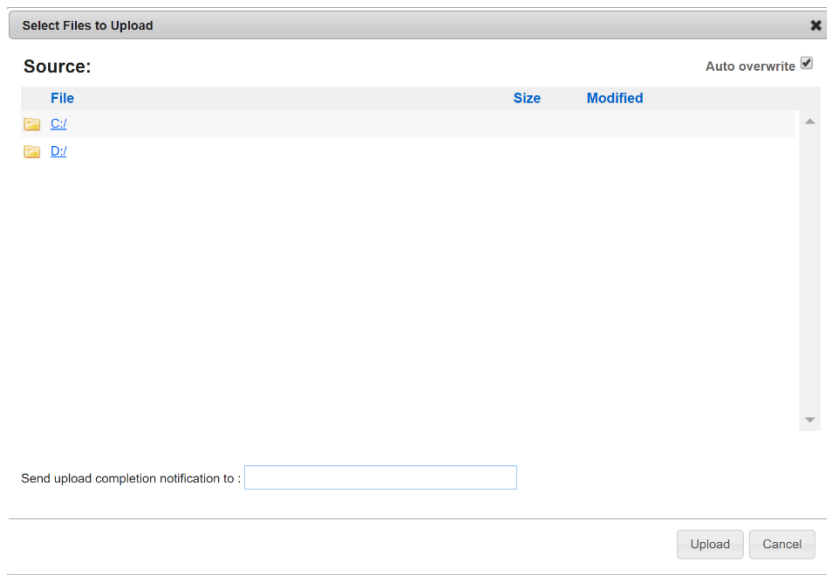

2. Navigate to the path in which the files is located and select the file.
3. For very large files, it is possible to receive an email notification when the upload process was completed. To enable this feature, type the desired email address, or multiple email addresses separated by commas in the **Send upload completion notification to** field.
4. Click **Upload**.
The file will be uploaded using the Zixi protocol. The upload process is displayed at the bottom of the screen (**Files Transfer Queue** tab). When the upload is complete, it will be recorded in the **File Transfer Log** tab.

 You can limit the upload speed by dragging the **Upload Speed Limit** slider.

Upload Speed Limit: 512 kbps

Download Speed Limit: 1000 Mbps

The overall maximal limit determined by the **Max upload speed [kbps]** setting in the **Settings > File Transfer & VOD** screen.

Downloading Files

The files can be downloaded using the Zixi Protocol, through the Zixi Broadcaster UI.


➔ To download a file:

1. In Zixi Broadcaster, click the **Files** tab.
2. Under **Destinations**, navigate to the desired file.


Accelerated File Transfer

Generating Accelerated URLs

3. Hover your mouse over the desired file and click **Download**.

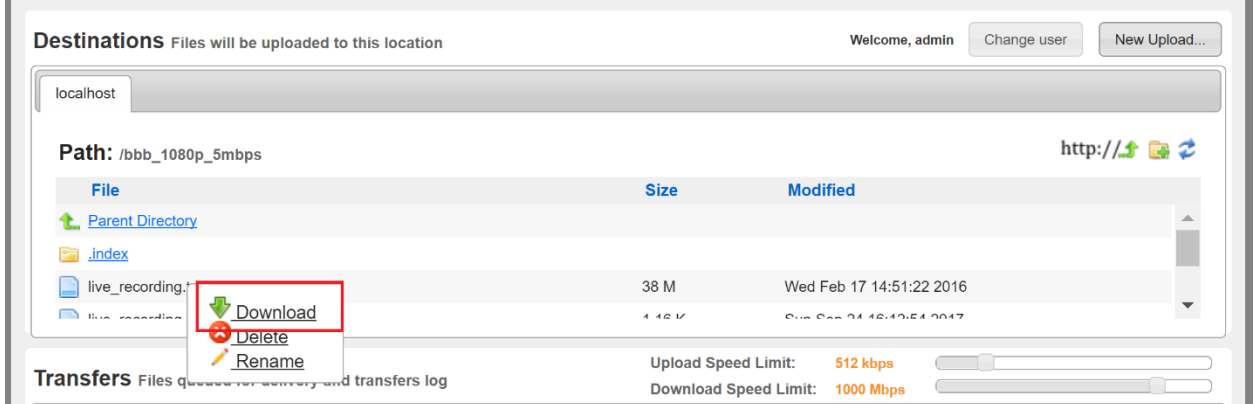

4. In the **Select Download Destination** window, select the local folder as a destination for the file download.
The file will be downloaded using the Zixi protocol. The download process is displayed at the bottom of the screen (**Files Transfer Queue** tab). When the download is complete, it will be recorded in the **File Transfer Log** tab.

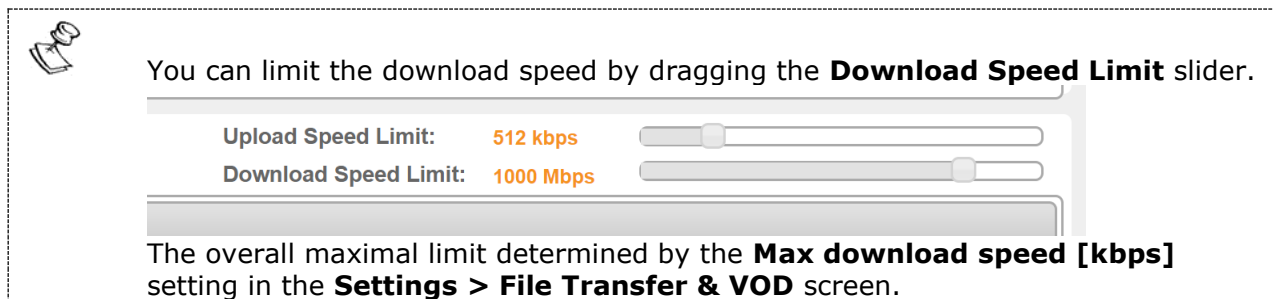

Generating Accelerated URLs


Instead of downloading files from the server on which Zixi Broadcaster is installed, it is possible to use Zixi Broadcaster to retrieve the file from a remote HTTP server. Zixi Broadcaster converts the remote server URL to an Accelerated URL. By using this accelerated URL to download the file, Zixi Broadcaster will retrieve the file from the remote server and use the Zixi Protocol to transfer the file to the Client.

➔ To generate an accelerated URL:


1. In Zixi Broadcaster, click the **Files** tab.

Accelerated File Transfer

Creating a New Folder

2. Under **Destinations**, click the  icon.

The following window appears:

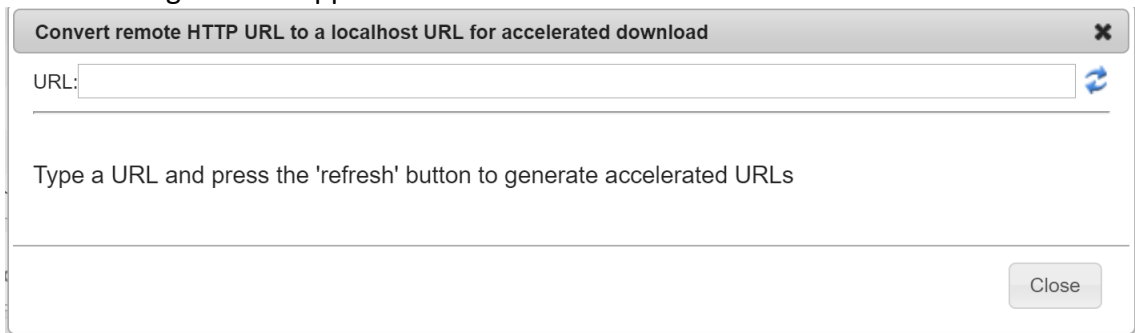

3. In the **URL** field, type the URL of file in the remote HTTP server.
4. Click the  icon.

Two URLs are generated:




The top URL is an HTTP URL and the bottom is an HTTPS URL.


Creating a New Folder

You can use the Zixi Broadcaster UI to create folders on the server on which Zixi Broadcaster is installed.

➔ To create a new folder:

1. In Zixi Broadcaster, click the **Files** tab.
2. Under **Destinations**, click the  icon.

The following window appears:

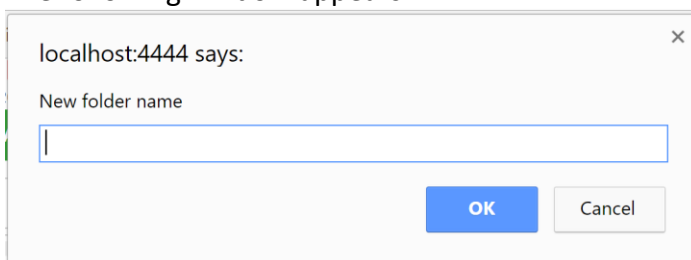

Accelerated File Transfer

Renaming a File/Folder


3. In the **New folder name** field, type a name for the folder.
The folder is created.

Renaming a File/Folder


You can rename a folder or a file through the Zixi Broadcaster UI.

➔ To rename a folder/file:

1. In Zixi Broadcaster, click the **Files** tab.
2. Under **Destinations**, navigate to the desired file.
3. Hover your mouse over the desired file and click **Rename**.

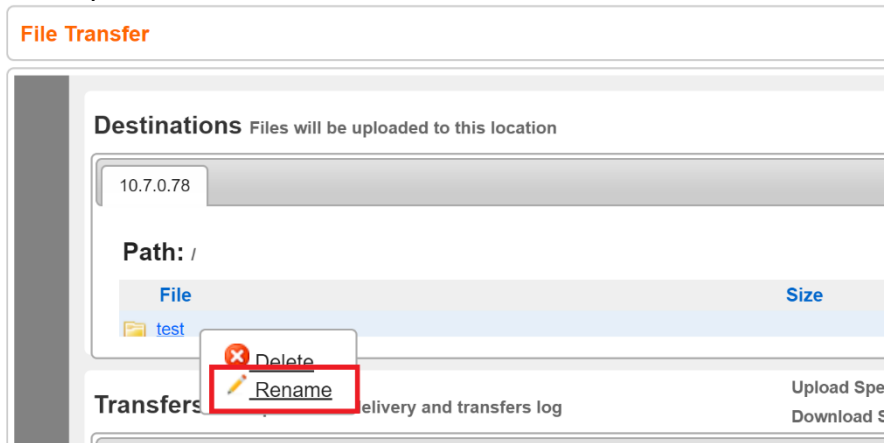

4. In the field, enter the new folder/file name. The location of the files/folder is relative to the Root folder that was specified in the **Settings > General** screen.

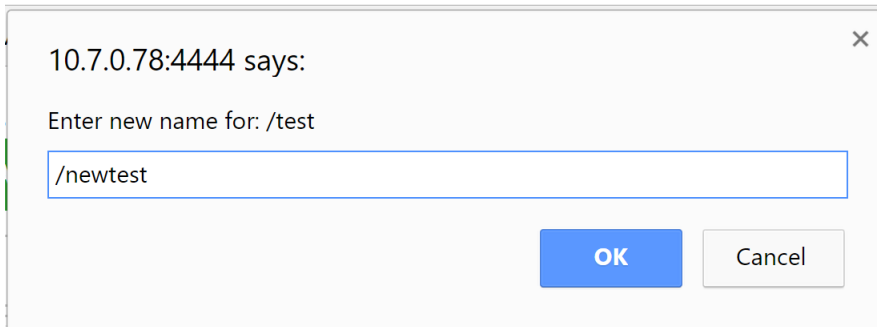

5. Click **OK**.

Deleting an Existing File/Folder


You can delete a folder or a file through the Zixi Broadcaster UI.

Accelerated File Transfer


Deleting an Existing File/Folder

➔ To delete a folder/file:

1. In Zixi Broadcaster, click the **Files** tab.
2. Under **Destinations**, navigate to the desired file.
3. Hover your mouse over the desired file and click **Delete**.

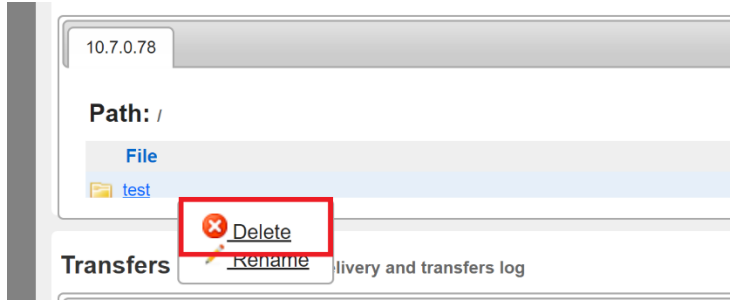

The following dialog is displayed:

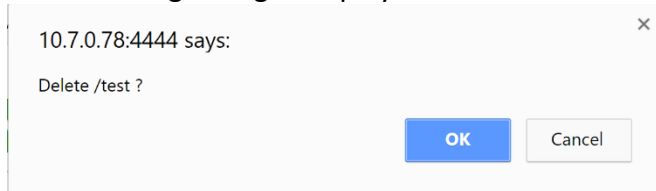

4. Click **OK**.

Transcoder

Zixi Broadcaster offers live transcoding, enabling users to create multiple bitrate streams from a single input stream. The transcoding converts the video and audio live streams to a variety of profiles and bitrates. SCTE-35 markers will be preserved by the transcoder.

The transcoder is typically employed in the following cases:

- Where a target device does not support the source format.
- Where a target has limited storage capacity that requires a reduced file size.
- To convert incompatible obsolete data to a better-supported or modern format.
- You can add video (H.264, H.265, MPEG2, Raw) and audio (AAC, OPUS, Raw) profiles.

Transcoding Templates

Instead of manually selecting input streams to be transcoded, you can optionally define templates with rules for automatic transcoding of input streams according to the settings of a pre-defined Transcoding Template.

NDI Transcoding

For details about NDI transcoding, see Configuring NDI Streams section.

Creating New Profiles

In order for the Broadcaster to switch from one encoding to another, different transcoding profiles must be configured first. These transcoding profiles include the transcoding settings that can be used for the transcoding of streams.

Supported Video and Audio formats include:

- Video Decoding – MPEG2, H.264/AVC , H.265/HEVC
- Video Encoding – MPEG2, H.264/AVC , H.265/HEVC
- Audio Decoding – AAC, MPEG-1 Audio Layer I / II / III, MPEG-2 Audio Layer I / II / III, AC-3 (Dolby Digital)



For AC-3, which can contain up to six discrete channels of sound, the transcoder only supports the left and right channels and will ignore the other channels.

- Audio Encoding – AAC, AAC-HE (High Efficiency) and AAC-HEv2; Pass-through (no encoding) – any audio codec (MPEG1/2 / AAC / AC-3, E-AC-3 (Dolby Digital Plus).



AAC-HE and AAC-HEv2 are only supported for Zixi Broadcasters, v13 and up.

The transcoder comes with the following pre-set common video profiles:

1080i60 / 1080i59.94, 1080p30 / 1080p25, 720p60, 720p50 / 720p30, 576i60 / 576p25, 480i60 / 480p29.97

You can also define your own custom profiles.

Transcoder

Creating New Profiles



For downstream satellite workflows, you will probably need to generate constant bitrate (CBR) streams. This setting is configured at the individual input level (not the transcoding profile level). To set a CBR, enter the desired Transport Stream Bitrate (Kbps) as described in the **Transcoding an Input Stream** section.

➔ To Create a New Profile:

1. In the **Transcoder** page, click [+ New Profile](#).

The **Add New Profile** window is displayed:

Add New Profile

Codec type

H.265 H.264 MPEG2 Raw Video AAC Opus Raw Audio

Profile configuration

Preset: Custom

Name:

Encoder: x264

Encoding Profile: Baseline

Resolution: X

Keep Source Aspect Ratio

Frames per Second: Original

Bitrate Mode: VBR

Average Bitrate (kbps):

Max Bitrate (kbps):

Performance: Very Fast

Advanced options

Copy GOP from source:

GOP [frames]: 60

Closed: Fixed:

B-Frames: 0

Frame Type: Progressive

Reference Frames: 2

HRD buffer length (seconds): 1

CRF: 23

Max QP: 0

[Apply](#) [Close](#)

2. Select the desired **Codec type** - MPEG2, H.264 or H.265, or Raw Video for a video profile or select AAC, Opus, or Raw Audio for an audio profile.
3. Enter the desired fields in the **Profile configuration** (see table below for additional parameters). Select a specific **Preset** profile to automatically fill in the default settings for that profile, OR select **Custom** to create a new profile from scratch.



You can edit specific fields of a preset configuration while creating the profile.

4. If you want to configure the **Advanced options** for the video profiles, select **Advanced options** and fill in the respective fields (see table below for additional parameters).

Transcoder

Creating New Profiles

5. Click **Apply**.

The newly configured profile is created and appears on the screen.

Parameter	Description
Profile configuration	For Video - MPEG2, H.264, H.265, Raw Video
Preset	Select one of the pre-configured presets or select Custom to create a new profile from scratch. Even if you select a preset configuration, you can still change its settings. Default: Custom
Name	Enter a unique name for the profile.
Encoder	Select one of the following options: <ul style="list-style-type: none">• X264 – software-based encoder (available for H.264 only).• Intel – Intel-based hardware encoder.• NVIDIA – NVIDIA-based hardware encoder.

Transcoder

Creating New Profiles

	Select the relevant encoding profiles: For H.265 video profiles with hardware acceleration: <ul style="list-style-type: none">• Main (default) – this profile supports 8 Bit Per Pixel encoding (BPP).• Main 10 – this profile supports 10 Bit Per Pixel encoding (BPP).• Main SP - The Main Still Picture profile allows for a single still picture to be encoded with the same constraints as the Main profile. As a subset of the Main profile the Main Still Picture profile allows for a bit depth of 8-bits per sample. For H.264 video profiles: <ul style="list-style-type: none">• High - The primary profile for broadcast and disc storage applications, particularly for high-definition television applications.• Main - This profile is used for standard-definition digital TV broadcasts that use the MPEG-4 format as defined in the DVB standard.• Baseline - Primarily for low-cost applications that require additional data loss robustness, this profile is used in some video conferencing and mobile applications. For MPEG2 video profiles: <ul style="list-style-type: none">• High – supports SNR and Spatial Scalability and Intra DC Precision of 8, 9, 10, and 11.• Main - supports I and P and B Picture Coding Types and Intra DC Precision of 8, 9, 10.• Simple – supports I and P Picture Coding Types and Intra DC Precision of 8, 9, 10.
Encoding Profile	
Resolution	Enter the new resolution in pixels, if resizing the video.
Keep Source Aspect Ratio	Select this checkbox (default) to maintain the original aspect ratio.
Frames per Second	Select a new frame rate or select Original to use the original frame rate of the stream. Default: Original Note: When a new frame rate is specified, it is applied using "Smooth frame rate conversion". Note: When the frame rate is converted, captions in the elementary stream are preserved.
Average Bitrate (kbps)	Specify the average bitrate for the profile.
Max Bitrate (kbps)	Specify the maximum bitrate for the profile. Available only if the Bitrate Mode is set to VBR.

Transcoder

Creating New Profiles

Performance	Select the performance of the transcoding. Possible values range from <i>Ultra Fast</i> which provides the best quality while utilizing high CPU/GPU to <i>Slower</i> which has the lowest quality but uses much less CPU/GPU. Default: <i>Very Fast</i>
Advanced Options	
Copy GOP from source	Select this checkbox if you want to maintain the source GOP length (not structure). Enabling this option will generate an I-frame in the transcoded stream with the exact timestamp as in the source stream. The Copy GOP from source option is only available when selecting the Original option in the Frames per Second field. If you want to change the source GOP length specify the new GOP length in the GOP [Frames] parameter.
GOP [frames]	Specify the number of frames in a GOP (Group of Pictures). Default:60
GOP Settings	<ul style="list-style-type: none">• Closed – for a GOP in which the previous pictures do not need data from the subsequent GOP for bidirectional coding, select the Closed checkbox (default).• Fixed – to always use the specified number of frames in the GOP (as opposed to allowing the encoder to override), select the Fixed checkbox (default).
B-Frames	Specify the maximal number of consecutive B frames in the GOP . Default: 0
Frame Type	Specify the frame type – progressive or interlaced. Default: Progressive
Reference Frames	Specify the number of frames that can be referenced for each frame. Default: 2
HRD buffer length (seconds)	Specify the length of the HRD buffer in MPEG-2.
CRF	The Constant Rate Factor (CRF) is the default quality (and rate control) setting for x264 and x265 encoders. You can set the values between 0 and 51, where lower values would result in better quality, at the expense of higher file sizes. Higher values mean more compression, but at some point you will notice the quality degradation.

Transcoder


Creating New Profiles


MAX QP	The QP (Quantization) parameter controls how the compression rate. Ranging from 0 (No compression) and 51 (Max compression). Max QP - controls the maximum value the encoder can set for QP. For example, a low number will result in a lower compression rate causing the video to look better, however requiring a higher bitrate. A higher max QP value may reduce the visual quality but results in a lower bitrate.
Bit Depth	<p>Conversion of the 10-bit HDR color encoding source to 8 BPP.</p> <p>This feature is enabled for the following configurations:</p> <ul style="list-style-type: none">• H.264 – Encoder: X264; Encoding Profile: High 10.• H.265 – Encoder: Nvidia; Encoding Profile: Main 10. <p>If the source is 10-bit, select one of the following:</p> <ul style="list-style-type: none">• As Source – to maintain a 10-bit color encoding.• 8 BPP – to converted down/encod to 8-bit color.
Profile configuration	For Audio – AAC, OPUS.
Name	Enter a unique name for the profile.
Bitrate	Specify the bitrate for the profile.
Sampling Rate	<p>You can convert the audio sampling rate from 44.1kHz to 48kHz and vice versa. Select one of the following options:</p> <ul style="list-style-type: none">• Copy from source – if you do not wish to make any changes.• 44.1kHz – to convert a 48kHz audio stream to 44.1kHz.• 48kHz – to convert a 44.1kHz audio stream to 48kHz.
Encoding Profile (for AAC)	<ul style="list-style-type: none">• AAC-LC (default) - AAC Low Complexity. The simplest and most widely used and supported profile.• HE-AACv1 - AAC High Efficiency 1. This profile uses spectral band replication (SBR) to enhance the compression efficiency in the frequency domain.• HE-AACv2 - AAC High Efficiency 2. couples SBR with Parametric Stereo (PS) to enhance the compression efficiency of stereo signals. It is a standardized and improved version of the eAAC+ codec.

Transcoding an Input Stream

Once you have created the profile, you can use it to transcode an input stream.

➔ To Transcode an Input Stream:

1. On the **Inputs** page of Zixi Broadcaster, click the desired row of the input stream that you want to transcode.
2. Click the  button on the right end of the selected row and then **Transcode**. The **Transcode <input stream name>** window with the settings of the selected input stream is displayed.

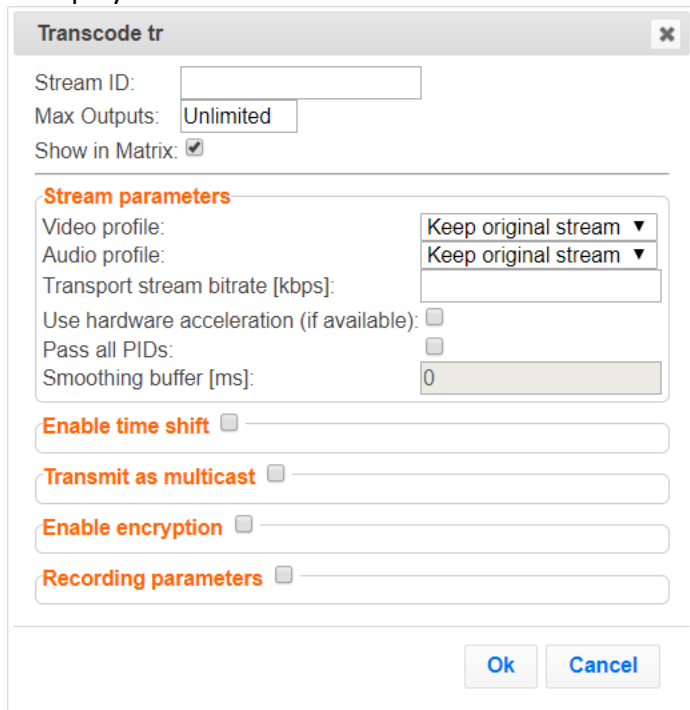

3. Enter the unique **Stream ID** for the new transcoded input stream.
4. Under **Stream Parameters**, in the Video profile and Audio profile fields, do one of the following:
 - Select the desired Video Profile and/or Audio Profile that you have configured.
 - Select **Keep original stream** - if you have not configured a video or audio profile or do not want it transcoded or you want to set specific transcoding parameters for the specific stream. In this case the video or audio input will not be transcoded.
 - Select **Remove stream** – you can use the transcoder to remove the video or audio track from the stream.
5. Fill in additional fields (see table below for additional parameters).
6. Click **OK**.

Transcoder

Transcoding an Input Stream

The transcoded input stream is created and appears in an embedded window labeled **Transcoded sources** under the original input stream from which it was created.

Parameter	Description
Stream Parameters	
Video Profile	Select an existing profile, select Keep original stream if you do not wish to transcode the video stream, or select Remove stream if you want to remove the video track.
Audio Profile	Select an existing profile, select Keep original stream if you do not wish to transcode the audio stream, or select Remove stream if you want to remove the audio track.
Transport Stream Bitrate (Kbps)	Specify the bitrate of the transport stream. This parameter is optional. If you do not specify a TS Bitrate, the stream will be VBR. If you specify a bitrate, the stream will be CBR. Note – CBR is recommended for downstream satellite workflows.
Use Hardware Acceleration (if available)	Select this checkbox to use hardware acceleration component (e.g. NVIDIA or Intel) if it has been installed.
Pass all PIDs	Select this checkbox to pass-through all non-transcoded PIDs.
Smoothing Buffer (ms)	Specify how much of the transcoded stream (in milliseconds) to store before transmitting it back to the server in order to prevent bursts. If the Transport stream bitrate [kbps] field is empty, the smoothing buffer is disabled. If the Transport stream bitrate [kbps] field is NOT empty, it is recommended to enter around 200ms, which should be enough to prevent bursts.
Crop Parameters	Select this checkbox to set the cropping parameters.
Cropping Mode	Set the units used for defining the crop. Options are: <i>Pixels</i> or <i>Percentages</i> . Note: Depending on the type of content, in some cases using different crop values for low resolution outputs might be appropriate. For example, if the content includes both video content and textual content, the text would not be readable at lower resolutions and thus might be better to exclude. Another use case for using different crop values for each output would be to slice a 360 or VR input video.
Left, Top	Specify the left and top positions for the crop.
Width x Height	Specify the width and height values for the crop.
Enable time shift	
Maximum delay [hh:mm:ss]	Specify the time of the delayed transmission of this stream. Maximum: 24 hours.

Transcoder

Transcoding an Input Stream

Parameter	Description
Transmit as multicast	Selecting this checkbox enables the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings. This setting requires enabling Multicast Pool (Settings > Multicast Pool).
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory

Transcoder

Transcoding an Input Stream

Parameter	Description
	For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	
File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.

Transcoder

Transcoding Templates

Parameter	Description
Secret Key	The secret key that is used for accessing the S3 bucket.


Transcoding Templates

Instead of manually selecting input streams to be transcoded, you can define templates with rules for automatic transcoding of input streams according to the settings of a pre-defined Transcoding Template. Every time a new input stream, which matches the conditions of the template, is added, it will be automatically transcoded into the transcoded streams defined in the template's settings. The input streams are identified by system according to naming patterns.




The transcoding profiles used in the transcoding templates have to be created in advance (for more information see [Creating New Profiles](#)).

➔ To create a new transcoding template:


1. Click the **Inputs** tab at the top of the Zixi Broadcaster administrative screen.
2. In the Menu bar, click the Templates () button.

The **Transcoding Templates** window is displayed:

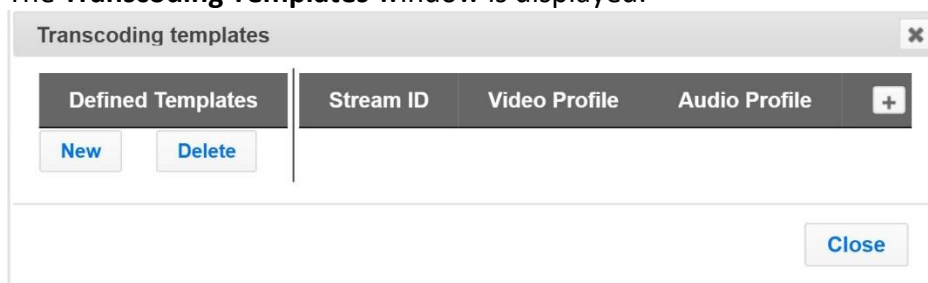

3. Click **New** to define a new template.

The following window is displayed:

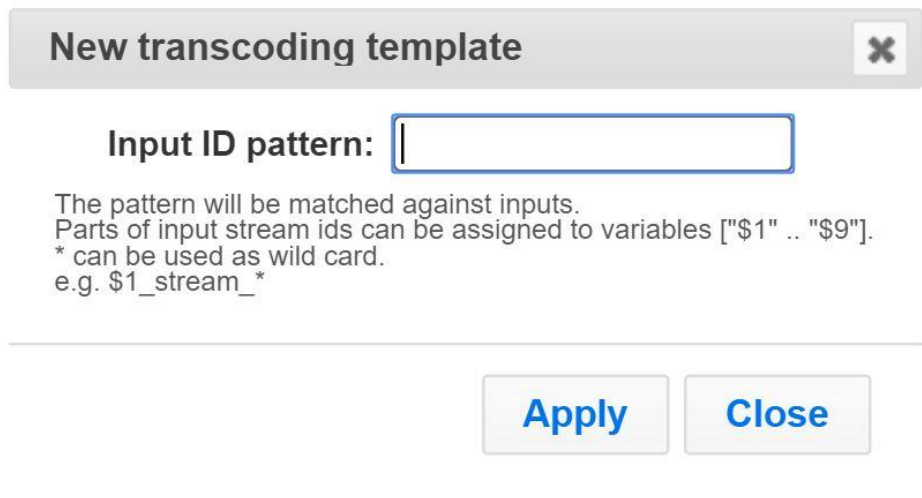

New transcoding template [X]


Input ID pattern:

The pattern will be matched against inputs.
Parts of input stream ids can be assigned to variables ["\$1" .. "\$9"].
* can be used as wild card.
e.g. \$1_stream_*

Apply **Close**

4. In the **Input ID pattern** field, enter a pattern for the Stream ID of the input stream that will be automatically transcoded. This pattern will be used to identify the input stream and can include variables that are marked with the "\$" sign followed by a number (e.g. \$1, \$2, etc.) and/or with an asterisk "*" wildcard. The patterns should also include a part of the string that requires an exact match. For example, the pattern "\$1_stream_\$2kbps" will match an input stream "talk_show_stream_600kbps".
5. Click **Apply**.

The new template is added to the list of transcoding templates. However, the transcoding will not be active until you define transcoded stream rules.

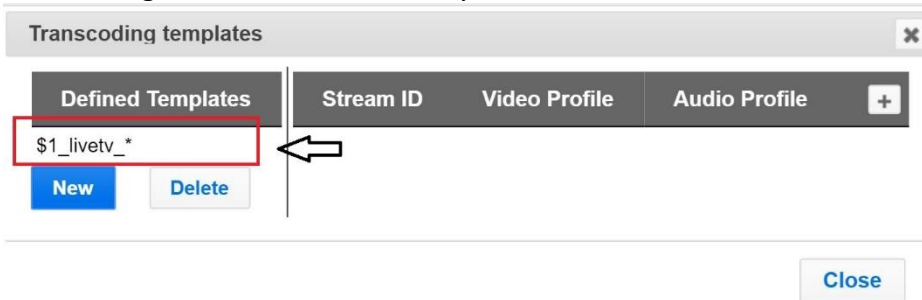

Transcoding templates [X]

Defined Templates	Stream ID	Video Profile	Audio Profile
\$1_livetv_*			

New **Delete** [X]

Close

6. Select the newly created template and click the **+** button, located at the right-hand corner to define a transcoded stream rule.

The **Transcode <template_name>** window opens:

7. Enter the unique **Stream ID**. for the transcoded stream.
8. In the **Max Outputs** field, define the maximal number of outputs that can be connected to the stream.
9. Under **Stream Parameters**, select the desired Video Profile and/or Audio Profile that you have configured. If you have not configured a video or audio profile you can select **Keep original stream**. In this case the video or audio input will not be transcoded. You can also set specific transcoding parameters for the specific stream (see table below for more details).
10. Click **OK**.

The transcoded input stream rule is created and appears as follows:

Defined Templates	Stream ID	Video Profile	Audio Profile	
\$1_livetv_*	\$1_livetv_	trans1	Original stream	

Transcoder

Transcoding Templates

If an input stream enters Zixi Broadcaster and matches the **Input ID pattern**, it will be transcoded according to all the transcoded input stream rules that were created.

Parameter	Description
Video Profile	Select an existing profile or select Keep original stream if you do not wish to transcode the video stream.
Audio Profile	Select an existing profile or select Keep original stream if you do not wish to transcode the audio stream.
Transport Stream Bitrate (Kbps)	Specify the bitrate of the transport stream. This parameter is optional. If you do not specify a TS Bitrate, the stream will be VBR. If you specify a bitrate, the stream will be CBR.
Use Hardware Acceleration (if available)	Select this checkbox to use hardware acceleration component if it has been installed.
Pass all PIDs	Select this checkbox to pass-through all non-transcoded PIDs.
Enable time shift	Select to enable delayed transmission.
Maximum delay [hh:mm:ss]	Specify the time of the delayed transmission of this stream. Maximum: 24 hours.
Transmit as multicast	Selecting this checkbox enables the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings. This setting requires enabling Multicast Pool (Settings > Multicast Pool).
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Recording Parameters	
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours


11. Repeat steps 6-10 above to create additional transcoded input stream rules.

Server Settings

Zixi Broadcaster is pre-configured with default settings, so generally there is no need to change the server settings. However, some users may want to change specific settings to meet their specific needs.

General

The General Settings screen includes basic configuration parameters for the server including the server’s ID, access ports, authorizations, security, and storage.

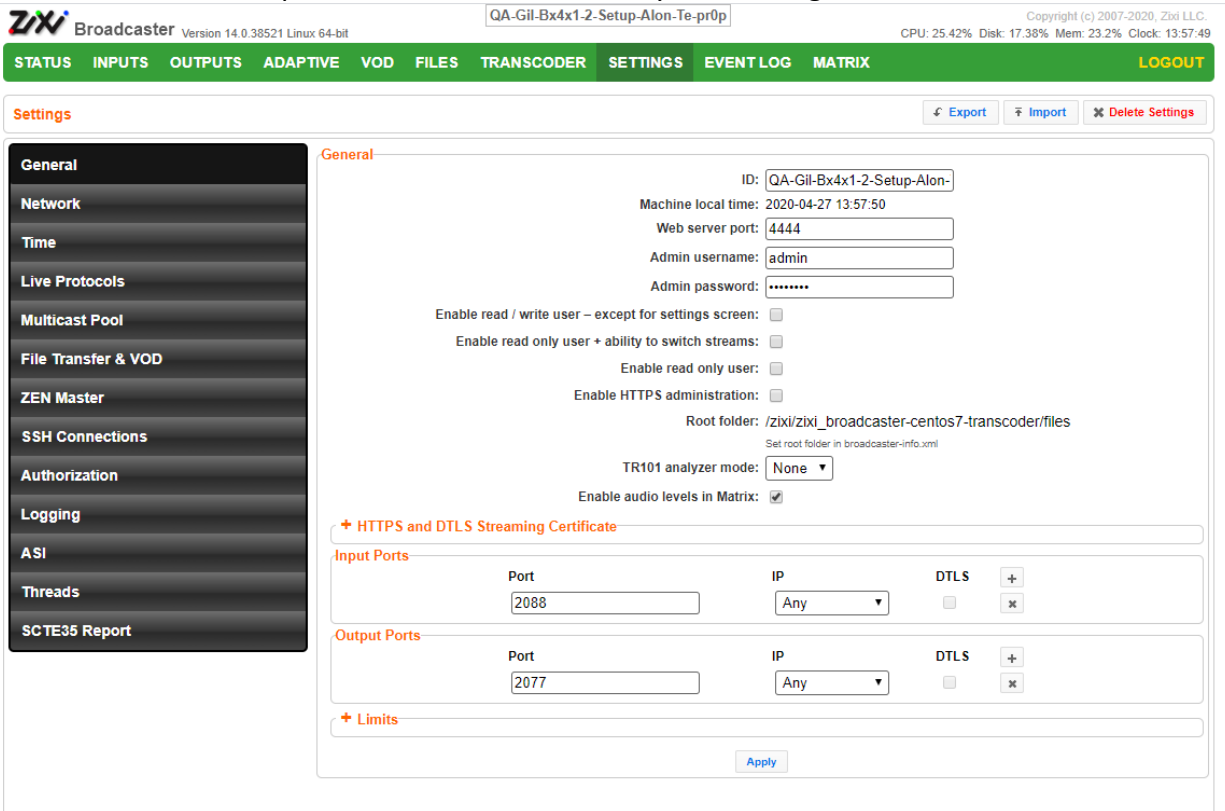

Field	Description
General	
ID	The unique (alphanumeric) name of the Zixi Broadcaster server. Typically: host name. This field is editable.
Machine local time	Shows the current time for the machine.

Server Settings

General

Web Server Port	The port number of the web server administration. You can configure this parameter to any legal port number which is supported by your Firewall. Default: 4444
Admin User Name	The user name of the administrator. The administrator is authorized to modify all parameters in the system as well as manage all the outputs and inputs on the server.
Admin Password	The password of the administrator.
Enable read / write user - except for settings screen	Select this checkbox to enable an "Operator" user. This type of user can read and write throughout all of the screens, except for the screens under the Settings menu. You can modify the user name (i.e. enter another name instead of Operator) and password.
Enable read-only user +ability to switch streams	Select this checkbox to enable a "User" user. This type of user can read throughout all of the screens as well as the ability to switch between existing streams. You can modify the user name (i.e. enter another name instead of User) and password.
Username	The account Username.
Password	The account password.
Enable read only user	Select this checkbox to enable an "Observer" user. This type of user can read throughout all of the screens. You can modify the user name (i.e. enter another name instead of Observer) and password.
Enable HTTPS administration	Enables secure HTTPS connection to the server for administration. Enabling HTTPS requires the relevant certificates and private keys. To enable HTTPS, click on the checkbox and upload the required files.
HTTPS certificate uploaded (for HTTPS enabled)	If no certificate has been uploaded, click Upload and navigate to the file location.
HTTPS private key uploaded (for HTTPS enabled)	If no private key has been uploaded, click Upload and navigate to the file location.
HTTPS private key passphrase (for HTTPS enabled)	Enter the Private key passphrase for your HTTPS account.
SSL Setup Status	Displays the status of the SSL certificate upload process. Incomplete – the SSL setup process is incomplete.

Server Settings

General

	OK – the SSL setup process is complete.
Root folder	Displays the configured root folder. You can modify the root folder by modifying the broadcaster-info.xml, which is located in the Zixi Broadcaster installation folder (<Broadcaster_Installation_Folder>\Zixi\Broadcaster\)
TR101 analyzer mode	Select the mode in which the TR101 analyzer will operate: None – no TR101 analysis ATSC – based on the Advanced Television Systems Committee recommendations. DVB – based on the Digital Video Broadcasting specifications.
Enable audio levels in matrix	Select this option to enable audio in Matrix view. When not selected the audio will be turned off.

HTTPS and DTLS Streaming Certificate

Certificate uploaded (for DTLS enabled) If no certificate has been uploaded, click Upload and navigate to the file location.
Note: This is the same certificate as the HTTPS certificate.

Private key uploaded (for DTLS enabled) If no private key has been uploaded, click Upload and navigate to the file location.

Private key passphrase (for DTLS enabled) Enter the Private key passphrase for your DTLS account.

Input ports

Port The port that is used for Input streams. You can modify the port number and/or add additional ports by adding a “,” between them.
Adding additional ports may be necessary when there is a chance that the ISP will block a certain port. Click '+' to add additional ports.
Default: 2088

IP Enter an IP address. The default enables **Any** IP address.

DTLS Click the DTLS check box to activate DTLS automatic encryption of the streams.

+ (add ports) Click + to add additional ports.
Note: For each port you can select whether or not to activate DTLS encryption. This enables streaming of non-encrypted streams on one port and encrypted streams on a separate port.

Output ports


Server Settings

General

Port	The port that is used for the Output streams. Displays the Output port(s). You can modify the port number and/or add additional ports by adding a “,” between them. Adding additional ports may be necessary when there is a chance that the ISP will block a certain port. Click '+' to add additional ports. Default: 2077
IP	Enter an IP address. The default enables Any IP address.
DTLS	Click the DTLS check box to activate DTLS automatic encryption of the streams.
+ (add ports)	Click + to add additional ports. Note: For each port you can select whether or not to activate DTLS encryption. This enables streaming of non-encrypted streams on one port and encrypted streams on a separate port.
Limits	Select to configure thresholds for generating an alarm.
CPU [%]	The CPU utilization threshold. If this limit is exceeded, the CPU indicator at the top of the screen will appear in red, and an alarm will be generated in the event log. Default: 90
Memory [%]	The memory utilization threshold. If this limit is exceeded, the Memory indicator at the top of the screen will appear in red, and an alarm will be generated in the event log Default: 90
GPU [%]	The GPU utilization threshold. If this limit is exceeded, the GPU indicator at the top of the screen will appear in red, and an alarm will be generated in the event log. Default: 0
Input Bandwidth [kbps]	Bandwidth utilization threshold for input streams. Default: Unlimited.
Output Bandwidth [kbps]	Bandwidth utilization threshold for output streams. Default: Unlimited.

Network

The Network screen enables the configuration of the network settings of the Zixi Broadcaster. The screen includes the option to configuration multiple NICs, VLANs, and multiple DNS Servers.

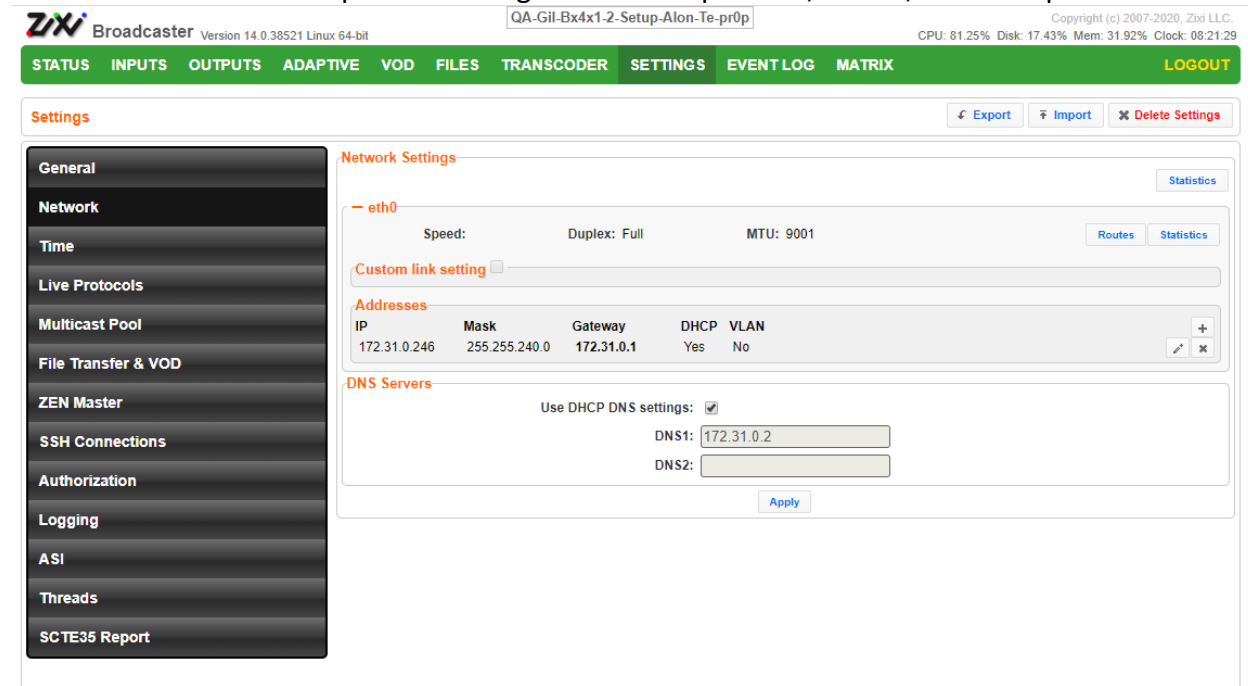


Field	Description
Network Settings	Click to configure the specified NIC. Displays the following parameters: <ul style="list-style-type: none"> Speed – the network card speed Duplex – whether the network card is full-duplex or half-duplex MTU - the size of the largest protocol data unit (PDU) that can be communicated in a single network layer transaction.
eth0	
Custom link settings	Select this checkbox to configure different link settings than the default settings.
Addresses	Displays the current IP address that is configured for the link. You edit these settings by clicking the Edit (pencil icon) button. Click the '+' button to add another link.
DNS Servers	
Use DHCP DNS settings	Select this option to use the DHCP settings instead of the DNS. If not selected, configure at least one DNS server.

Server Settings

Network

➔ To Display Network Statistics:


1. From the Settings page of the Zixi Broadcaster, click **Network** on the left-hand side. The various Network settings are displayed.
2. Click  on the right-hand side. The **UDP statistics** window is displayed.

Field	Description
####Packets received	Number of packets on network received.
####packets to unknown port received	Number of packets to unknown port on network received.
####packet receive errors	Number of packets on network which received errors
####packets sent	Number of packets on network sent.
####SndbufErrors	Number of Sent buffer errors

3. Click the **Refresh** button to update the data or **Close** to close the window

Time


The Time screen enables the configuration of the system time synchronization for the system. The time can be synchronized with the machine local time or to an external NTP server.

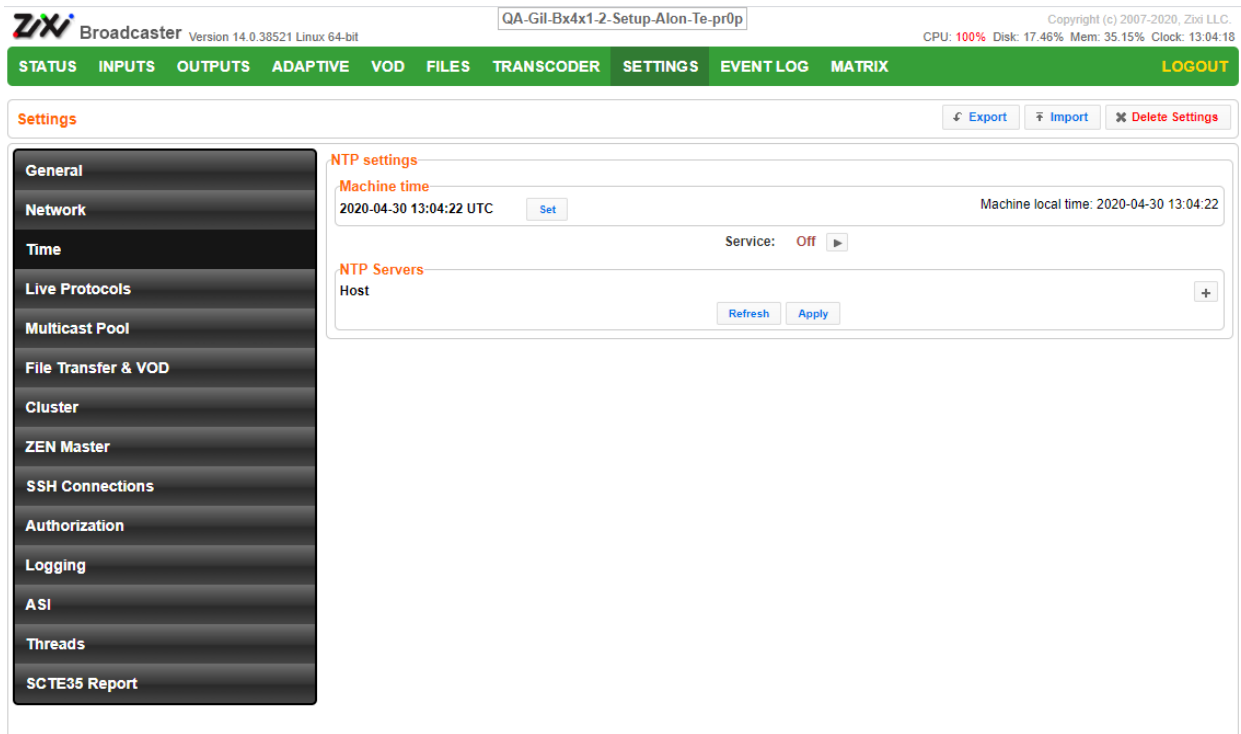

Field	Description
NTP Settings	
Machine Time	Displays the current machine local time. To set the time click Set and modify the values.
Service	
NTP Servers	Configure external NTP servers for time synchronization. Click the + button to add an NTP server and specify the Host IP address.

Live Protocols

The Live Protocols screen enables the configuration of the HTTP/HTTPS/RTMP/WebSocket server that will broadcast the streams using live streaming protocols, particularly for adaptive streaming and internet protocols.

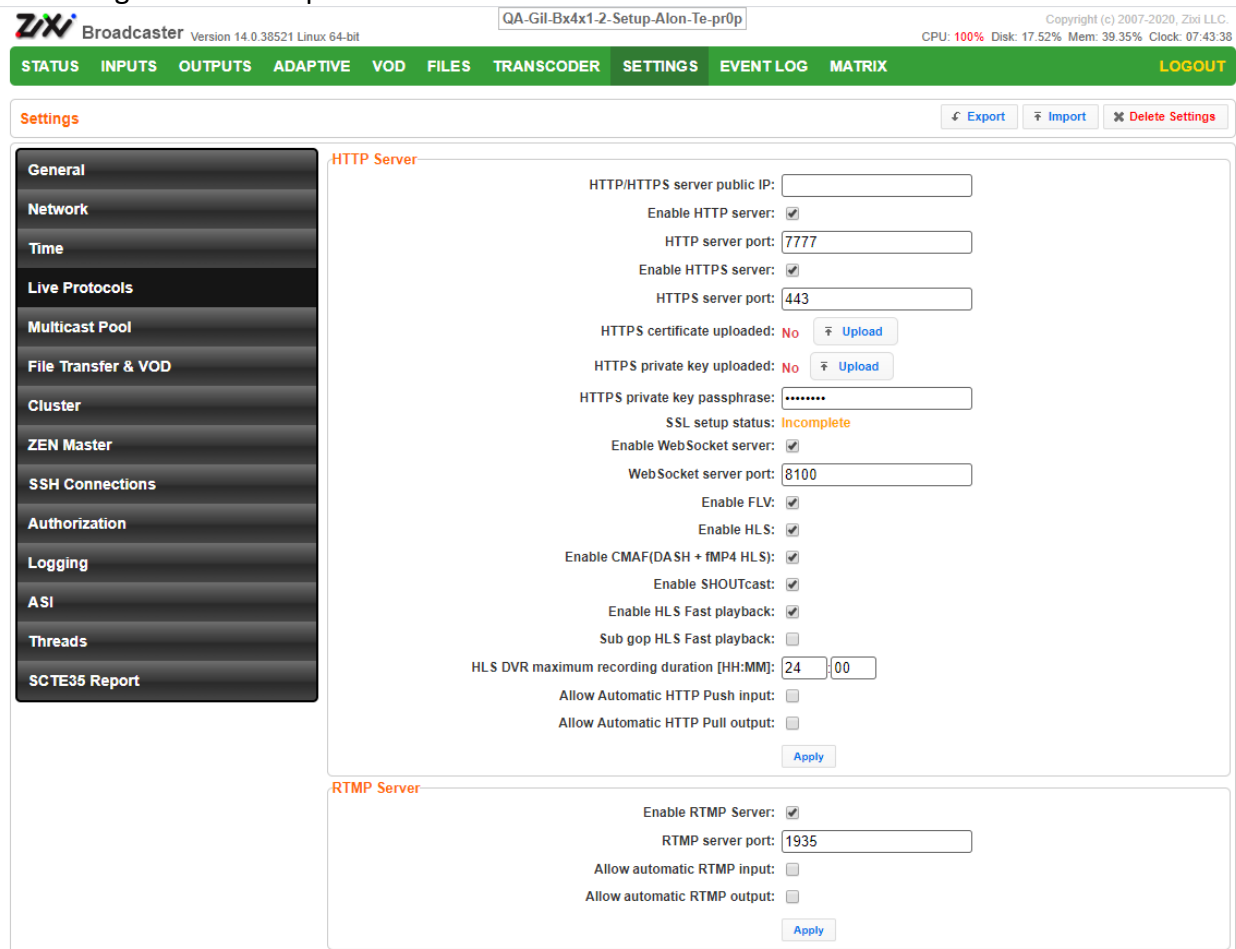

Field	Description
HTTP Server	
HTTP/HTTPS Server Public IP	Override the Zixi IP (e.g. download.Zixi.com) with a public IP.
Enable HTTP Server	Enable a non-secure connection over HTTP.
HTTP Server Port	Defines the HTTP Server Port. Default:7777
Enable HTTPS Server	Enable a secure connection over HTTPS.

Server Settings

Live Protocols

HTTPS Server Port	Defined the HTTPS server port. Default: 443
HTTPS certificate uploaded (for HTTPS enabled)	If no certificate has been uploaded, click Upload and navigate to the file location.
HTTPS private key uploaded (for HTTPS enabled)	If no private key has been uploaded, click Upload and navigate to the file location.
HTTPS private key passphrase (for HTTPS enabled)	Enter the Private key passphrase for your HTTPS account.
	Displays the status of the SSL certificate upload process.
SSL Setup Status	Incomplete – the SSL setup process is incomplete. OK – the SSL setup process is complete.
Enable WebSocket server	Select checkbox to enable the WebSocket server. The WebSocket server uses the WebSocket protocol to stream content. The WebSocket protocol provides full-duplex communication channels over a single TCP connection.
WebSocket Server Port	If you have enabled WebSocket, enter a dedicated port for WebSocket. (Default: 8100)
Enable FLV	Enable the streaming via the FLV protocol.
Enable HLS	Enable the streaming via the HLS protocol.
Enable CMAF (DASH + fMP4 HLS)	Enable the streaming via the CMAF protocol.
Enable SHOUTcast	Enable the streaming via the SHOUTcast protocol.
Enable HLS Fast playback	Enables low latency HLS and DASH. When this setting is enabled, all input streams on the Zixi Broadcaster will be published to the origin server as HLS streams, so only enable this feature if it will be actually used.
Sub GOP HLS Fast playback	Select this option to enable publishing of HLS chunk before the response is complete. This means that Zixi Broadcaster will start sending the HTTP response as chunks of data when they are ready before the complete response is available.
HLS DVR maximum recording duration [HH:MM]:	Defines the maximum recording duration for HLS DVR. Default: 24 hours.

Server Settings

Live Protocols

Allow Automatic HTTP Push input Automatically creates an HTTP Push input without the need to define it in the Input screen.

Allow Automatic HTTP Pull output Automatically creates an HTTP Pull output without the need to define it in the Output screen. This works in tandem with Zixi Feeder (Remote HTTP Pull Output setting, which enables sending a Zixi-protected stream to Zixi Broadcaster and then Zixi Broadcaster automatically outputs the stream as HTTP Pull) and SDK (which includes a `zixi_http_pull_out_config` option). By enabling this option, the HTTP Pull streams will be automatically created as they arrive into Zixi Broadcaster and displayed in the Output screen.

RTMP Server

Enable RTMP Server Enables Zixi Broadcaster to handle incoming RTMP streams.

RTMP Server Port The port through which the RTMP stream will be transmitted. Default: 1935

Allow Automatic RTMP Input Automatically creates an RTMP input without the need to define it in the Input screen.

Allow Automatic RTMP Output Automatically creates an RTMP output without the need to define it in the Output screen. This works in tandem with Zixi Feeder (**Remote RTMP Output** setting, which enables sending a Zixi-protected stream to Zixi Broadcaster and then Zixi Broadcaster automatically outputs the stream as RTMP) and SDK (which includes a `zixi_rtmp_out_config` option). By enabling this option, the RTMP streams will be automatically created as they arrive into Zixi Broadcaster and displayed in the Output screen.

Multicast Pool

Multicast pool is a collection of multicast IP addresses that automatically assign a multicast IP when an input is being pulled out of the Zixi Broadcaster. When the “multicast pool” setting is enabled, you do not have to define a specific multicast IP address for every push stream. Instead, you simply enable the Multicast Only parameter and Zixi Broadcaster will assign the multicast IP automatically when it pulls the stream out. When the multicast stream is connected, it will appear in the Status table at the bottom of the screen.

The screenshot shows the Zixi Broadcaster web interface. At the top, there is a navigation bar with tabs for STATUS, INPUTS, OUTPUTS, ADAPTIVE, VOD, FILES, TRANSCODER, SETTINGS (selected), EVENT LOG, and MATRIX. A LOGOUT button is on the right. Below the navigation bar, the page title is "Settings" with buttons for Export, Import, and Delete Settings. A sidebar on the left lists various settings categories, with "Multicast Pool" selected. The main content area is titled "Configuration" and contains the following fields:


- Enabled:
- Address: (with a note: e.g. 225.5.0.0 / 16 would give a range 225.5.0.0 ~ 225.5.255.255)
- Port:
- NIC:
- TTL:

Below the configuration fields is a "Status" section with a table header: Stream, IP, Multicast, Unicast. The table content is "No data available in table".

Field	Description
Configuration	
Enabled	Enables multicast pool
Address	Specify the range of IP addresses (CIDR format).
Port	Specify the port that will be shared by all of the members of the pool.
NIC	Specify the network card to use for the outgoing multicast traffic.
TTL	Specify the Time To Live.

File Transfer & VOD

The File Transfer and VOD settings screen enables the download of files and the playback of VOD content and, in addition, specifies the speed limits (download/upload). The settings in this screen are related to the VOD and Files screens.

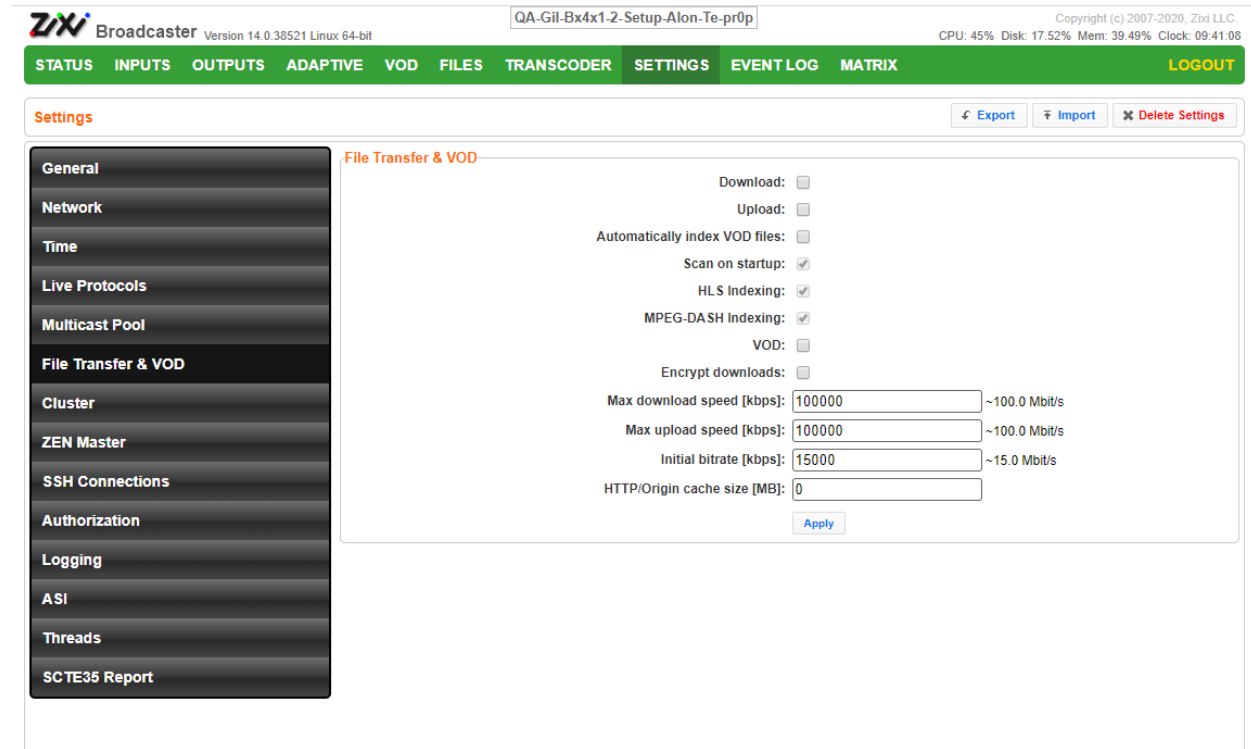

Field	Description
File Transfer & VOD	
Download	Enables download of files through the Files menu of the Zixi Broadcaster.
Upload	Enables upload of files through the Files menu of the Zixi Broadcaster
Automatically index VOD files	Indexes the VOD files in the various VOD folders. In some cases, the indexing of VOD files can affect performance. Using this control, you can decide when to index the VOD files in order to ensure optimal performance during peak times.
Scan on startup	Indexes the files in the VOD folder that have not been indexed during startup of the Zixi Broadcaster.
HLS indexing	Enables indexing of HLS streams. The indexing creates an M3U8 playlist file.
MPEG-DASH indexing	Enables indexing of MPEG-DASH streams. The indexing creates a .mpd (MPEG-DASH Media Presentation Description) file.

Server Settings

File Transfer & VOD

VOD	Enables the VOD feature.
Encrypt downloads	Encrypts files that are downloaded.
Max download speed [kbps]	Limits the amount of bandwidth used to download files
Max upload speed [kbps]	Limits the amount of bandwidth used to upload files
Initial bitrate [kbps]	Limits the amount of bandwidth used during initial download/upload (before cache)
HTTP/Origin cache size [MB]	Limits the amount of cache memory that can be used for cache

Cluster

Zixi Broadcaster enables two types of configurations:

- **Cluster configuration** - a cluster of Zixi Broadcaster servers in a LAN for load balancing purposes. The different Zixi Broadcaster servers will communicate with each other and are “aware” of the Input/Output traffic of each node in order to redirect the streams to the least occupied Zixi Broadcaster instance. All Zixi Broadcasters should have a separate **Public IP** (NIC #1) and in addition, they all should have an internal IP on the LAN (**Cluster Internal IP**) to communicate over multicast (NIC #2). When a request received by the Zixi Broadcaster, it accepts it, or transmit it internally to another Zixi Broadcaster that is less loaded and has the requested channel. The Cluster feature is currently supported for:
 - Inputs - Zixi Push inputs
 - Outputs - Zixi Pull outputs, HLS outputs



If you want to use more advanced load balancing and high availability features, instead of configuring the cluster within each Zixi Broadcaster (as described below) it is recommended to configure the cluster within ZEN Master, which requires a single cluster configuration and then automatically manages the load balancing and high-availability, while enabling monitoring, reporting, and other advanced features. For more information, see:

<https://zixidocumentation.atlassian.net/wiki/spaces/ZMUG/pages/388005967/Adding+a+Broadcaster+Cluster+Automatic+Scaling>.

- **Edge-Origin configuration** - the cluster may be used to forward the stream from one Zixi Broadcaster server (origin) to other Zixi Broadcaster servers (edge) which are closer to the user or is located in a less sensitive environment. When the end-user connects to the edge server to view a certain stream, the edge server will retrieve the stream from the origin server and will seamlessly deliver it to the end-user.

Server Settings

Cluster

ZIXI Broadcaster Version 14.0.38521 Linux 64-bit QA-Gil-Bx4x1-2-Setup-Alon-Te-pr0p Copyright (c) 2007-2020 Zixi LLC. CPU: 98.09% Disk: 17.52% Mem: 39.33% Clock: 09:47:47

STATUS INPUTS OUTPUTS ADAPTIVE VOD FILES TRANSCODER **SETTINGS** EVENT LOG MATRIX LOGOUT

Settings Export Import Delete Settings

General

Network

Time

Live Protocols

Multicast Pool

File Transfer & VOD

Cluster

ZEN Master

SSH Connections

Authorization

Logging

ASI

Threads

SCTE35 Report

Origin

Enabled:

Host: Port:

Alternative host: Port:

HTTP/Origin cache size [MB]:

Live Streams

Latency [ms]:

Timeout [s]:

[Apply](#)

Cluster

Enabled:

Public IP:

Cluster internal IP: TTL:

Port:

Local IP:

Balance inputs:

Balance outputs:

[Apply](#)

Field	Description
Origin	
Enabled	Enables Edge-Origin configuration.
Host	The primary host IP address of the origin server.
Port	The port number in the origin server for transmitting the stream. Default: 2088
Alternative Host	The IP address for a secondary server. If the primary origin server is unavailable, the data will be retrieved from the secondary origin server.
Port	The port number for the secondary origin server. Default: 2088
HTTP/origin cache size [MB]	The size of the cache that will be used to serve multiple users. The edge server will retrieve the data from the origin and cache it for additional users in order to save bandwidth and increase performance.
Live Streams	
Latency [ms]	Specify the buffer size between the edge and the origin.
Timeout [s]	Specify the maximum amount of time in which the edge will attempt to connect to the origin. After the timeout period the edge server will attempt a connection with the secondary origin server.

Server Settings

Cluster

Cluster	
Enabled	Enables Cluster configuration.
Public IP	The public-facing IP address of this Zixi Broadcaster server for external access. A unique Public IP must be assigned to each broadcaster in the cluster.
Cluster Internal IP	The internal IP (multi-cast) address for communication between the various servers in the cluster. This address is used to communicate load information forwarding the streams within the cluster. The same multicast IP address should be used across all instances in the cluster.
TTL	Specify the Time To Live parameter.
Port	Specify the port that are used in all the participating Broadcaster servers in the cluster.
Local IP	Specify the local IP address which the network employs for internal communication.
Balance Inputs	Enables the balancing of the inputs.
Balance Outputs	Enables the balancing of the outputs.


Zen Master

The ZEN Master screen is used to add the current Zixi Broadcaster to an existing Broadcaster Cluster in Zen Master that has been configured for "Manual Scaling". This process involves pre-configuring a "manual scaling" Broadcaster Cluster in ZEN Master, then, still in ZEN Master, creating a manual Zixi Broadcaster within this cluster, and then finally from the ZEN screen of the current Zixi Broadcaster UI, selecting the previously created Broadcaster Cluster and Zixi Broadcaster (that we had created though the ZEN Master UI). This process will generate a connection between the logical representation of the Zixi Broadcaster in ZEN Master and the Zixi Broadcaster system.

➔ To connect the current Zixi Broadcaster to ZEN Master:

1. In **ZEN Master**, create a "manual scaling" Broadcaster Cluster and add a Broadcaster entity to it by following the procedure described in the **Adding a Broadcaster Cluster – Manual Scaling** section in the **ZEN Master User Guide**.
2. In ZEN Master, in the main navigation, click **Settings**.
3. In the **SSH Keys** tab, click **Download** on the relevant SSH Key to download the key to your machine.
4. Login to the **Zixi Broadcaster** UI (it could be a locally installed Zixi Broadcaster, e.g. `http://localhost:4444` or a remote Zixi Broadcaster).
The Zixi Broadcaster UI opens.
5. Go to **Settings > ZEN Master**.

The ZEN Master login fields are displayed:

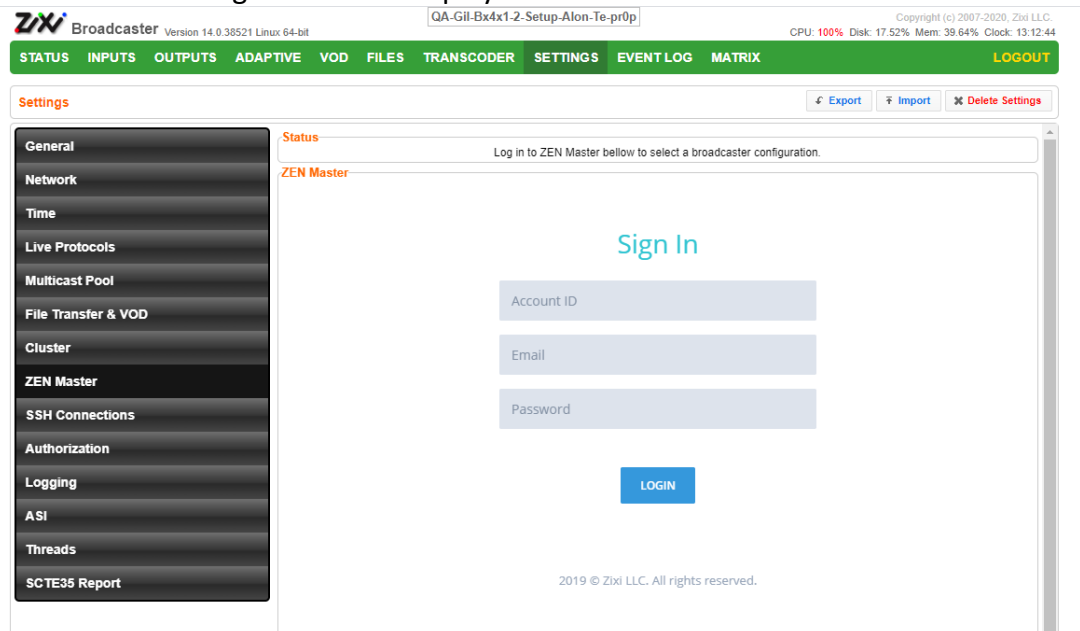

The screenshot shows the Zixi Broadcaster Settings page. The top navigation bar includes STATUS, INPUTS, OUTPUTS, ADAPTIVE, VOD, FILES, TRANSCODER, SETTINGS, EVENT LOG, MATRIX, and LOGOUT. The main content area is titled 'Settings' and contains a sidebar menu with options like General, Network, Time, Live Protocols, Multicast Pool, File Transfer & VOD, Cluster, ZEN Master, SSH Connections, Authorization, Logging, ASI, Threads, and SCTE35 Report. The 'ZEN Master' section is active, displaying a 'Sign In' form with fields for Account ID, Email, and Password, and a LOGIN button. The status bar at the top indicates 'QA-Gil-Bx4x1-2-Setup-Alon-Te-pr0p' and system metrics like CPU 100%, Disk 17.52%, Mem: 39.64%, and Clock: 13:12:44.

6. In the **Account ID** field, enter the customer domain of your ZEN Master account (e.g. if you login to ZEN at `demo.zen.zixi.com` then your Account ID is `'demo'`).

Server Settings

Zen Master



The user cannot be an SSO (Single Sign-On) user. If you are using an SSO account, you will have to create another user to sign in through this screen.

- In the **Email** field, enter the username for your ZEN Master account.
- In the **Password** field, enter the password from your ZEN Master account.
- Click **Login**.
A list of Broadcasters configured in ZEN Master is displayed.
- For the Broadcaster that you are adding, which should currently be in **Pending** mode, click **Select**.
Details about the Broadcaster are shown in the **Status**
- Click **Refresh**.
The connection is configured automatically.
- In **ZEN Master**, in the main navigation, click **Broadcasters**.
- Verify that the status of the newly configured Broadcaster cluster is **OK**.
- Verify that the status of each Broadcaster that was added to the cluster has changed from **Pending** to **OK**.


Status	Name	IP	SSH Key	Streams	CPU	RAM	Version	Actions
Ok	Demo	54.83.40.212	demo_ssh_key	59 7 36	13.41%	79.53%	1.13.1.36841	[Icons]

SSH Connections

SSH (Secure Shell) is a network protocol that allows a secure access over an encrypted connection. Reverse SSH is a technique that can be used to access systems (that are behind a firewall) from the outside world. As part of the SSH configuration, you can configure a connection to the server and then configure any number of SSH tunnels to the same server.

➔ To create an SSH connection to a server:


1. Click the **Add Connections** button.

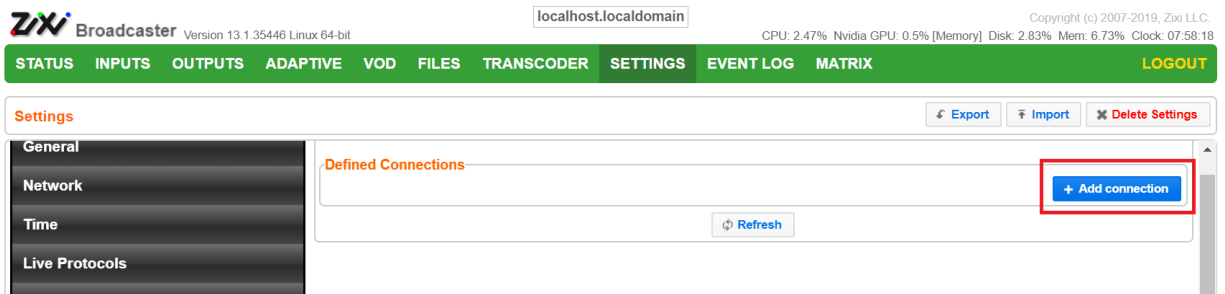

2. In the **Host** field, enter the IP address or host name of the host that you wish to access.
3. In the **Port** field, enter the port number to access the host.
4. Click **Apply**.
The connection to the specified server is configured.

➔ To create a reverse tunnel to the same server:

1. Under the destination that you have configured, click **Edit Credentials**.

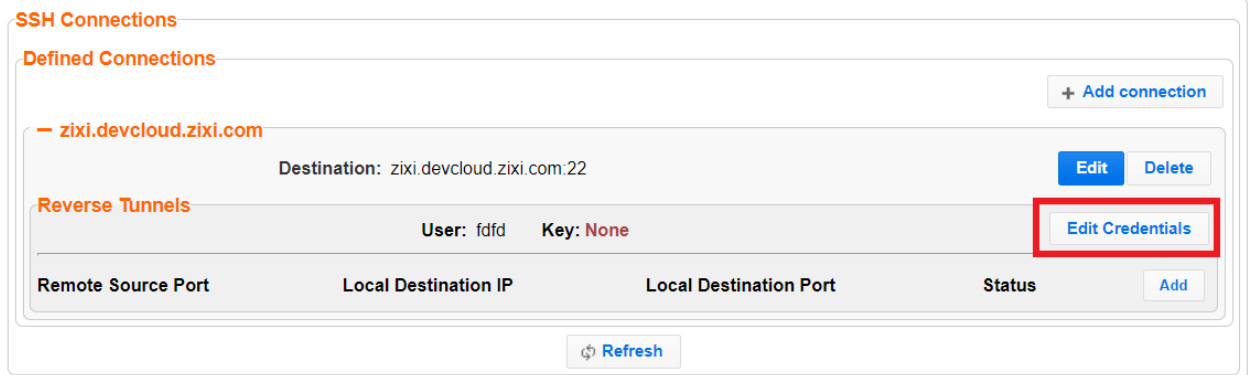

The **Connection Credentials** dialog appears.

2. In the **User** field, enter the user name to access the tunnel.
3. Click **Private Key**, navigate to the file location and select the file.
4. Click **Apply**.

Server Settings

SSH Connections

5. Click **Add** to add a reverse tunnel.


The screenshot displays the 'SSH Connections' interface. At the top, there is a section for 'Defined Connections' with a '+ Add connection' button. Below this, a connection for 'zixi.devcloud.zixi.com' is shown with 'Destination: zixi.devcloud.zixi.com:22' and 'Edit' and 'Delete' buttons. Underneath is the 'Reverse Tunnels' section, which includes 'User: fdfd' and 'Key: None' with an 'Edit Credentials' button. A table with columns 'Remote Source Port', 'Local Destination IP', 'Local Destination Port', and 'Status' is visible, with an 'Add' button highlighted in a red box at the bottom right of the table. A 'Refresh' button is located at the bottom center of the interface.

The **Tunnel details** dialog appears.

6. In the **Remote Source Port** field, enter the port number of the remote server.
7. In the **Local Destination IP** field, enter the IP address of the local server.
8. In the **Local Destination Port** field, enter the port number to connect the tunnel.
9. Click **OK**.
10. Repeat steps 5-9 to add additional tunnels.

Authorization

Authorization can be configured for any incoming or outgoing streams.

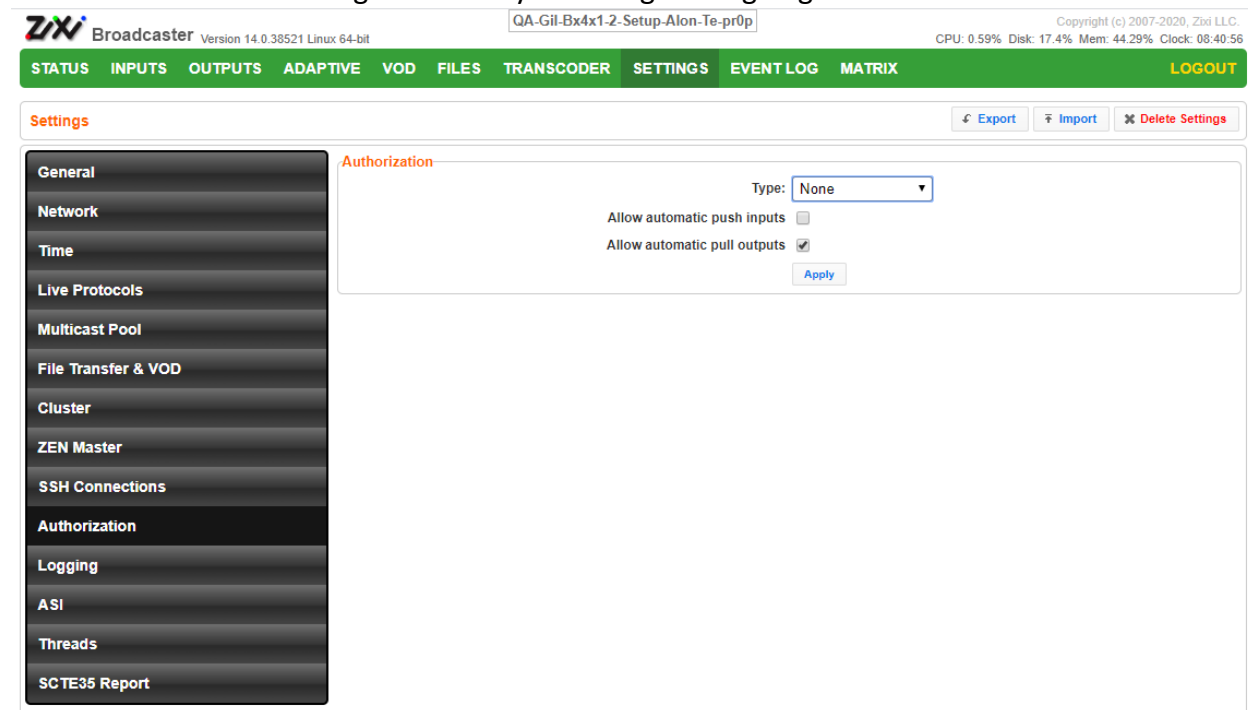

Field	Description
Authorization	

None (default) - authorization will be defined in the Input and Output streams. In this case you will need to define the password in the Input and the Output streams. Unless you select the Allow automatic push inputs and/or Allow automatic pull outputs checkboxes (as described below).

Text File – this option manages authorizations in a text file. This option is useful for large OTT operations, as it does not require configuration for every user. The text file contains pairs of stream name and password that are used for the input streams. For the outputs, it contains the stream name, user and password of the viewer.

Linux Users – uses the built-in authorization of the Linux operating system.

Global Password – a single password that will be used for all access requests.

Users Files -

HTTP Server – Zixi Broadcaster will generate an HTTP request to an external server on every connection.

Stream access – access authorization on the stream level. The password needs to be the same as the password to access the stream.

Windows Users – uses the built-in authorization of the Windows operating system.

Server Settings

Authorization

Other override authorization techniques are available. For more information contact Zixi support

Parameter Specify the password that you would like to use for access

If this checkbox is selected, the Zixi Broadcaster will automatically create an input stream each time it receives a push stream from a source.

Allow Automatic Push inputs However, if this checkbox is not selected, only predefined Push Input streams with the defined credentials will be allowed in (this is the default setting and the behavior in previous versions).

Default: not selected.

Allow Automatic pull outputs If this checkbox is selected, any Zixi Receiver that requests a Pull output will be granted access. In this case, a Pull output will be automatically created in the Zixi Broadcaster (this is the default setting and the behavior in previous versions).

However, if this checkbox is not selected, only predefined Pull output streams with the defined credentials will be pulled by the Zixi Receiver.


Default: selected.

Separate user folders Select this checkbox to enable access by user folders

Logging Select the checkbox to enable logging of the connections

Logging

The Logging screen defines the logs location and preferences for debugging purposes.

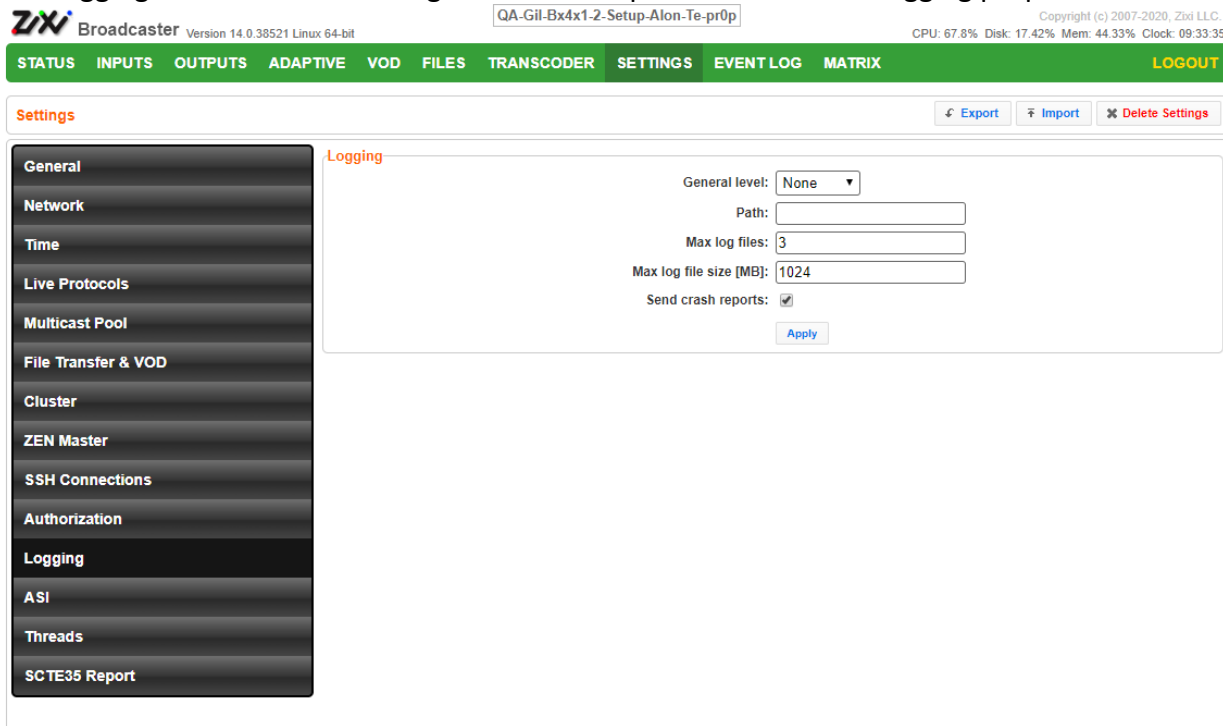

Field	Description
Logging	
General Level	The Severity Level that will be collected in the log, from Info, Warning, Error, to Fatal. Selection of lower severity levels will include all higher-level logs. Default: None, since Logging is resource-intensive and only enabled when necessary.
Path	The log file name and path where the collected event information will be stored.
Max log files	The maximal number of log files.
Max log file size (MB)	The maximal size of each log file.
Send crash reports	Select the checkbox to send a crash report to Zixi Support.

Server Settings

ASI

ASI

The ASI screen is used to configure the ASI interface when there is an ASI card in the machine. You can use this screen to reverse the direction of the ports on the ASI card. The port numbers should correspond to the port numbers on your ASI card.

ASI Settings

Available ports

#	Name	Data direction	
1	Port 1	Input	→ Reset to output
2	Port 2	Input	→ Reset to output
3	Port 3	Output	← Reset to input
4	Port 4	Output	← Reset to input

ASI output stuffing:

ASI output PLL:

ASI fix time:

Initial buffer time[ms]:

Read buffer size[B]:

[Apply](#)

Field	Description
ASI output stuffing	Select this checkbox to achieve CBR (constant bitrate) by padding the ASI stream with TS null packets.
ASI output PLL	Select this checkbox to enable a phase-locked loop. A phase-locked loop or phase lock loop (PLL) is a control system that generates an output signal whose phase is related to the phase of an input signal. When selecting this option, the system will adjust the bitrate that is sent according to the fullness rate of the output buffer.
ASI fix time	Select this checkbox to adjust input timestamps to local machine time.
Initial buffer time [ms]	To avoid underflows, specify the output buffer size that will be filled before starting the transmission.
Read buffer size [B]	Specify the input read buffer to fill, before passing data to the application. Larger buffer size should be specified for higher bitrates; Smaller buffer size will be more responsive and smoother in lower bitrate streams.

ASI

Reversing the directions of the ports

➔ To Reverse the Direction of the Ports:

1. From the **Settings** page of the Zixi Broadcaster, click **ASI** on the left-hand side.
The various **ASI settings** are displayed.
2. Click the desired **RESET** button to the right of the port that you want to reverse.
A confirmation window is displayed with the notification that the service must first be restarted before the direction is reversed.

Field	Description
Available ports	
Name	Displays the port number used by the ASI protocol.
Data Direction	Displays the direction of the data being transmitted by the ASI protocol.

Threads

The Threads screen enables the configuration of the maximal number of concurrent CPU threads allowed for each component/service. Enter -1 to limit the threads according to the number of cores.

The screenshot shows the Zix Broadcaster web interface. At the top, there is a navigation bar with the following menu items: STATUS, INPUTS, OUTPUTS, ADAPTIVE, VOD, FILES, TRANSCODER, SETTINGS (highlighted), EVENT LOG, MATRIX, and LOGOUT. The page title is "Settings" and there are buttons for "Export", "Import", and "Delete Settings". On the left, a sidebar menu lists various settings categories: General, Network, Time, SNMP, Live Protocols, Multicast Pool, File Transfer & VOD, Cluster, ZEN Master, SSH Connections, Authorization, Logging, ASI, Threads (highlighted), and SCTE35 Report. The main content area is titled "Threads settings" and contains the following configuration options:

Input:	<input type="text" value="-1"/>
Output:	<input type="text" value="-1"/>
VOD:	<input type="text" value="4"/>
Read:	<input type="text" value="1"/>
Pool:	<input type="text" value="2"/>
RTMP:	<input type="text" value="-1"/>
UDP In:	<input type="text" value="-1"/>
UDP Out:	<input type="text" value="-1"/>
HTTP In:	<input type="text" value="1"/>
Transcoder:	<input type="text" value="4"/>
Push Output Receive:	<input type="text" value="2"/>
HTTP:	<input type="text" value="-1"/>
Authorization:	<input type="text" value="1"/>
Analyzer:	<input type="text" value="2"/>

-1 means number of cores.

The following elements can be configured:

- Input
- Output
- VOD
- Read
- Pool
- RTMP
- UDP In
- UDP Out
- HTTP In
- Transcoder
- Push Output Receive
- HTTP
- Authorization
- Analyzer

Server Settings

SNMP (Linux Only)

SNMP (Linux Only)

The SNMP screen includes basic configuration parameters for the configuration of Simple Network Management Protocol, which enables monitoring and control of Zixi Broadcaster by a monitoring system. For further information on how to enable and configure SNMP on Zixi Broadcaster, see Configuring SNMP section.

Settings

Export Import Delete Settings

General
Network
Time
SNMP
Live Protocols
Multicast Pool
File Transfer & VOD
Cluster
SSH Connections
Authorization
Logging
ASI

Service: On

Read only community name:

Read-write community name:

SNMPv3 Users

User	Write access	
		+

Trap receivers

Host	Port	
10.7.0.23	162	+ ✎ ✕

Apply

Root MIB
Broadcaster MIB

Field	Description
Service	Click the button to Start/Stop the SNMP service.
Read-only Community Name	Used in SNMPv1 and SNMPv2, this parameter is used to specify the Community Name to enable read-only access to the Zixi Broadcaster monitored information. If the community string is correct, Zixi Broadcaster will respond with the requested information. If the community string is incorrect, Zixi Broadcaster will simply ignore the request and will not respond.
Read-write Community Name	Used in SNMPv1 and SNMPv2, this parameter is used to specify the Community Name to enable read-write access to Zixi Broadcaster. Read-write objects include, for example, zbiActive, which indicates and/or sets the Active state of an Input stream.
SNMP V3 Users	<p>For SNMPv3 monitoring systems, click the + button to add authentication credentials and fill-in the following fields:</p> <ul style="list-style-type: none">• User name - enter the SNMP user name• Write access - select the checkbox to allow Read-Write access rights. If the checkbox is not selected, the user will have Read-only access rights.

Server Settings

SNMP (Linux Only)

- Password - enter the SNMP user's password.
-
-

Specify SNMP Trap receivers that will listen to the SNMP Traps that will be sent by Zixi Broadcaster. Click the + button to add authentication credentials of the Trap Receiver, by filling-in the following fields:

- Trap Receivers**
- Community - Specify the community name for access.
 - Host - Specify the IP address to which the Trap messages will be transmitted.
 - Port - Specify the Port number to which the Trap messages will be sent transmitted.
-
-

Viewing Events Log

The Event Log screen displays all the events (errors, connections, configuration changes, analysis events etc.) that occurred in the Zixi broadcaster. The logs are displayed in the server time (not local time) and can be exported as a .cvs file.

In Linux, the event log is written to a file located in the following location on the disk:
`/log/var/messages`

➔ To Clear the Log:

In the **Event Log** screen, click **Clear** on the upper right-hand corner. The events on the log screen are deleted.

➔ To Save the Log as a File:

In the **Event Log** screen, click **Save** on the upper right-hand corner. A .cvs file is created and saved to the local destination.

➔ To Refresh the Screen:

In the **Event Log** screen, click **Refresh** on the upper right-hand corner. The data on the screen is updated.

Using the Matrix

The Zixi Matrix view provides a visual-based alternative to managing the streams, by previewing the input and output streams with their current status. Matrix offers drag and drop capabilities to connect input streams to outputs as well as some of the actions that were covered in the Performing Actions on Input Streams and Performing Actions on Output Streams sections above.

Connecting Input to Output

An easier method of connecting inputs to outputs.

➔ To Connect an Input to an Output:

Drag the desired input thumbnail and drop it over a specific output thumbnail. The desired input is connected to the selected output.

Disconnecting Output from Input

➔ Disconnect an Input to an Output:

1. Click on the **To connected stream** that you want to disconnect.
The **Input stream data** window is displayed.
2. Click **Unlink**.
A confirmation window is displayed.
3. Click **Confirm**.
The Output is disconnected from the Input.

Matrix Interface Elements

The Matrix view displays preview thumbnails of the Input and Output streams. Preview thumbnails of input streams are presented in the Inputs pane and preview thumbnails of output streams are presented in the Outputs pane.

- If the stream is active - the live video will be shown in the preview thumbnail.
- If an input stream is not active – the preview thumbnail will include an “Offline” message.
- If an output stream has been created, but has not been connected to an input – the preview thumbnail will include the following message - “Drag Input Here”.
- If a connected output stream does not receive a live stream - the preview thumbnail will include a “No Video” message.



Changing Matrix View

You can modify the size of the panes, the size of the preview thumbnails, and re-arrange the order the preview thumbnails.

➔ To modify the size of the panes:

Click on one of the rounded **pane size anchors** (see screenshot above)

➔ To modify the size of the preview thumbnails:


Click on one of the sizes in the **preview size controller** (see screenshot above).

➔ To re-arrange the order the preview thumbnails:

Drag and drop the preview thumbnail to the desired position within the pane.

Searching for Specific Streams

➔ To Search for a Specific Stream:

Type in the specific stream name in the appropriate (Input or Output) search text box on the top of the console and click .

The relevant stream will be the only one to be displayed in the pane.

Preview Thumbnail Elements

The following stream formats are supported for thumbnail preview:

- Scan Style: Interlaced and Progressive
- Codec: MPEG2, H.264/AVC
- Frame Size: SD, HD (720p), Full HD (1080p), 4K (2160p)
- Frame Rate: 24fps, 25fps, 29.97fps, 30fps, 59.94fps, 60fps
- Chroma Subsampling: 4:2:0
- Bit Depth: 8-bit (MPEG2, H.264/AVC), 10-bit (H.264/AVC)

Using the Matrix

Viewing Stream Details

The preview thumbnail includes the following elements:



Element	Description	Action
Status Indicator	Displays the unique identifier for this group.	
Stream ID	Displays the unique name for the stream.	
Bitrate [kbps]	Displays the bitrate of the active stream.	
Uptime	Displays the amount of time the stream has been active.	
Record	Stream recording	Click the record button to start recording. Click again to stop recording
Zoom	Opens the stream in a larger preview window with sound	Click the Zoom icon to open the larger preview screen.

Viewing Stream Details


➔ To View Stream Details:

Click anywhere on the preview thumbnail.

The Stream Details window opens:

Using the Matrix

Viewing Stream Details

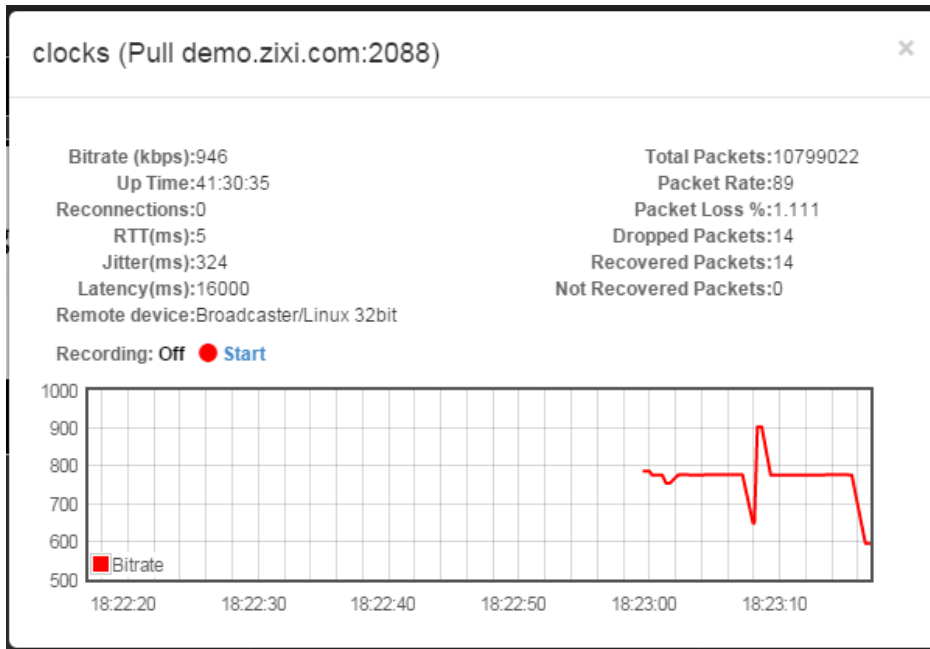

Configuring SNMP

Zixi Broadcaster enables monitoring and control via SNMP (on Linux only). The monitoring system can receive SNMP Trap messages from Zixi Broadcaster as well as access monitored objects with read-only and read-write access privileges (objects and their access permissions are defined in the MIB). Zixi Broadcaster supports SNMPv1, SNMPv2, and SNMPv3. Before using SNMP you need to ensure that SNMP is enabled in your Zixi Broadcaster license, run a script, as described below, and configure the SNMP settings in the Settings > SNMP screen.



The SNMP feature is not enabled by default. If you do not see this screen, please contact Zixi Support.

Activating SNMP

➔ To Activate SNMP:

Run the script file `./install_snmp.sh`, located in the Broadcaster folder, where Zixi Broadcaster was installed. The events on the log screen are deleted.



Note: Running the script may cause Zixi Broadcaster to restart.

Configuring SNMP Settings

➔ To configure SNMP:

1. In Zixi Broadcaster UI, go to **Settings > SNMP**.

Settings

Export Import Delete Settings

General

Network

Time

SNMP

Live Protocols

Multicast Pool

File Transfer & VOD

Cluster

SSH Connections

Authorization

Logging

ASI

Service: On

Read only community name:

Read-write community name:

SNMPv3 Users

User	Write access

Trap receivers

Host	Port
10.7.0.23	162

Apply


Root MIB
Broadcaster MIB

Configuring SNMP

Configuring SNMP Settings

2. In the **Service** field, click the button to activate the service.
3. Do one of the following:
 - For SNMPv1 or SNMPv2, fill in the read-only and/or read-write community name in the **Read only community name**, and **Read-write community name** fields.
 - For **SNMPv3**, under the SNMPv3 Users section, click the + button.

The following screen appears:

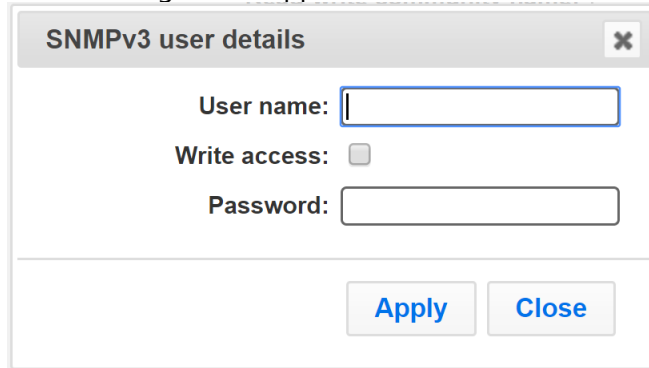


The dialog box titled "SNMPv3 user details" contains the following fields and controls:

- User name:** A text input field.
- Write access:** A checkbox.
- Password:** A text input field.
- Buttons:** "Apply" and "Close" buttons.

- In the **User Name** field, enter the SNMP user name.
 - In the **Write Access** field, select the checkbox to allow **Read-Write** access rights. If the checkbox is not selected, the user will have **Read-only** access rights.
 - In the **Password** field, enter the SNMP user's password.
4. Under the **Trap Receivers** section, specify SNMP Trap receivers that will listen to the SNMP Traps that will be sent by Zixi Broadcaster, by clicking the + button to add a trap receiver.

The following screen appears:

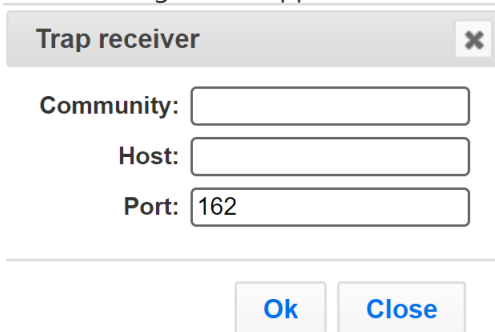

The dialog box titled "Trap receiver" contains the following fields and controls:

- Community:** A text input field.
- Host:** A text input field.
- Port:** A text input field with the value "162" pre-filled.
- Buttons:** "Ok" and "Close" buttons.

5. In the **Community** field, specify the community name for access.
6. In the **Host** field, specify the IP address to which the Trap messages will be transmitted.
7. In the **Port** field, specify the Port number to which the Trap messages will be sent transmitted.
8. Click **Apply**.

Viewing MIB Information

You can view the "Root MIB" (which defines the Zixi Broadcaster tree root definitions) and the "Broadcaster MIB" (which describes the Zixi Broadcaster MIB tree definition, including all its objects).

➔ To view MIB information:


1. In Zixi Broadcaster UI, go to **Settings > SNMP**.
2. At the upper right-hand corner click the **Root MIB** and/or **Broadcaster MIB** links.

The screenshot displays the Zixi Broadcaster Settings interface. On the left is a dark sidebar with menu items: General, Network, Time, **SNMP**, Live Protocols, Multicast Pool, File Transfer & VOD, Cluster, SSH Connections, Authorization, Logging, and ASI. The main area is titled 'Settings' and contains several sections: 'Service' (On), 'Read only community name' (masked with dots), 'Read-write community name' (masked with dots), 'SNMPv3 Users' (with a '+' button), and 'Trap receivers' (with a table containing one entry: Host 10.7.0.23, Port 162, and an 'Apply' button). In the top right corner, a red box highlights the links 'Root MIB' and 'Broadcaster MIB'.

Configuring Hitless Failover

Zixi features hitless failover for inputs, enabling uninterrupted streaming when switching from one source to another. The hitless failover feature is based on the SMPTE 2022-7 standard, which specifies “seamless” or hitless failover between binary-identical streams with synchronized RTP headers. Zixi's patent-pending hitless failover technology works by comparing the transport stream payload, without relying on sequences being synchronized. Zixi then applies a proprietary sequencing algorithm to identify missing parts and fill-in missing packets.

The Hitless Failover feature is supported in the inputs of Zixi Feeder, Broadcaster, and Receiver.

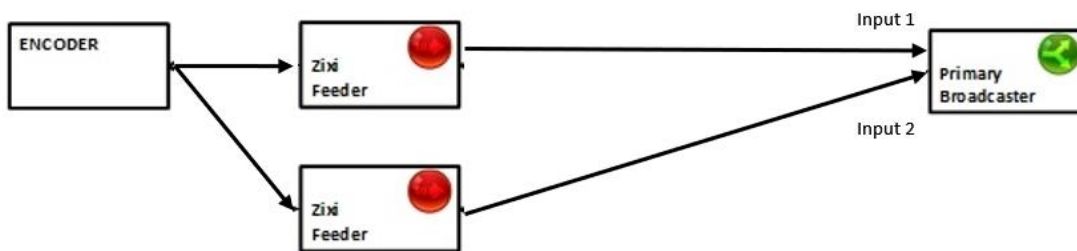

The hitless failover configuration involves grouping two inputs in a "Failover Group". If the two inputs are identical (i.e. two or more binary-identical streams with synchronized RTP headers), when one of them is disrupted or interrupted completely, Zixi Broadcaster will seamlessly use the packets of the other input without any disruptions.



If the streams are not identical, the failover process will not be seamless and may take up to a second.

A Failover Group can comprise two or more inputs. In a group of three or more, you can define one or more streams as a "Backup". In this case the system will always try to recover packets from "Primary" streams first and only if there are no available primary streams, it will use the backup streams. When one of the primary streams becomes available, the system will automatically jump to the primary stream.

While the Broadcaster GUI only enables configuration of primary streams at a single priority level, through the Zixi Broadcaster API it is possible to assign different priorities as follows:

- Priority 0 – means backup. It will be used only if all other streams are unavailable.
- Priority greater than 0 - means primary.

The Failover Group has its own Stream ID, just like an Input Stream, and will appear in the Inputs list. Although the topology above shows only one Zixi Broadcaster, it is also possible to have multiple targets (e.g. two or more Zixi Broadcasters), each with its own Failover Group of inputs to enable a more complete system-level redundancy.

To configure a Failover Group, follow the instructions in the [Creating a Failover Group](#) section.

Configuring HTTPS

Zixi Broadcaster supports HTTPS encryption based on OpenSSL. Zixi Broadcaster expects certificate files in X.509 textual format (sometimes called 'pem') with a full chain of certificates, each one starts with "-----BEGIN CERTIFICATE-----", and the associated private key file, that starts with "-----BEGIN PRIVATE KEY-----". The certificate can be provided by an SSL/TLS certificate provider (Certification Authority) where the domain is registered, such as VeriSign, Digicert, etc.. Alternatively, the certificate can be self-signed. A self-signed certificate is a certificate that is signed with its own private key. Self-signed certificates can be used to encrypt data just as well as CA-signed certificates, but your users will be displayed a warning that says that the certificate is not trusted by their computer or browser. Therefore, self-signed certificates should only be used if you do not need to prove your service's identity to its users (e.g. non-production or non-public servers).

Obtaining a CA-signed Certificate

Reach out to the hosting provider for instructions on how to obtain a CA-signed HTTPS certificate. As part of this process, you will be required to generate a certificate signing request (CSR). A CSR consists mainly of the public key of a key pair, and some additional information. Both of these components are inserted into the certificate when it is signed. To learn more about generating a CSR, go to - <https://www.digitalocean.com/community/tutorials/openssl-essentials-working-with-ssl-certificates-private-keys-and-csrs>.

Creating a Self-signed Certificate

Instead of obtaining a CA-signed certificate, you can create a self-signed certificate.

You can generate self-signed x.509 certs with OpenSSL by using the following command:

```
openssl req -x509 -newkey rsa:2048 -keyout selfsigned_key.pem -out selfsigned_cert.pem
```

To learn more about generating a self-signed certificate, go to:

<https://www.digitalocean.com/community/tutorials/openssl-essentials-working-with-ssl-certificates-private-keys-and-csrs>.

Uploading the Certificate and Private Key

After obtaining a CA-signed certificate or creating a self-signed one, you will need to upload the certificate and private key to Zixi Broadcaster.

Configuring HTTPS

Uploading the Certificate and Private Key

➔ **To upload the certificate and private key:**

1. In **Zixi Broadcaster UI**, go to **Settings > General**.
2. Click + to expand the HTTPS and DTLS Streaming Certificate section
3. In the **Certificate Uploaded** field, click **Upload** and select the certificate file.
4. In the **Private Key Uploaded** field, click **Upload** and select the Private Key.
5. In the **Private Key Passphrase** field, type the passphrase or leave empty (Default passphrase is empty, ignore the '****').
6. Click **Apply**.
If the process was successful, the **SSL setup status** field will turn to "OK".

Configuring NDI Streams

Network Device Interface (NDI) is a royalty-free software standard developed by NewTek to enable video-compatible products to communicate, deliver, and receive broadcast-quality video in a high-quality, low-latency manner that is frame-accurate and suitable for switching in a live production environment.

NDI was designed to deliver 1080i HD video at VBR data rates typically around 100 Mbit/s. Zixi Broadcaster uses an NDI library to read uncompressed frames from the NDI stream and pushes them to the Zixi Broadcaster's transcoder. The transcoder can then transcode the uncompressed stream into a transport stream using one of the available codecs, such as H.264 or H.265 video and AAC or Opus audio.

Zixi Broadcaster supports the following flows for NDI:

- **NDI Input** – the NDI source stream, which is uncompressed, is transcoded via the Zixi Broadcaster transcoder into any one of the available codecs. The transcoded stream will be available as an Input Stream when creating an Output in Zixi Broadcaster.
- **NDI Output** – Zixi Broadcaster can transcode a TS stream into an NDI output using Raw video and audio profiles. The NDI output is configured in the transcoding profile itself, so there is no need to create an NDI Output. When the input stream is transcoded, it becomes available to be pulled by NDI enabled devices.

NDI Stream Discovery

By Default, NDI uses the mDNS (Bonjour / Zeroconf) discovery mechanism to advertise sources on a local area network, such that the NDI receiving device, which in this case is Zixi Broadcaster, can automatically discover and offer those sources. This means that there are different requirements depending on the type deployment:

- **Using NDI within a local area network** – on a local area network NDI will use the discovery mechanism to advertise the sources and Zixi Broadcaster will automatically discover these streams, while listing them in the **Stream** parameter of the NDI input stream.
- **Using NDI in the cloud** – to make the streams discoverable in the cloud, you need to deploy an NDI Discovery Server and configure the NDI plug-in with the settings included in the following example:

```
{
  "ndi": {
    "groups": {
      "recv": "\"public\"",
      "send": "\"public\""
    },
    "multicast": {
```

Configuring NDI Streams

Configuring Transcoding Profiles for NDI Sources

```
    "recv": {
      "enable": false,
      "subnets": ""
    },
    "send": {
      "enable": false,
      "netmask": "255.255.255.0",
      "netprefix": "239.192.136.100"
    }
  },
  "networks": {
    "discovery": "22.127.94.57",
    "ips": ""
  },
  "tcp": {
    "recv": {
      "enable": false
    },
    "send": {
      "enable": false
    }
  },
  "unicast": {
    "recv": {
      "enable": false
    },
    "send": {
      "enable": false
    }
  }
}
```

Configuring Transcoding Profiles for NDI Sources

Before creating the NDI Input in Zixi Broadcaster, you must configure at least one transcoding profile that meets the following requirements:

- **Disable Copy GOP from source** - NDI sources can be transcoded using any of the available transcoding profiles, however it is **NOT possible** to enable the **Copy GOP from source** feature. Since all frames in the original NDI source are uncompressed, Zixi cannot know which frames were i-frames in the stream, so the GOP length should be configured in the **GOP [frames]** parameter of the transcoding profile.

Configuring NDI Streams

Adding an NDI Input to Zixi Broadcaster

- **No Keep Original** - when configuring the stream, it is possible to remove the video or audio from the stream, however it is **NOT possible** to keep the original video or audio, as they are originally uncompressed.
- **No RAW Video/Audio** - transcoding profiles with **RAW Video** and/or **RAW Audio** will be filtered out and will not appear in the **Video profile/Audio Profile** fields on the NDI Input screen.

For detailed instructions on how to configure transcoding profiles, see [Transcoder](#) section.

Adding an NDI Input to Zixi Broadcaster

The NSI is pulled into Zixi Broadcaster using the auto-discovery mechanism described in the [<add ref>](#) section.

➔ To Add an NDI Stream:

1. In the Zixi Broadcaster Navigation menu, click the **Inputs** tab.
2. In the Menu bar, click **New Input**. The **Add a new input stream** window is displayed.
3. Select **NDI** for the input stream.

The screenshot shows the 'Add new input stream' dialog box. It has a title bar with a close button. Below the title bar, there are input fields for 'Stream ID', 'Max Outputs' (set to 'Unlimited'), and a checked 'Show in Matrix' checkbox. A horizontal row of radio buttons allows selecting the input type: Push, Pull, UDP, Delayed, File, RTMP, RTSP, HLS, TS over HTTP, SRT, SRT Client, RIST, and NDI (selected). The 'Stream parameters' section contains a 'Stream' dropdown menu (set to 'KOBYS-IPHONE'), two 'Remove stream' buttons, and input fields for 'Audio Reference Level [dB]' (0), 'Transport stream bitrate [kbps]', 'Use Intel hardware acceleration (if available)' (unchecked), and 'Smoothing buffer [ms]' (0). Below this are four checkboxes: 'Enable time shift', 'Transmit as multicast', 'Enable encryption', and 'Recording parameters'. At the bottom right, there are 'Ok' and 'Cancel' buttons.

4. Select the maximum concurrent connections to this stream from the **Max. Outputs** drop-down list. Default: Unlimited.
5. Select the **Show in Matrix** check box to display this stream in the Matrix (see [Using the Matrix](#)). Default: Selected.
6. Specify the **Stream Parameters** (see Input Stream Parameter table).
7. If you want to **Enable time shift**, select this checkbox (see Input Stream Parameter table). The stream will be recorded and broadcasted after the specified delay. The time

Configuring NDI Streams

Adding an NDI Input to Zixi Broadcaster

shift feature is typically used to broadcast a live event across time zones (due to the time differences between locations).




8. If you want to **Transmit as multicast**, select this checkbox (see Input Stream Parameter table).
9. If you want to configure the **Recording Parameters**, specify them in the respective fields (see Input Stream Parameter table).
10. If you want to **Enable encryption**, select this checkbox (see Input Stream Parameters Table). For more information, see [Encrypting an Input Stream in Zixi Broadcaster](#).
11. Click **OK**. The “Input added” message appears on the top of the screen. The NDI Stream is added to the Zixi Broadcaster and now appears in the list of streams available in Zixi Broadcaster Inputs screen.

Input Stream Parameters table

Parameter	Description
Stream Parameters	
Stream	Select one of the NDI streams available based on your configuration from the drop-down menu. On a local area network NDI will use the discovery mechanism to advertise the sources and Zixi Broadcaster will automatically discover these streams. To make the streams discoverable in the cloud, you need to deploy an NDI Discovery Server and configure the NDI plug-in with the settings mentioned above.
Video Profile	Select an existing transcoding video profile, or select Remove stream if you want to remove the video track.
Audio Profile	Select an existing transcoding audio profile, or select Remove stream if you want to remove the audio track.
Audio Reference Level [dB]	This parameter attenuates the audio level by the specified level in dB. This setting is used to prevent audio clipping.
Transport Stream Bitrate [kbps]	Specify the bitrate of the transport stream. This parameter is optional. If you do not specify a TS Bitrate, the stream will be VBR. If you specify a bitrate, the stream will be CBR. The bitrate value must be compatible with the selected profile.
Use intel hardware acceleration (if available)	Select this checkbox to use the Intel hardware acceleration component if it available.

Configuring NDI Streams

Adding an NDI Input to Zixi Broadcaster

Smoothing buffer	<p>The Smoothing feature uses a buffer to time packets according to the stream's clock. This is useful when there are bursts in the rate in which the stream arrives. The smoothing features creates a queue in the buffer, allowing smoother entry into the Broadcaster. The Smoothing parameter defines the size of the buffer in Milliseconds. A larger the buffer enables smoother entry. However, it may influence the latency rate.</p>
Enable time shift	<p>Select this checkbox to record the stream content and broadcast it after a specified delay. To deploy an input stream that uses the current stream's time shift, you need to configure a "Delayed" input stream. (See Adding Delayed Streams).</p>
Maximum delay [hh:mm:ss] (for Time Shift enabled)	<p>Specify the time of a delayed transmission of this stream. Maximum: 24 hours</p>
Transmit as multicast	<p>Select this checkbox to enable the transmission of this stream's outputs as multicast. A Zixi Broadcaster that will pull the stream will receive it in multicast. By default Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings.</p> <div style="border: 1px dashed gray; padding: 5px; margin-top: 10px;"> This setting can be modified without interrupting an existing stream.</div>
Multicast-Only (for multicast enabled)	<p>If desired, specify multicast-only outputs.</p>
Decrypt stream	<p>Select this checkbox to decrypt the Input stream. Please note that the stream will not be encrypted as it passes through the Zixi path. For more information, see Decrypting an Input Stream in Zixi Broadcaster.</p>
Decryption type (for Decrypt stream enabled)	<p>Specify the type of encryption that is being used in the stream.</p> <div style="border: 1px dashed gray; padding: 5px; margin-top: 10px;"> This setting can be modified without interrupting an existing stream.</div>
Decryption key (for Decrypt stream enabled)	<p>Specify the key for decryption.</p> <div style="border: 1px dashed gray; padding: 5px; margin-top: 10px;"> This setting can be modified without interrupting an existing stream.</div>

Configuring NDI Streams

Adding an NDI Input to Zixi Broadcaster

Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .
Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for Encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
File Name Template	
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours

Configuring NDI Streams

Adding an NDI Input to Zixi Broadcaster


Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.
Record to S3 Parameters	
File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

Creating an NDI Output


Zixi Broadcaster can transcode a TS stream Input into an NDI output using Raw video and audio profiles. The NDI output is configured in the transcoding profile itself, so there is no need to create an NDI Output from the Zixi Broadcaster Outputs screen. The Raw video profile can be configured to modify the stream's resolution (i.e. upscale/downscale) and frame rates per second. When the input stream is transcoded, it becomes available to be pulled by NDI enabled devices.

➔ To Create an NDI Output:

1. Create a Raw video transcoding profile and a Raw audio transcoding profile. For instructions, see [Creating New Profiles](#) section.
2. Create an input stream by following the instructions in the Adding Input Streams section.

Click  button on the right end of the input stream row and then **Transcode**. The **Transcode <input stream name>** window with the settings of the selected input stream is displayed.

3. Enter the unique **Stream ID.**, which will correspond to the new transcoded input that will be added.
4. Under **Stream Parameters**, in the **Output Type** field, select **NDI**.

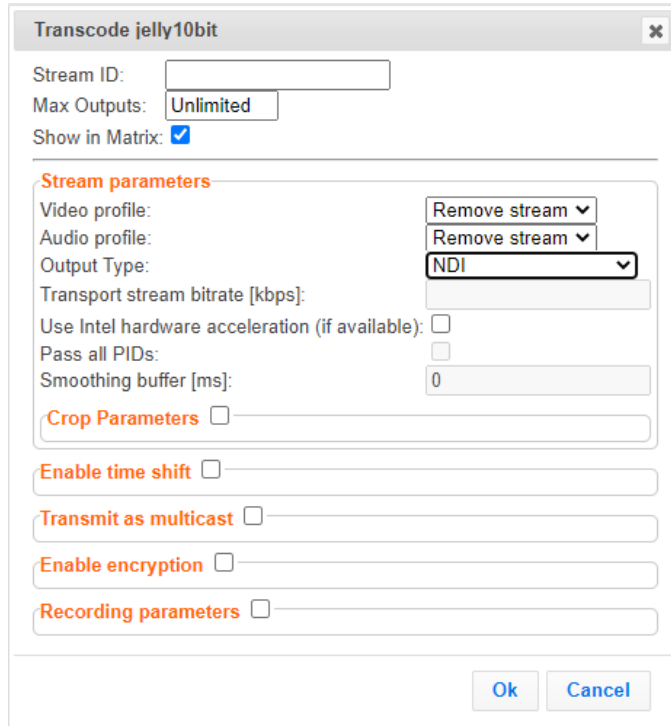

5. Under Stream Parameters, in the **Video profile** and **Audio profile** fields, do one of the following:
 - Select the Raw Video profile and Raw Audio Profile that you have configured.

Configuring NDI Streams

Creating an NDI Output

- Select **Remove stream** – you can use the transcoder to remove the video or audio track from the stream.
6. Fill in additional fields (see table below for additional parameters).
 7. Click **OK**. The transcoded input stream is created and appears in an embedded window labeled Transcoded sources under the original input stream from which it was created.

Parameter	Description
Video Profile	Select an existing Raw Video profile, or select Remove stream if you want to remove the video track.
Audio Profile	Select an existing Raw Audio profile, or select Remove stream if you want to remove the audio track.
Use Intel Hardware Acceleration (if available)	Select this checkbox to use hardware acceleration component if it has been installed. When using an Nvidia profile, this setting will be disabled.
Crop Parameters	Select this checkbox to set the cropping parameters.
Cropping Mode	Set the units used for defining the crop. Options are: <i>Pixels</i> or <i>Percentages</i> . Note: Depending on the type of content, in some cases using different crop values for low resolution outputs might be appropriate. For example, if the content includes both video content and textual content, the text would not be readable at lower resolutions and thus might be better to exclude. Another use case for using different crop values for each output would be to slice a 360 or VR input video.
Left, Top	Specify the left and top positions for the crop.
Width x Height	Specify the width and height values for the crop.
Enable time shift	
Maximum delay [hh:mm:ss]	Specify the time of the delayed transmission of this stream. Maximum: 24 hours.
Transmit as multicast	Selecting this checkbox enables the transmission of this stream's outputs as multicast. A Zixi receiver that will pull the stream will receive it in multicast. By default, Zixi Broadcaster is configured to allow transparent fallback to unicast if it is out of the LAN. Requires enabling Multicast Pull in the Settings. This setting requires enabling Multicast Pool (Settings > Multicast Pool).
Multicast Only	Selecting this checkbox will force the transmission of this stream only in multicast.
Enable Encryption	Select this checkbox to encrypt the Input stream. For more information, see Encrypting an Input Stream in Zixi Broadcaster .

Configuring NDI Streams

Creating an NDI Output

Encryption type (for Encryption enabled)	Specify the type of Encryption (AES 128/192/256).
Encryption key (for encryption enabled)	Click Generate to generate an encryption key. The generated encryption key must be sent to the end-user to decipher the received encoded stream.
Recording parameters	Select this checkbox to customize the recording parameters.
Destination Type	Select the radio button for the desired storage type and then fill in the relevant parameters. <ul style="list-style-type: none">• Record to disk – the recording is saved on the local disk.• Record to S3 – the file is saved to your AWS S3 Bucket.
Record to Disk Parameters	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
File Name Template	
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
Keep recorded files for [hours]	Specify the maximum time for storing the recording. Default: 0 hours
Custom Path	Optionally specify a storage location for the recorded files that is relative to the root folder. This location bypasses the location specified as the root folder in the Settings > General screen.

Record to S3 Parameters

File Name Template	<p>Specify the file name pattern that Zixi will use to generate when saving the recorded content. A separate file will be generated for each recording up to the time specified in the Max recorded file duration parameter (see above). After this duration a new file will be generated.</p> <p>The file name pattern can include any string and up to five variables listed below. Only the %T=HH.MM.SS creation time is mandatory. You can change the order of these variables and add text as long as you maintain the legitimate structure of the file in Linux and Windows:</p> <ul style="list-style-type: none">• %S=stream id - optional.• %Y=year - optional• %M=month - optional• %D=day - optional• %T=HH.MM.SS creation time - mandatory <p>For example, the following pattern %Y_recording%T.ts will generate the following file name 2017_recording15:32:35.ts.</p>
Max recorded file duration [hours]	Specify the maximum time allotted for recording a video stream. Default: 2 hours
URL	Specify the URL of the S3 bucket.
Ignore TLS certificate errors	TLS certificate for S3 bucket might be detected as faulty if bucket name contains dot[s]. When this option is selected, Zixi Broadcaster will ignore the TLS certificate errors and transmit the stream to its destination.
Access Key	The access key that is used for accessing the S3 bucket.
Secret Key	The secret key that is used for accessing the S3 bucket.

- License for OpenSSL

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit

(<http://www.openssl.org/>)

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim

Hudson (tjh@cryptsoft.com).

Copyright (c) 1998-2017 The OpenSSL Project. All rights reserved.

- License for Libssh2

Copyright (c) 2004-2007 Sara Golemon <sarag@libssh2.org>

Copyright (c) 2005,2006 Mikhail Gusarov <dottedmag@dottedmag.net>

Copyright (c) 2006-2007 The Written Word, Inc.

Copyright (c) 2007 Eli Fant <elifantu@mail.ru>

Copyright (c) 2009-2014 Daniel Stenberg

Copyright (c) 2008, 2009 Simon Josefsson

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the copyright holder nor the names of any other contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- License for DekTec's Linux SDK. Version 1, August 2012

Copyright (C) 2000-2015 DekTec Digital Video B.V.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary format must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation.

THIS SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL DEKTEC DIGITAL VIDEO BV, ITS AGENTS OR ITS EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR OTHER DAMAGES (INCLUDING DAMAGES FOR THE LOSS OF USE, INFORMATION, GOODWILL, PROFIT, WORK STOPPAGE, DATA, BUSINESS OR REVENUE) UNDER ANY CIRCUMSTANCES, OR UNDER ANY LEGAL THEORY, WHETHER IN CONTRACT, IN TORT, IN NEGLIGENCE, OR OTHERWISE, ARISING FROM THE USE OF, OR INABILITY TO USE THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.